





Bottom View Model 828

## PARTS LIST — MODEL 828

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —37922	Dial Light—6-8 Volt	48	—23785	Resistor, 500,000 Ohm $\frac{1}{4}$ W.
2	W —37922	Dial Light—6-8 Volt	49	—27121	Resistor, 5,000 Ohm $\frac{1}{4}$ W.
	G16 —45398	Socket and Brkt. Assy., Dial Light	50	—21875	Resistor, 100,000 Ohm $\frac{1}{4}$ W.
3	G170 —32000	Antenna Coil—H-F.	51	—21875	Resistor, 100,000 Ohm $\frac{1}{4}$ W.
4	G168 —32000	Antenna Coil—Pol.	52	—23785	Resistor, 500,000 Ohm $\frac{1}{4}$ W.
5	G169 —32000	Antenna Coil—B-C.	53	—23785	Resistor, 500,000 Ohm $\frac{1}{4}$ W.
6	G170 —32002	Oscillator Coil—H-F.	54	W —22873	Resistor, 220 Ohm $2\frac{1}{2}$ W.
7	G168 —32002	Oscillator Coil—Pol.	55	G103 —28807	Socket—(5 Prong Spkr.)
8	G169 —32002	Oscillator Coil—B-C.		W —43552	Spkr. Plug Clamp
9	G175 —32004	1st I-F. Assy., 455 Kc.	56	583-CP-18"K"	Speaker, Spec. No.
10	G176 —32004	2nd I-F. Assy., 455 Kc.			V. C. and Cone Assy.
11	W —45713	3 Section Trimmer (Osc. Shunt)			Field Coil—(525 Ohm)
12	W —35951A	3 Section Trimmer (Ant. Shunt)			Output Transformer
13	W —35936	Condenser, .05 Mf. 200 V.			Cardboard Ring
14	G20 —34000	Condenser, .004910 Mf. Mica		583-CP-18"H"	Speaker, Spec. No. S-4893N3
15	G23 —34000	Condenser, .001560 Mf. Mica		—46786	V. C. and Cone Assy.
16	—40769	B-C. Osc. Series Trimmer		—46787	Field Coil (525 Ohm)
17	G13 —34002	Condenser, .000035 Mf. Molded		—46788	Output Transformer
18	G59 —33001	2 Section Gang Condenser		—46789	Cardboard Ring
19	W —23615	Condenser, .05 Mf. 400 V.		583-CP-18"Z"	Speaker, Spec. No. E10K326
20	W —35139	Condenser, .004 Mf. 400 V.		—46758	V. C. and Cone Assy.
21	W —28621	Condenser, .02 Mf. 200 V.		—46759	Field Coil (525 Ohm)
22	W —30805	Condenser, .01 Mf. 400 V.		—46760	Output Transformer
23	G2 —34002	Condenser, .0001 Mf. Molded		—46761	Cardboard Ring
24	G2 —34002	Condenser, .0001 Mf. Molded		—46762	Band Selector Switch
25	W —41461	Condenser, .0014 Mf. 200 V.	57	B —46276	8 Prong Socket
26	W —28621	Condenser, .02 Mf. 200 V.	58 to 65	G178 —36400	Power Transformer, 60 Cy.—110 V.
27	W —36057B	Condenser, 40 Mf. 300 V.	66	—46318	Power Transformer, 50 Cy.—110 V.
28	W —44054	Condenser, 30 Mf. 350 V.		—46307	Power Transformer, 50 Cy.—220 V.
29	W —23615	Condenser, .05 Mf. 400 V.		—46308	Power Transformer, 25 Cy.—110 V.
30	W —23615	Condenser, .05 Mf. 400 V.		—46309	Power Transformer, 25 Cy.—220 V.
31	W —35139	Condenser, .004 Mf. 400 V.		—46310	Power Transformer, 40-100 Cy.—95-267 V.
32	W —23615	Condenser, .05 Mf. 400 V.	67	MG41 —46287	Wave Trap—455 Kc.
33	W —23615	Condenser, .05 Mf. 400 V.		G188 —32000	Coil—Only—Wave Trap
34	B —33906A	Power Cord and Plug	68Y	—44024B	Tone Control
35	—22196	Resistor, 20,000 Ohm $\frac{1}{4}$ W.	68Z		Line Switch
36	—21237A	Resistor, 60,000 Ohm $\frac{1}{4}$ W.	69	—44773	Volume Control
37	—35600	Resistor, 100,000 Ohm $\frac{1}{4}$ W.	70	G27 —26719	Ant. and Gnd. Terminal Assy.
38	—4921C	Resistor, 10,000 Ohm $\frac{1}{4}$ W.	71	G41 —26719	Phono Terminal Assy.
39	—21454	Resistor, 1 Megohm $\frac{1}{4}$ W.		G10 —45683	Push Button Unit Assy.
40	—36952	Resistor, 30,000 Ohm $\frac{1}{4}$ W.		G29 —45683	Key and Toggle Assy.
41	—34020	Resistor, 250,000 Ohm $\frac{1}{4}$ W.		—45717	Screw—Key Adjusting
42	—37590	Resistor, 750,000 Ohm $\frac{1}{4}$ W.		W —50607C	Spring—Key Return
43	—36320	Resistor, 120,000 Ohm $\frac{1}{4}$ W.		W —50542C	Clamp—Toggle Lock
44	—36688	Resistor, 3 Megohm $\frac{1}{4}$ W.		W —50588B	Adjusting Clip—(Heart Shaped)
45	—23785	Resistor, 500,000 Ohm $\frac{1}{4}$ W.		W —45646B	Adjusting Clip—(Hooked)
46	W —37631	Resistor, 32 Ohm $\frac{1}{2}$ W.		W —46278	Guide Plate—Key
47	—21875	Resistor, 100,000 Ohm $\frac{1}{4}$ W.		G18 —45683	Rocker Plate and Gear Sector Assy.
				W —50561	Screw—Rocker Plate Bearing
				W —45976	Bronze Spring—Bearing Thrust
				W —50273	Rubber Band—Used on Keys
				8R	Cabinet
				—46360A	Knob—4 Req.
				8T	Cabinet (Lowboy Style)
				—46360A	Knob—Tuning—Volume
				—46784A	Knob—Tone Control—Band Sw.
				C —46228C	Escutcheon
				—46417	Push Button
				—50841	Station Call List
				W —50551A	Celluloid Call Letter Cover
				—46329	Instruction Booklet

The Crosley Corporation  
Cincinnati, Ohio