



Schematic Location	Part Number	Description
CHASSIS PARTS		
	4417	Button, Snap (Dial Mounting)
	8931	Cable, Tuning Tube
	2163	Cable, drive
	3227	Cap, Grld
R18	8910	Control, Volume and Switch
	1732	Cord, Line
	6424	Clamp, Linecord
	4314	Clamp, Tapped—For Tuning Tube
	4315	Clamp, Plain—For Tuning Tube
L3	8422	Coil, Oscillator
L1	8423	Coil, Tracking
C1a,b	8911	Condenser, Variable (with Pulley)
C2,3	8504	Condenser, Dual Trimmer
C15a,b,c	8425	Condenser, Electrolytic (20-250)—(20-150)—(20-150)
C4		Condenser, 100 Mmf. Mica
C5,14		Condenser, 1 Mfd. 200 v.
C6		Condenser, .05 Mfd. 200 v.
C7		Condenser, 250 Mmf. Mica
C8		Condenser, 100 Mmf. Mica
C9		Condenser, .002 Mfd. 600 v.
C10,16		Condenser, .01 Mfd. 400 v.
C11		Condenser, .05 Mfd. 400 v.
C12,13		Condenser, .001 Mfd. 600 v.
C17		Condenser, .005 Mfd. 600 v.
	7209	Grommet, Tuner Assembly Mtg.
	9121	Dial Chart
	8941	Microphone Socket Assembly
	6244	Pulley, Idler
	5026	Pointer
	6158	Pilot Lite
	1207	Retainer, "C" Washer (Holds Tuning Shaft)
R1		Resistor, 20M, 1/3 Watt
R2		Resistor, 200 Ohm, 1/3 Watt

Schematic Location	Part Number	Description
R3,4,14,16		Resistor, 1 Meg. 1/3 Watt
R5		Resistor, 10 Meg. 1/3 Watt
R6,7,8,9,11		Resistor, 200M. 1/3 Watt
R10		Resistor, 120 Ohm, 1/2 Watt
R12		Resistor, 1000 Ohm, 1 Watt
R13		Resistor, 35 Ohm, 1/2 Watt
R15		Resistor, 2 Meg. 1/3 Watt
R17		Resistor, 1 Meg (in Tuning Tube Socket)
R19,20,21,22		Resistor, 50M, 1/3 Watt
R23		Resistor, 4 Meg. 1/3 Watt

RECORDING ARM ADJUSTMENTS

