
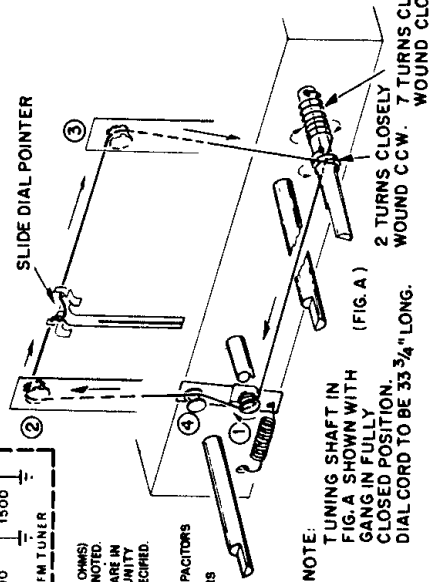


Emerson Radio

Model 895B, Chassis 120431B

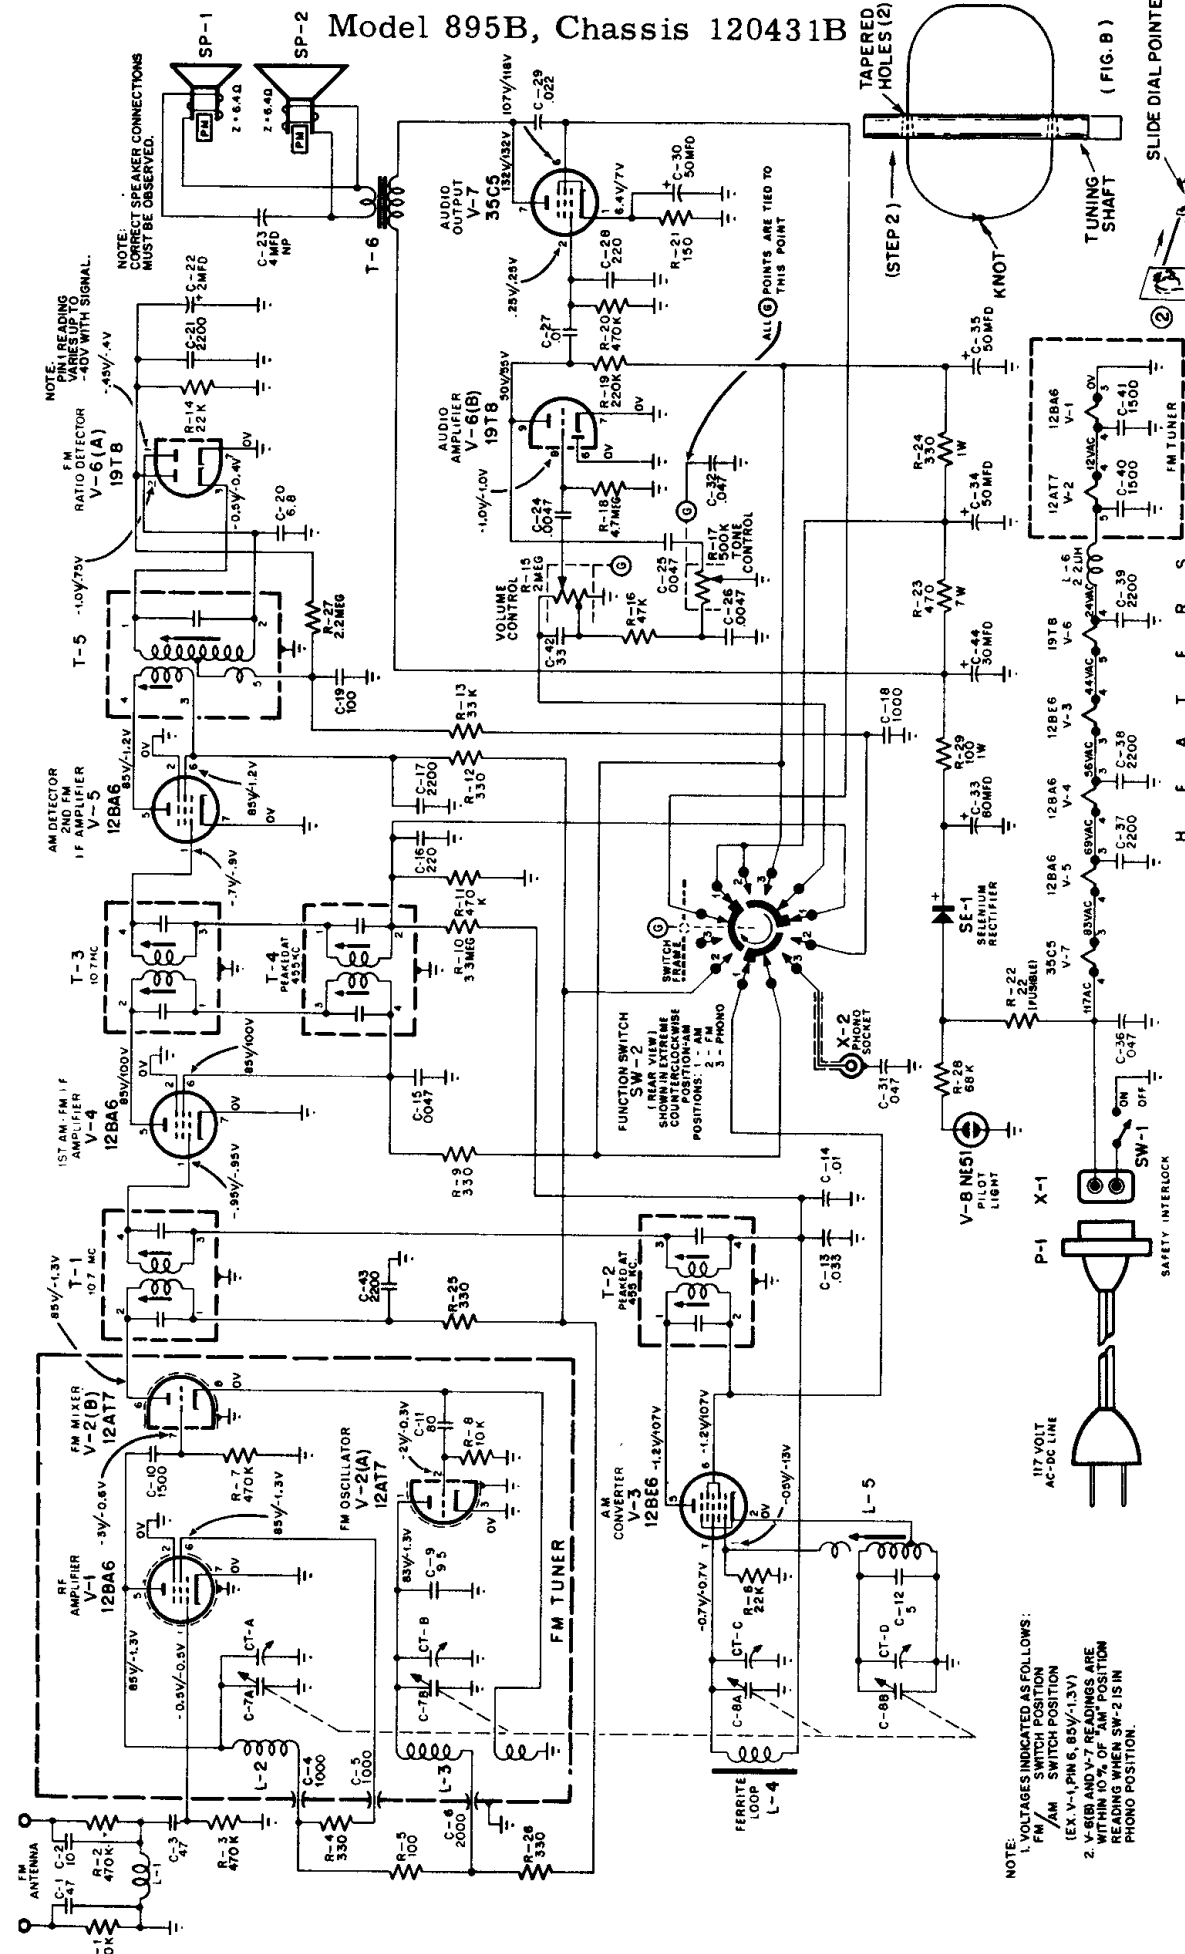

DISASSEMBLY INSTRUCTIONS

Remove screws from cabinet back. Grasp line cord at point where it is connected to back and pull free of interlock. Remove back.

remove 3 control knobs and 1 tuning knob; disconnect built-in FM antenna and remove antenna terminal. Un-

TO STRING DIAL:

1. STRING THROUGH SMALLER DIAMETER OF TAPERED HOLES (FIG.B) AND KNOT.
2. PULL KNOT THROUGH HOLE (FIG.B) AND ROTATE SHAFT COUNTERCLOCKWISE UNTIL GANG IS FULLY CLOSED.
3. WIND 7 REAR TURNS CLOCKWISE.
4. LOOP STRING OVER PULLEY ① AND STUDS ② AND ③ (FIG.A).
5. WIND 2 FRONT TURNS COUNTERCLOCKWISE WORKING TOWARDS FRONT OF SHAFT.
6. STRING LOOPED CORD UNDER PULLEY ④ (FIG.A).

TUBE AND TRIMMER LOCATIONS

