

Emerson Radio

MODELS - 819B, 820B

CHASSIS - 120240-B

DISASSEMBLY INSTRUCTIONS

1. Remove four screws securing changer mounting board to cabinet. Lift mounting board with changer and disconnect plug P-3 from the control chassis.
2. Remove five screws securing inside perforated panel to cabinet and lift out panel. Disconnect plug P-2 from amplifier chassis and remove the changer.

3. Remove perforated back cover and remove screw securing chassis and shield assembly to rear of cabinet.
4. Remove two nuts and washers from threaded studs securing chassis and shield assembly to bottom of cabinet. Lift this assembly to clear studs, tilt forward and slide out.
5. Remove five screws securing chassis to shield assembly and remove shield so as to have access to underside of chassis.
6. To reassemble reverse procedure 1 through 5.

