


**Model  
3T55**

## Chassis CR-150

**Model  
2T55**

**Chassis**  
**CR-154**

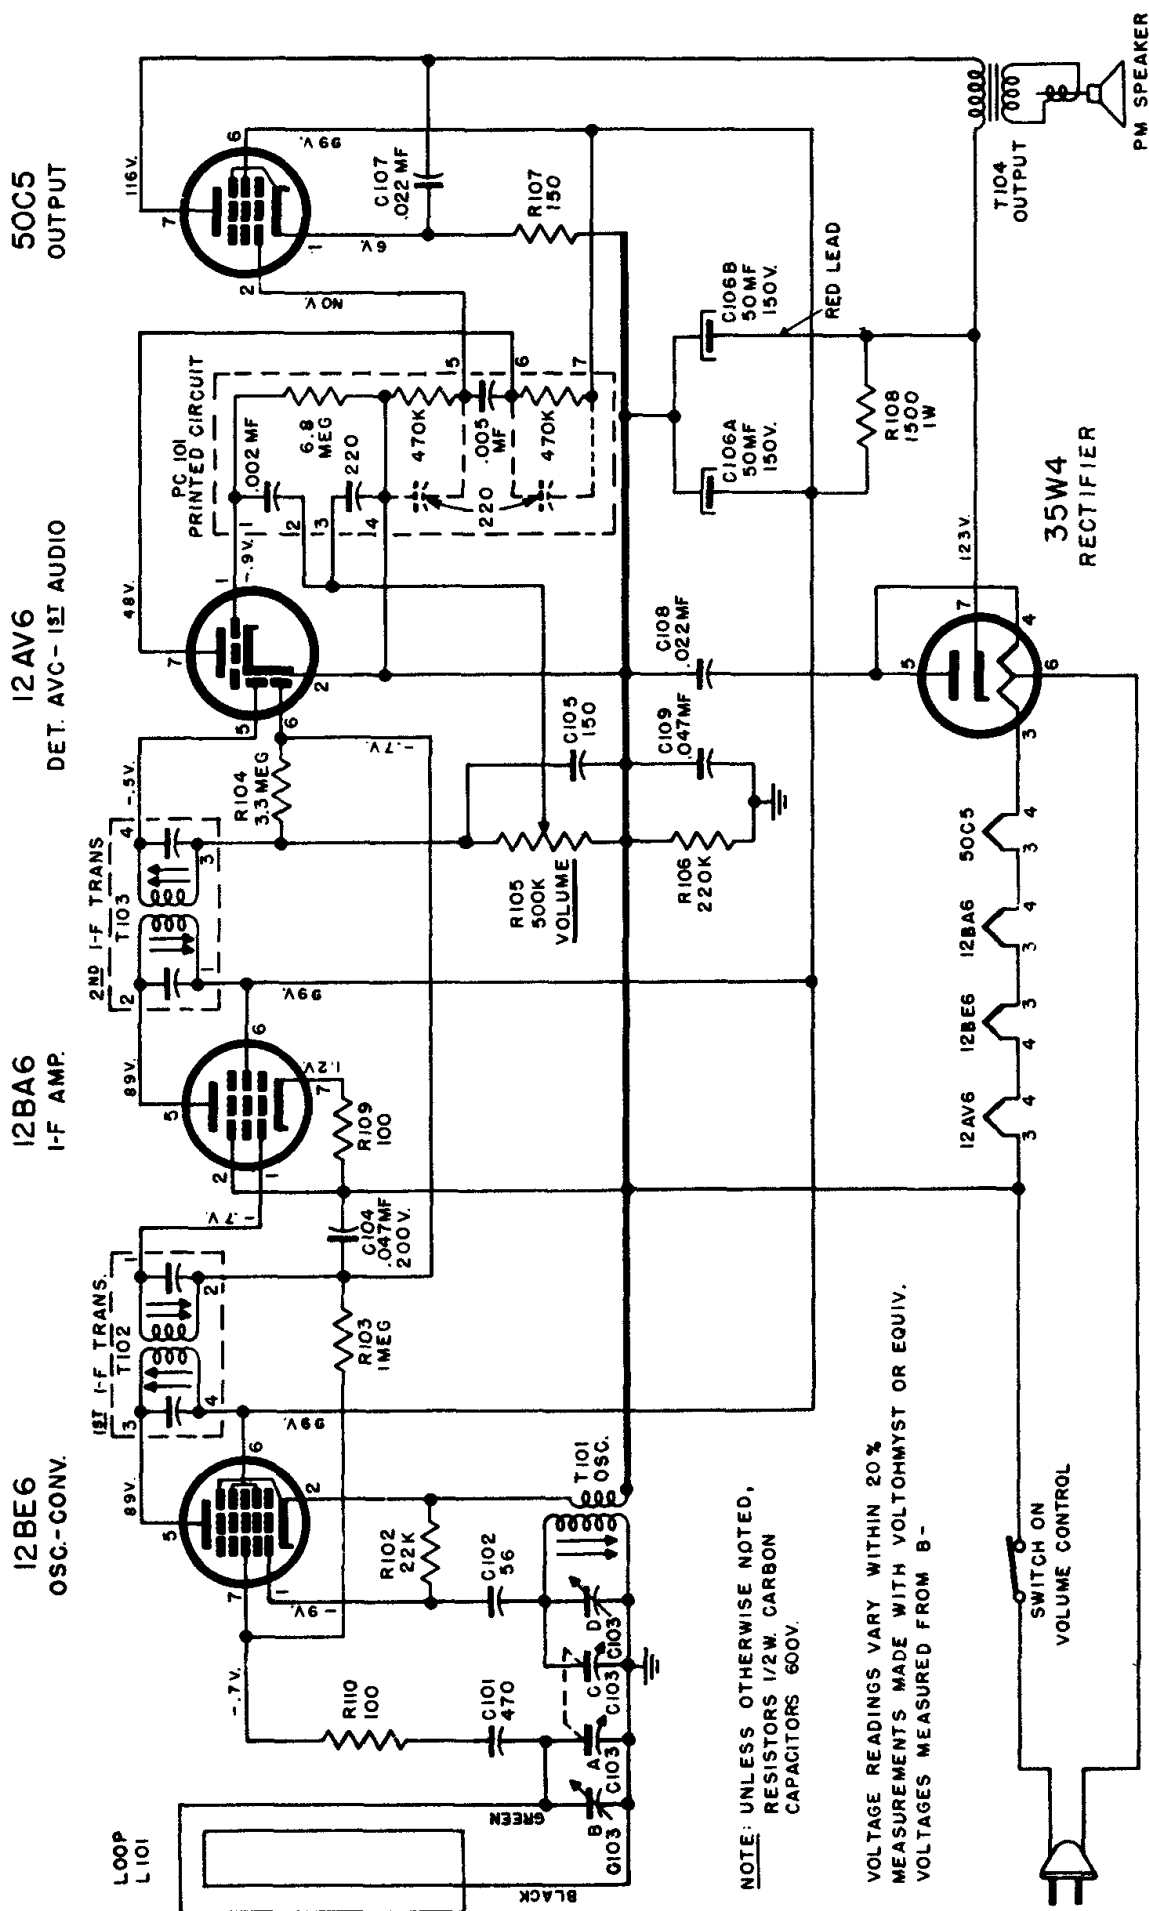

**ALIGNMENT:**

- a. Turn set on, adjust volume to maximum.
- b. See that dial pointer coincides with calibration marks at extremes of dial scale.
- c. Connect output meter across the speaker voice coil.
- d. Make a loop of the RF Generator leads (connect the leads together through a .01 mfd capacitor) and loosely couple to the Loop Antenna.

STEP	SET RF GENERATOR AT	SET CONDENSER GANG AT	ADJUST	TO OBTAIN
1	455KC	Fully Open at some quiet point	IF Slugs T103 T102	Maximum Output
2	1620KC	Fully Open	Osc. Trim- mer C103D	Same
3	1500KC	1500KC	Ant. Trimmer C103B	Same
4	600KC	600KC	T101 Osc. Slug	Same