



MODEL 76

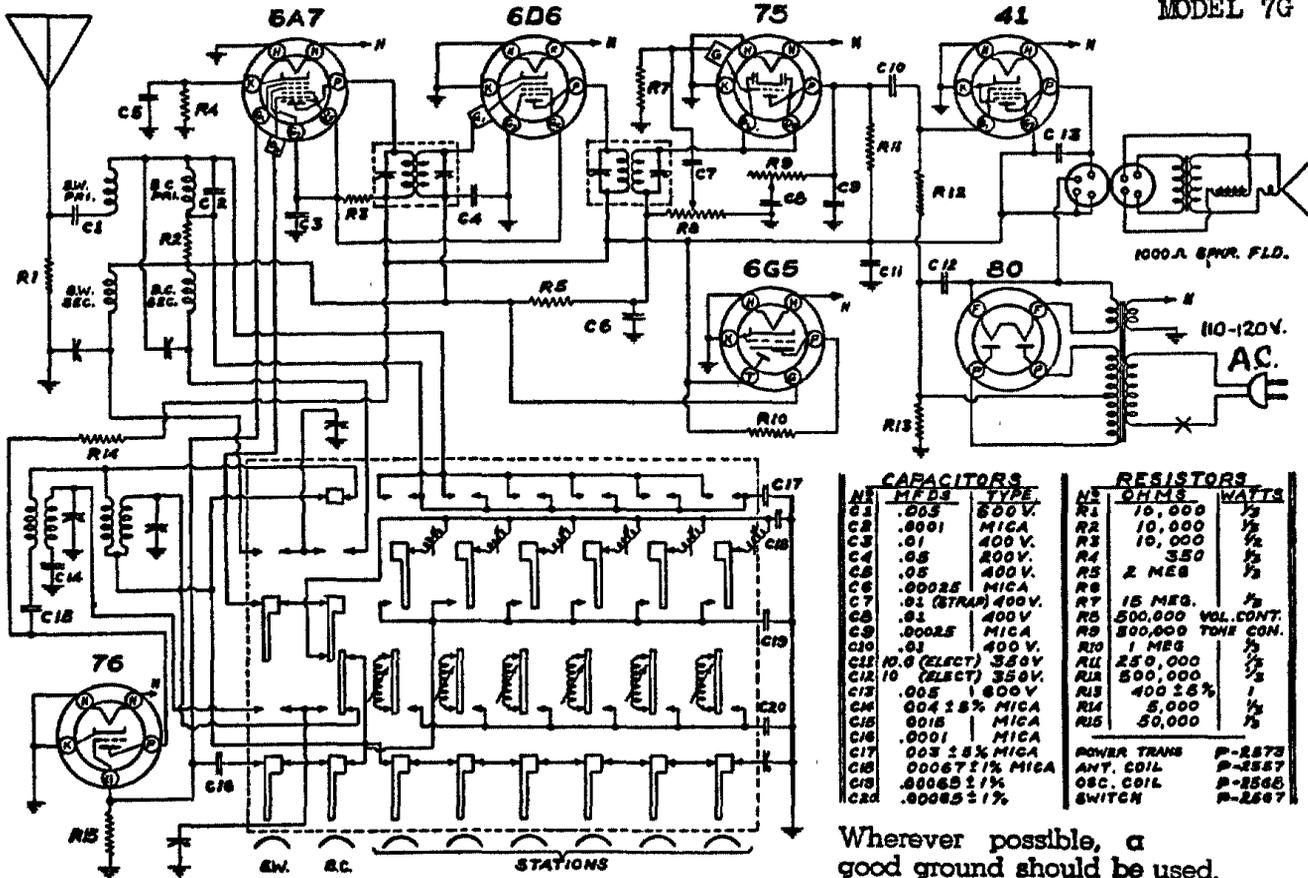

IF PEAK 456 KC

This receiver is designed to operate over two tuning ranges; the broadcast range which extends from 545 to 1720 kc (174.4 to 550.4 meters) and the international short wave band which extends from 5800 to 18,100 kc (16.5 to 51.7 meters). This latter range is the one which includes the 5 internationally assigned bands—the 16, 19, 25, 31 and 49 meter bands.


Wherever possible, a good ground should be used.

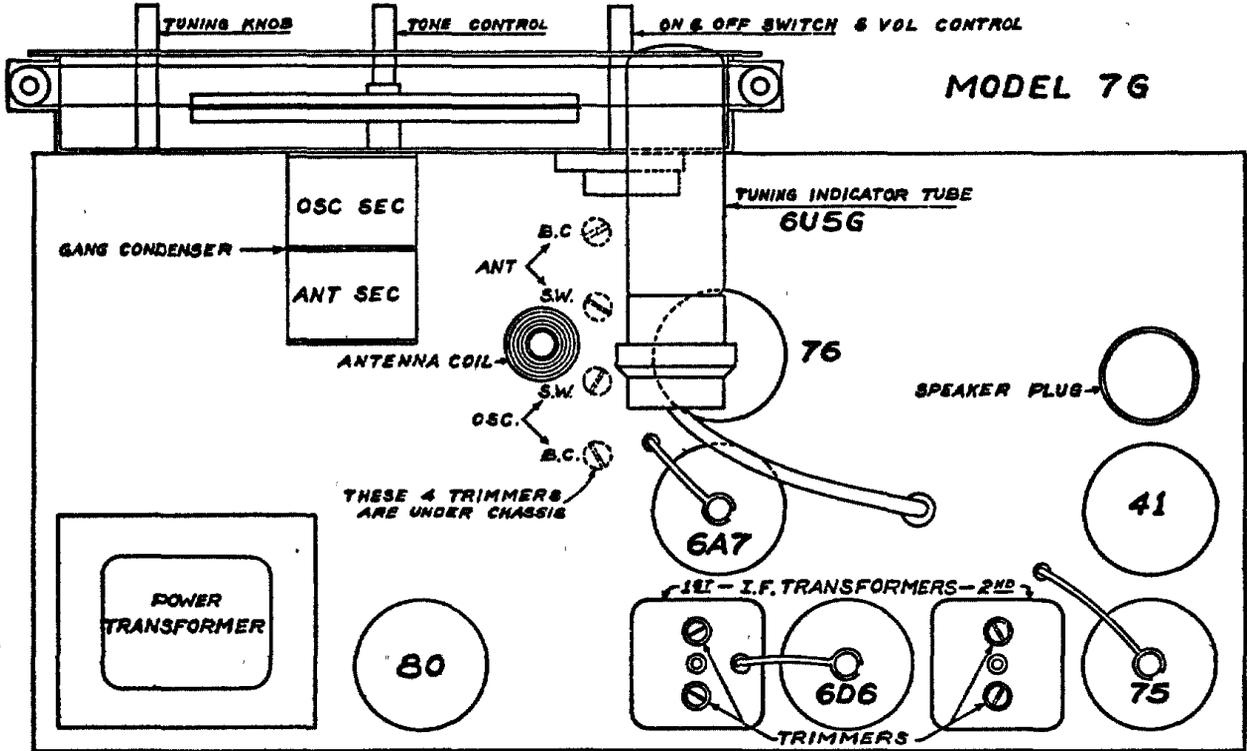

MODEL 76

CONVENTIONAL ALIGNMENT, SEE SPECIAL SECTION, VOL.VIII.

PROCEDURE FOR SETTING UP AUTOMATIC PUSH BUTTONS

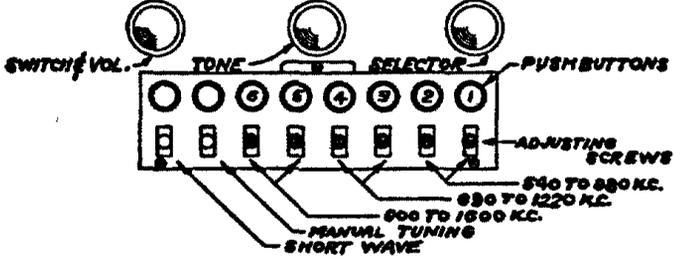

1. Choose a station having a frequency within the range of button No. 1 (540 to 980 kc).
2. Press "Manual Tuning" button and tune this sta-

- tion conventionally by using the selector knob.
3. Now press button No. 1 and turn adjusting screw in either direction until the previously selected station is heard. Adjust the screw until the dark area of the "electric eye" is smallest. This setting will give the best tonal response with maximum sensitivity.
4. Remove the call letters of the station from the call letter sheet furnished and insert in the window of the adjusting screw.
5. Repeat the above procedure for the remaining five (5) stations.

NOTE: It is advisable to retain the call letter sheet in case of station change later on.