


Arvin


MODEL 92P48

CODE 1.70601

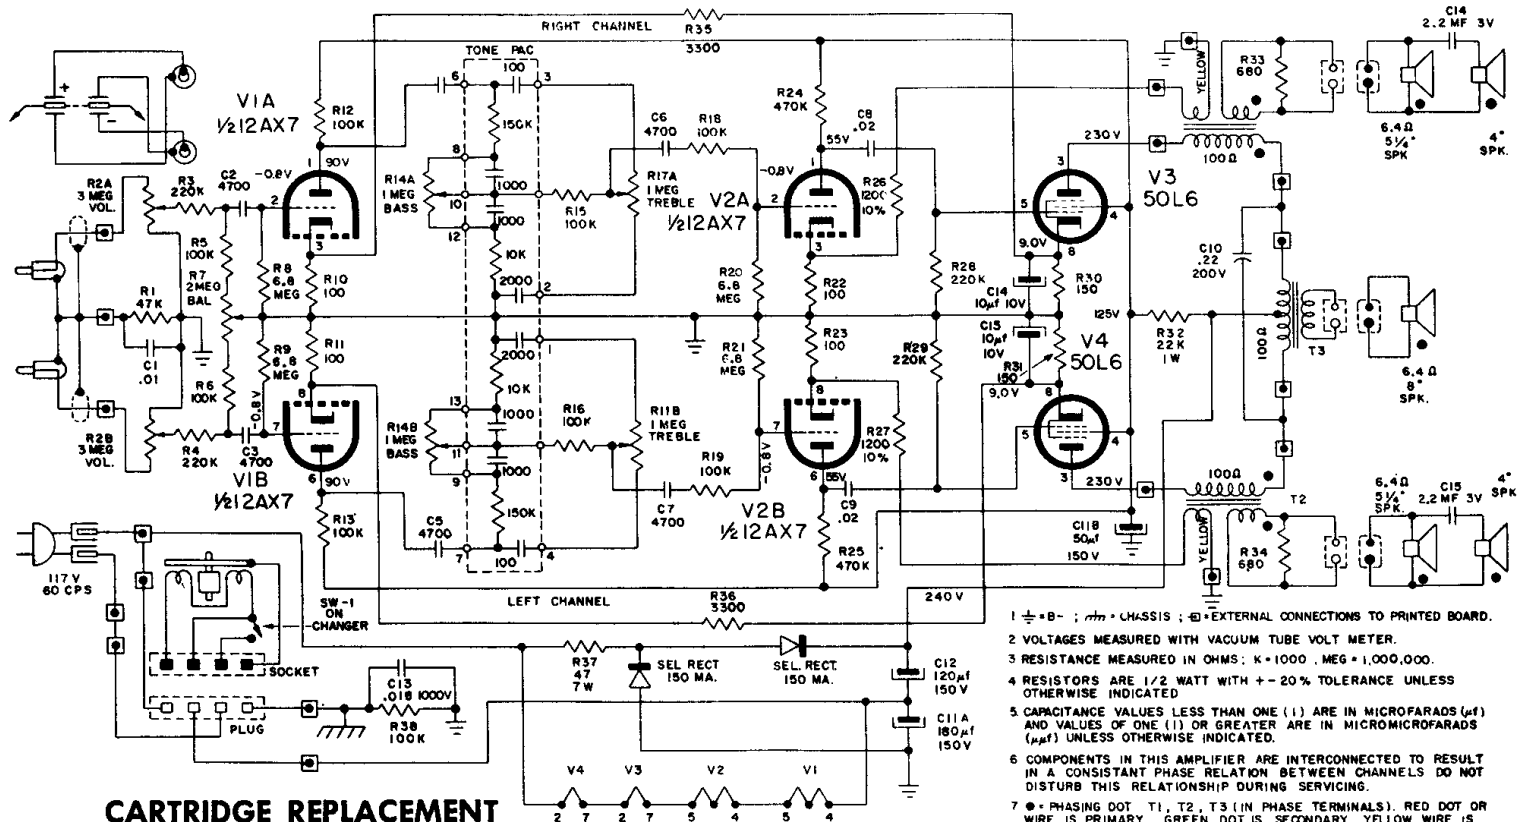


CARTRIDGE REPLACEMENT

To remove cartridge grasp the tip of the cartridge, and pull straight out. (See Illustration)
 To replace cartridge, align grooves in cartridge with grooves in cartridge holder and push in gently.

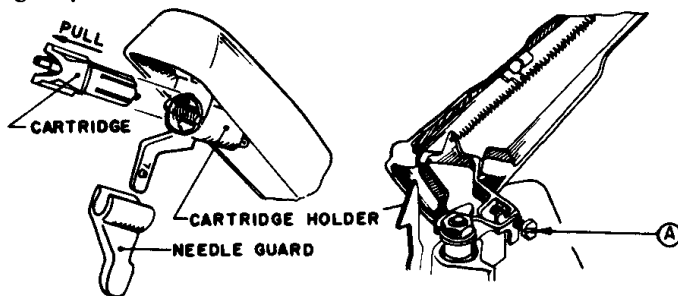

NEEDLE SET DOWN

Make needle set down adjustment only when necessary. To obtain the correct needle set down point, a screwdrive slot screw indicated by A (see illustration) is located at base of the tone arm. Turning screw clockwise moves the needle toward the outer edge of the record; counter-clockwise rotation moves the needle toward the center of the record.

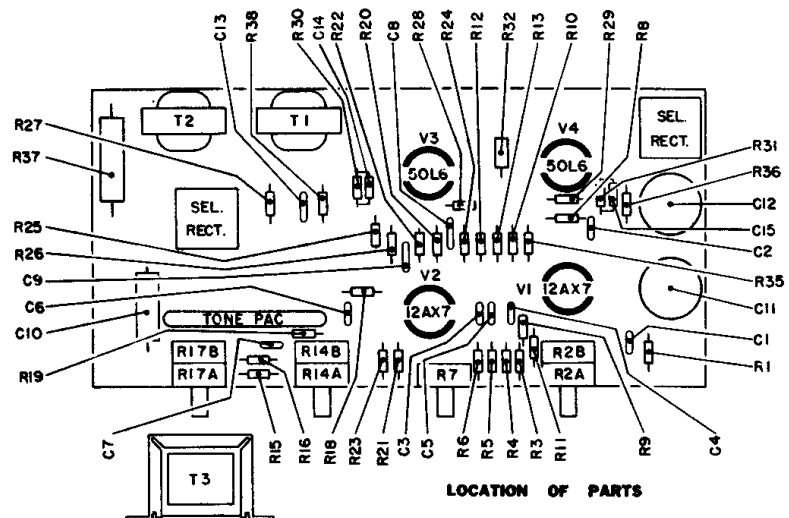

LOCATION OF PARTS

SCHEMATIC LOCATION	PART NO.	DESCRIPTION
CAPACITORS		
C1	43674-1	.01 uf., Disc.
C2 3 4 5 6 7	43674-15	.0047 uf., Disc.
C8 9	43674-7	.02 uf., Disc.
C10	45503-4	.22 uf., Paper Tubular
C11A B	97711-8	180-50 150V., Elect.
C12	97711-3	120 uf/150V., Elect.
C13	41135-6	.02 uf., Disc., 1000V
C14, 15	44396-2	10 uf., 10V., Elect.
T1, 2	96430-3	Transformer, Output
T3	43302-7	Transformer, Output

SCHEMATIC LOCATION	PART NO.	DESCRIPTION
RESISTORS		
R1	43687-473	470 ohm, 1/2W., 20%
R2A, B	47100-9	Control, Stereo, Dual 3 meg ohm
R3, 4, 28, 29	43687-224	220K ohm, 1/2W., 20%
R5, 6, 12, 13, 15, 16, 18, 19, 38	43687-104	100K ohm, 1/2W., 20%
R7	49000-14	Control, Balance, 2 meg ohm
R8, 9, 20, 21	43687-685	6.8 meg ohm, 1/2W., 20%
R10, 11, 22, 23	43687-101	100 ohm, 1/2W., 20%
R14A, B	47100-15	Control, Bass, Dual, 1 meg ohm
R17A, B	47100-15	Control, Treble, Dual, 1 meg ohm
R24, 25	43687-474	470K ohm, 1/2W., 20%
R26, 27	43689-122	1200 ohm, 1/2W., 10%
R30, 31	43687-151	150 ohm, 1/2W., 20%
R32	47325-223	22K ohm, 1W., 20%
R33, 34	43689-681	680 ohm, 1/2W., 10%
R35, 36	43687-332	3300 ohm, 1/2W., 20%
R37	47777-4	47 ohm, Fusing