


Belmont Radio

Model 460

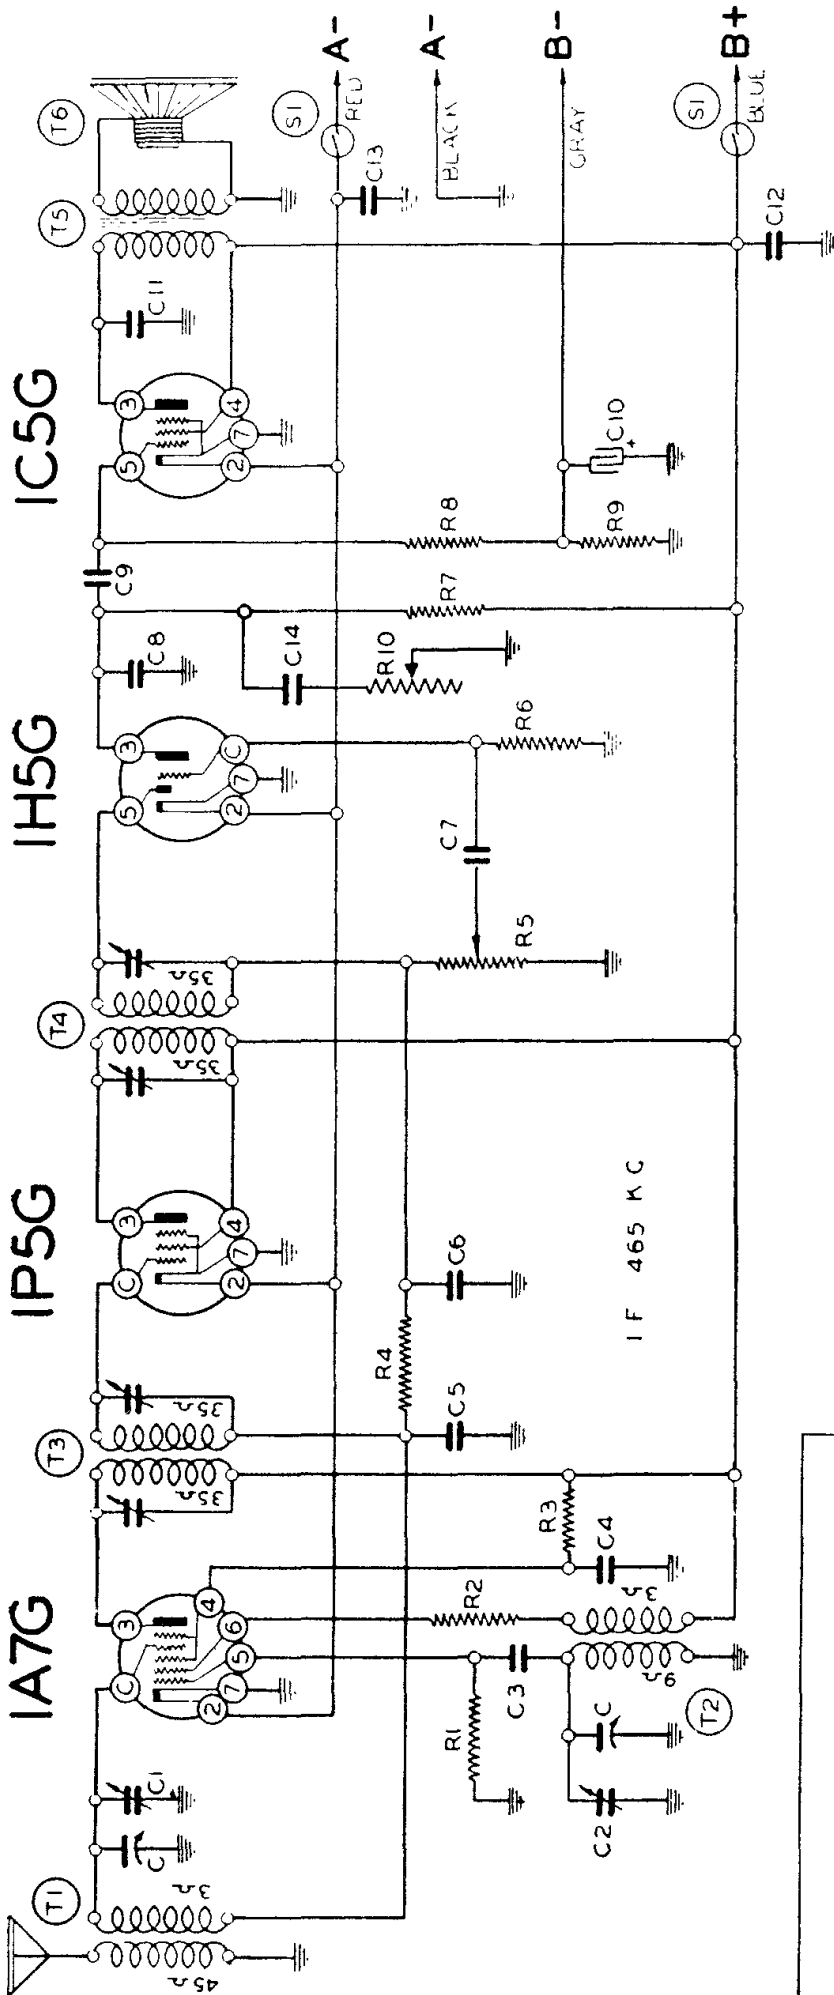

Circuit

Ref.

No. Part No.

Description

RESISTORS

R1	130266	200M ohm— $\frac{1}{2}$ w.
R2	13018	4M ohm— $\frac{1}{2}$ w.
R3	1307	40M ohm— $\frac{1}{2}$ w.
R4	1304	3 megohm— $\frac{1}{2}$ w.
R5	101175	1 megohm volume control
R6	130257	5 megohm— $\frac{1}{2}$ w.
R7	1303	500M ohm— $\frac{1}{2}$ w.
R8	13019	1 megohm— $\frac{1}{2}$ w.
R9	130200	700 ohm— $\frac{1}{2}$ w.
R10	101119	Tone Control (1 Megohm)


CONDENSERS

C	102110	2 gang variable condenser
C1		Antenna Trimmer on gang
C2		Oscillator trimmer on gang
C3	12912	.0025 mica
C4	1009	.05 x 200 v.
C5	1009	.05 x 200 v.
C6	1295	.0001 mica
C7	10012	.003 x 600 v.
C8	1295	.0001 mica
C9	10011	.01 x 400 v.
C10	11975	10 mfd. x 25 w. v.
C11	10012	.003 x 600 v.
C12	10064	.25 x 200 v.
C13	10020	.1 x 200 v.
C14	10025	.002 x 600 v.

PARTS

T1	111132	Antenna Coil
T2	110122	Oscillator Coil
T3	108151B	Input I. F. - 465 kc.
T4	108153	Output I. F. - 465 kc.
T5	10591	Output Transformer
T6	114166	5 in. P. M. Speaker
S1		Off-on switch on Volume control

BOTTOM VIEW OF CHASSIS

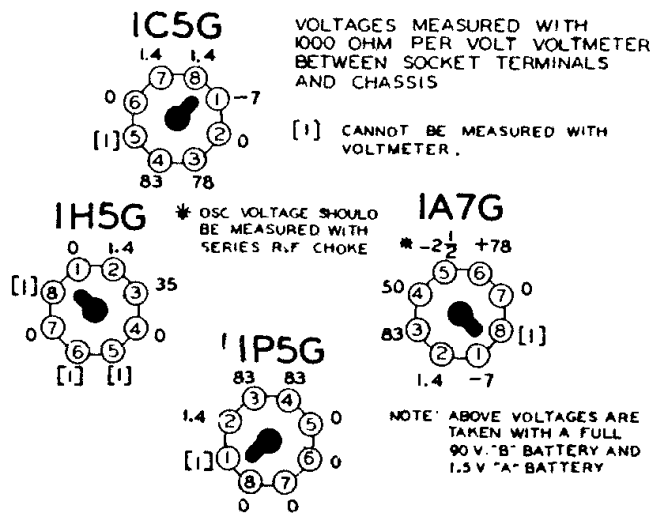

REAR OF CHASSIS