

CROSLEY

MODELS: E10BE, E10CE, E10RD, E10WE



(Chassis 10E, 10E-1)

2 ND I-F TRANS. 455 KC.
ADJUST TOP & BOTTOM
SLUGS (A & B)

1ST I-F TRANS. 455 KC.
ADJUST TOP & BOTTOM

(E) OSC. TRIMMER
1620 KC.

(F) ANT. TRIMMER
1400 KC.

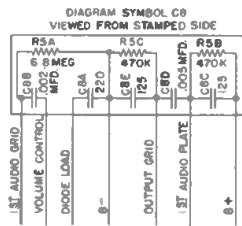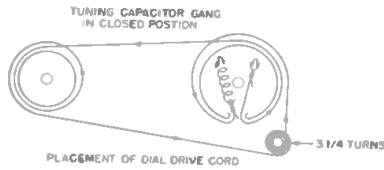

Alignment Sequence	Signal Generator Output			Position of Dial pointer	Adjust for Maximum Output
	Frequency in KC	In Series with	To		
1	455	200 mmf.	High Side of Loop	1620	A, B, C & D
2	1620	Radiated to Loop		1620	E
3	1400	Radiated to Loop		Tune to Signal	F

