



Volume control should be at maximum position. Output of signal generator should be no higher than necessary to obtain an output reading. Use an insulated screwdriver for adjusting.						
DUMMY ANTENNA	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
1. .1 mfd	High side to pin 6 (grid) of 1R5 (V1) Low side to chassis.	460 Kc. 400 c. Modul.	1600 Kc.	Across voice coil.	A1, A2, A3, A4	Adjust for maximum output. Repeat step 1. for greatest accuracy.
2.	Loop	1400 Kc.	tune in 1400 Kc. signal.	"	A5	Adjust for maximum output.
3.	Loop	1620 Kc.	tune in 1620 Kc. signal.	"	A6	Adjust for maximum output.