



Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
BC	Min. Cap.	465 KC	6A8 Grid	A,E	I ₁ I ₂ I ₃ I ₄	IF
SW	16 MC	16 MC	Brown lead	B,D	O ₅ A ₆	Osc. Ant.
PB	5 MC	5 MC	Brown lead		O ₇ A ₈	Osc. Ant.
BC	1400 KC	1400 KC	Brown lead		O ₉ A ₁₀	Osc. Ant.
BC	600 KC	600 KC	Brown lead	C	P ₁₁	Osc. Pad.