


TRIMMER LOCATION CHARTS

BOTTOM VIEW

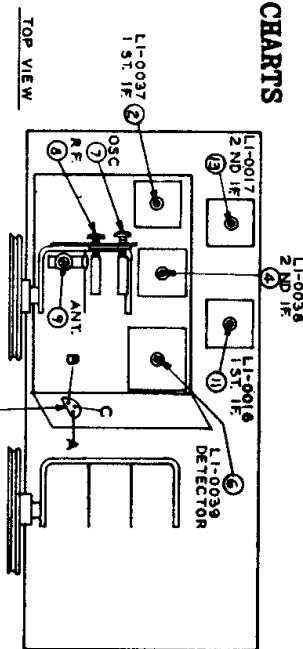


TOP VIEW

- NOTES—
- 1 SW-0028—THREE SECTION—FOUR POSITION BAND SWITCH SHOWN IN POSITION NO. 1
NO. 1 POSITION IS PHONO
NO. 2 POSITION IS RADIO BROADCAST
NO. 3 POSITION IS F.M.
NO. 4 POSITION IS TELEVISION
 - 2 SW-0008 ONE SECTION—FIVE POSITION TONE SWITCH SHOWN IN "FULL" POSITION
 - 3 ALL SWITCH SECTIONS SHOWN IN COUNTER-CLOCKWISE POSITION AS VIEWED FROM
PINB END OF 6BA7
 - 4 RESISTORS ARE 20%—1/4W UNLESS OTHERWISE SPECIFIED.
 - 5 *K=1000 OHMS

HOWARD RADIO MODEL 481-A (Chassis)

The HOWARD 481-A Chassis, is essentially the same as the 481-M, 481-B and 481-C, the only difference is that the Short Wave is not included in this model.

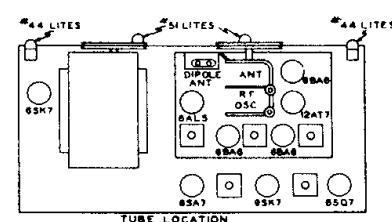

TUBE LOCATION