

NOTE ALSO THAT A SETTING POINT FOR THE DIAL HAND POSITION IS GIVEN ON A DIFFERENT BAND OTHER THAN THE BAND BEING ALIGNED AND THE FREQUENCY SETTING OF THE GENERATOR. THIS IS NECESSARY TO OBTAIN THE PROPER BAND-SPREAD.



