


MODEL 920 BATTERY SET

BATTERIES

1½ Volt "A" Battery
90 Volt "B" Battery
Follow connections
as shown on Battery
Label.

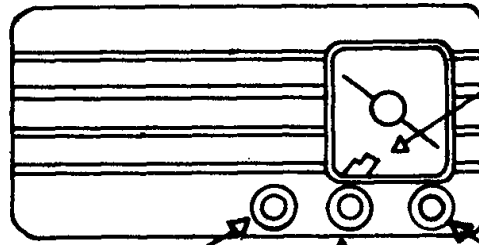

SWITCH
INDICATING FLAG

Battery Saver
Full Power
"Off" when flag
is out of sight.

VOLUME CONTROL

TUNING CONTROL

BATTERY CONSERVATION

1. Turn Battery Switch "Off" when set is not in use.
2. Use "Battery Saver" on all strong stations.
3. Use heavy duty pack or batteries.
4. The following batteries are some well known makes that can be used with this instrument;
Burgess No.17GD60
Eveready No.758

BATTERY SWITCH

"OFF POSITION": Switch turned counter-clockwise

"BATTERY SAVER": Switch turned clockwise - one step.

"FULL POWER"; Switch turned
clockwise - two
steps. Flag
will indicate
"Full Power".

