

GENERAL ELECTRIC

TO REMOVE CABINET BACK

1. Remove time-set knob.
2. Remove two screws on bottom fastening cabinet back to cabinet front.
3. Remove screw above appliance outlet.
4. Disengage two snaps on top front of cabinet by exerting forward pressure on top rear of cabinet until bottom of cabinet back comes loose.
5. Pull cabinet back out.

TO REMOVE CHASSIS

1. Follow steps one thru five as above.
2. Pull off knobs.
3. Remove four screws fastening chassis mounting bracket to cabinet front and bottom.
4. Lift chassis back and out.

Models C-450A, -B, C-451A, -B, C-452A, -B

