

# GENERAL ELECTRIC CO.

MODELS G-53, G-56

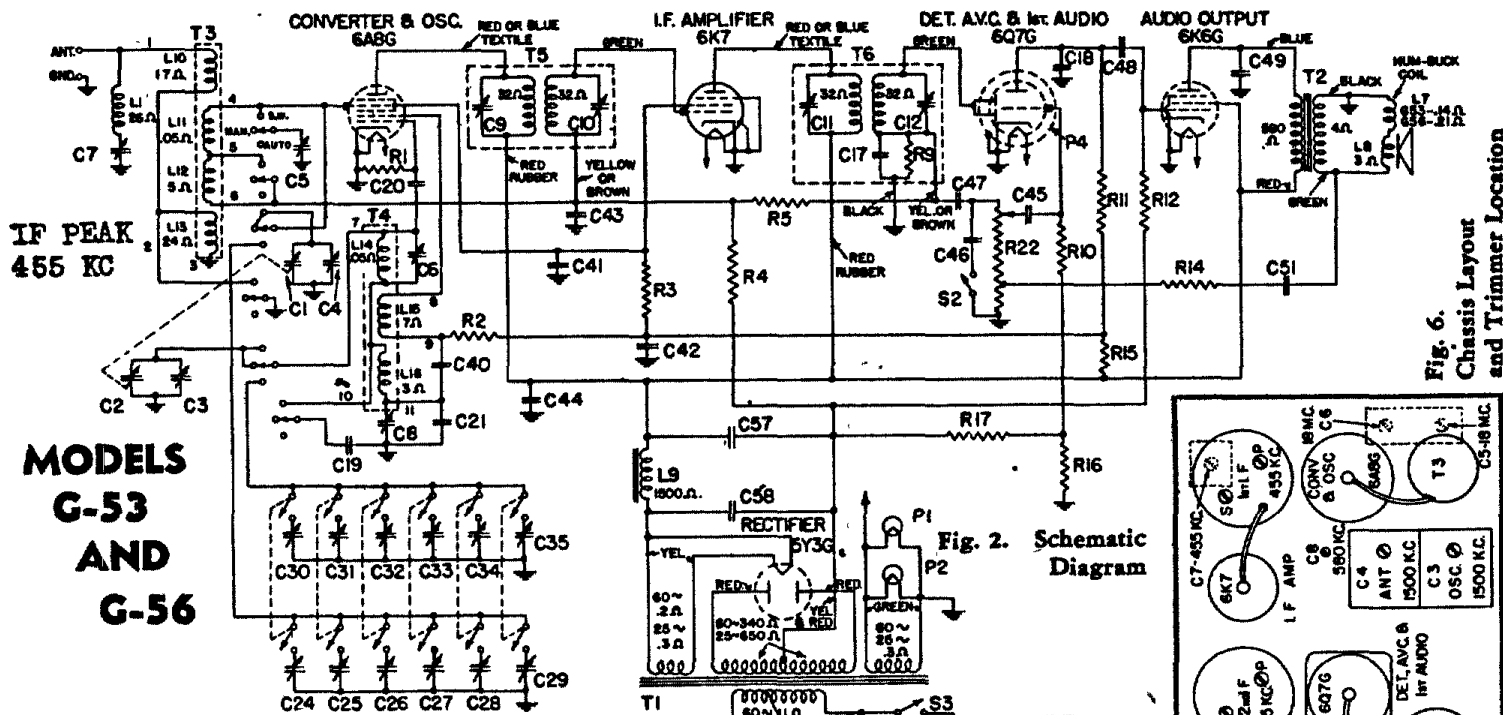


Fig. 6. Chassis Layout and Trimmer Location

MODELS  
G-53  
AND  
G-56

Fig. 4. Chassis Parts Layout

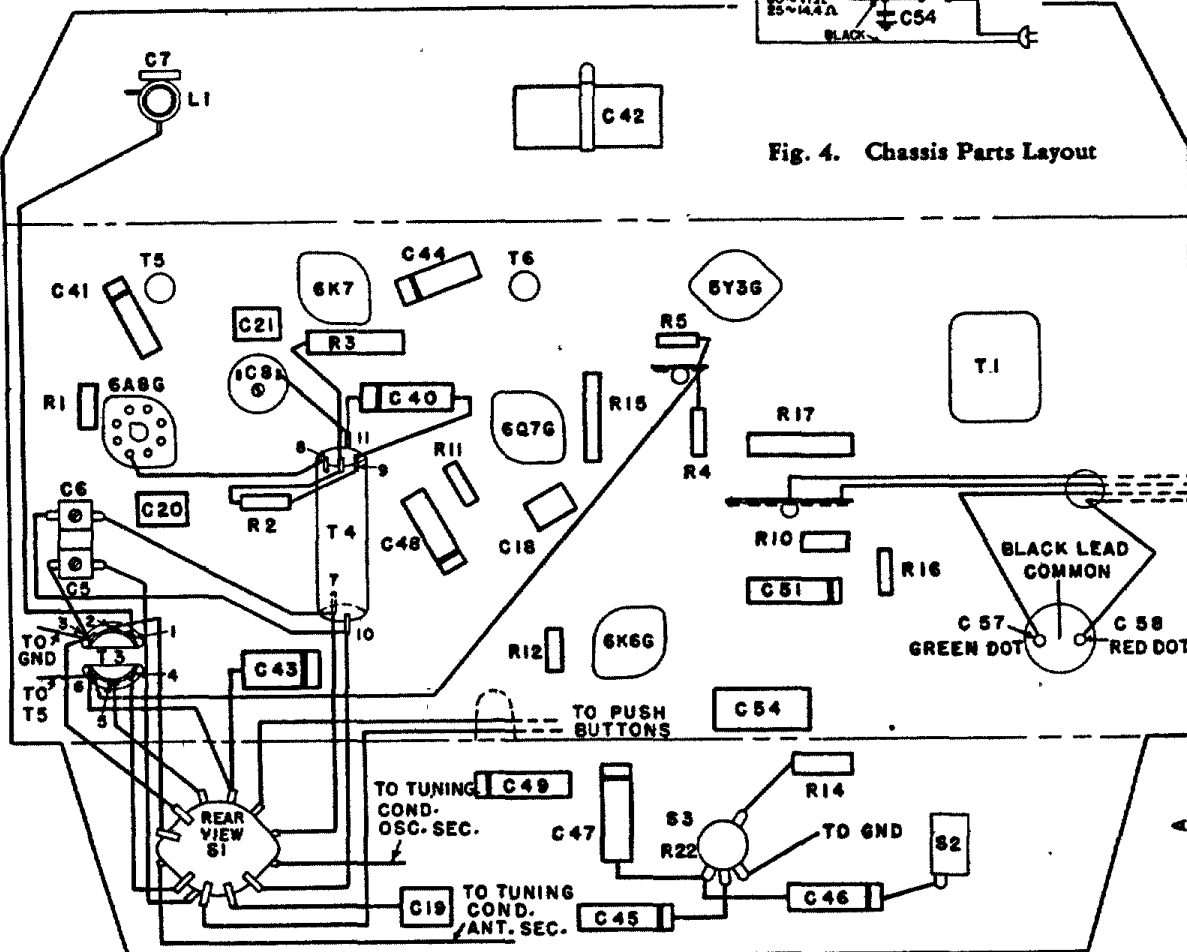


Fig. 3. Dial Drive Mechanism

Symbol	Description	Symbol	Description	Symbol	Description
C5	R.F. Trimmer Capacitor, "D" Band	C40	Paper Capacitor, 0.001 Mfd.	R10	Carbon Resistor, 2.2 Megohms
C6	Osc. Trimmer Capacitor, "D" Band	C41	Paper Capacitor, 0.05 Mfd.	R11	Carbon Resistor, 330,000 Ohms
C7	Osc. Padder Condenser, "B" Band	C42	Paper Capacitor, 0.5 Mfd.	R12	Carbon Resistor, 330,000 Ohms
C17	Mica Capacitor, 470 Mmf.	C43	Paper Capacitor, 0.05 Mfd.	R14	Carbon Resistor, 22,000 Ohms
C18	Mica Capacitor, 330 Mmf.	C44	Paper Capacitor, 0.05 Mfd.	R15	Carbon Resistor, 3900 Ohms
C19	Mica Capacitor, 3900 Mmf.	C45	Paper Capacitor, 0.01 Mfd.	R16	Carbon Resistor, 22 Ohms
C20	Mica Capacitor, 47 Mmf.	C46	Paper Capacitor, 0.001 Mfd.	R17	Carbon Resistor, 330 Ohms
C21	Mica Capacitor, 370 Mmf.	C47	Paper Capacitor, 0.005 Mfd.	R22	Volume Control, 2 Megohms, tap at 15,000 Ohms
C24	Mica Trimmer, 165-450 Mmf.	C48	Paper Capacitor, 0.005 Mfd.	T1	Power Transformer
C25	Mica Trimmer, 95-345 Mmf.	C49	Paper Capacitor, 0.012 Mfd.	T2	Output Transformer
C26	Mica Trimmer, 80-235 Mmf.	C51	Paper Capacitor, 0.1 Mfd.	L-8	Speaker, 6 1/4 inches (G-53)
C27	Mica Trimmer, 35-175 Mmf.	C54	Molded Paper Capacitor, 0.01 Mfd.	S1	Band Switch
C28	Mica Trimmer, 30-115 Mmf.	C57	Dry Electrolytic Capacitor, 8 Mfd.	S2	Tone Control Switch
C29	Mica Trimmer, 11-60 Mmf.	C58	Dry Electrolytic Capacitor, 8 Mfd.	S3	Power Switch (Part of Volume Control)
C30	Mica Trimmer, 165-450 Mmf.	R1	Carbon Resistor, 47,000 Ohms	S4	Push-button Switches
C31	Mica Trimmer, 95-345 Mmf.	R2	Carbon Resistor, 4700 Ohms		
C32	Mica Trimmer, 80-235 Mmf.	R3	Carbon Resistor, 18,000 Ohms		
C33	Mica Trimmer, 35-175 Mmf.	R4	Carbon Resistor, 10 Megohms		
C34	Mica Trimmer, 30-115 Mmf.	R5	Carbon Resistor, 1.5 Megohms		
C35	Mica Trimmer, 11-60 Mmf.	R9	Carbon Resistor, 470,000 Ohms		