

# GENERAL ELECTRIC


## SPECIFICATIONS

CABINET:	C430A Antique White C431A Pink
ELECTRICAL RATING:	105 - 120 Volts A.C., 60 cycles 30 Watts
POWER OUTPUT:	Undistorted: 1 Watt Maximum: 1.5 Watts
SPEAKER:	4", 3.2 ohms @ 400 cps


## MODELS C-430A, C-431A

### TO REMOVE CHASSIS

Remove tuning, volume, timer, and time-set knobs. Then remove five hex-head screws on cabinet back, and four hex-head screws on cabinet bottom. Unscrew four Phillips head screws to remove timer. After unsoldering speaker leads, pull chassis out slowly. Leave leads from chassis to timer attached for A.C. power while troubleshooting.

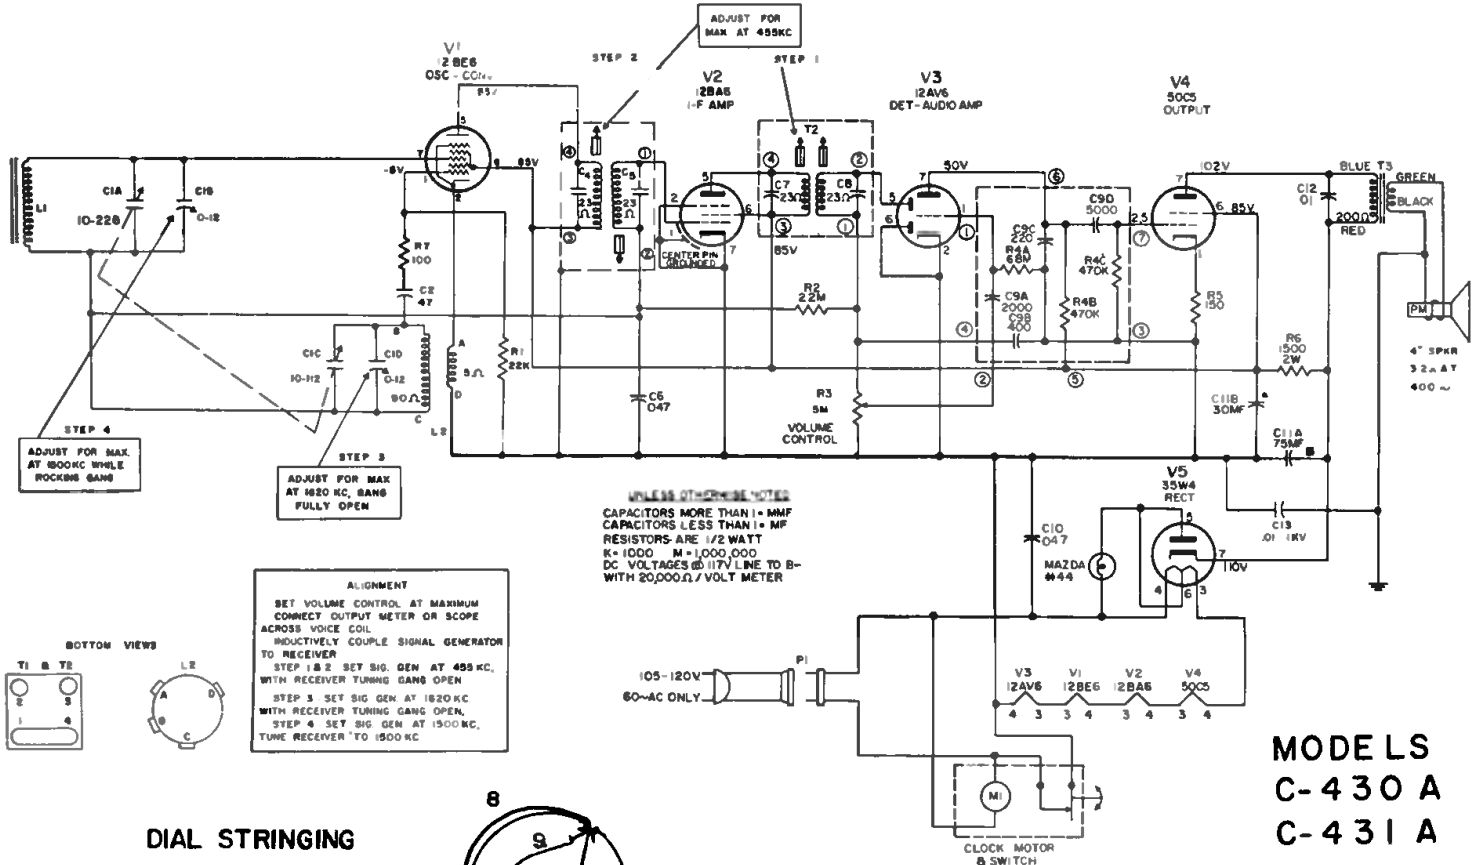

### DIAL STRINGING

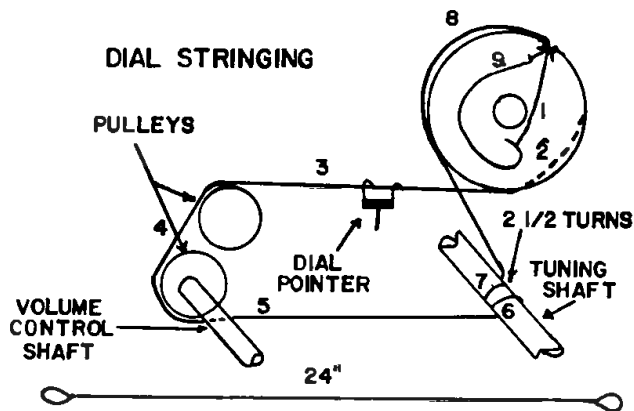

Tube Pin Resistance Chart

	1	2	3	4	5	6	7
12BE6	22k	0	12	24	1500*	1500*	2.7M
12BA6	2.7M	0	24	36	1500*	1500*	0
12AV6	6.8M	0	12	0	500K	0	470K*
50C5	150	470K	36	75	470K	1500*	200*
35W4	TP	TP	75	103	100	100	20K (Min.)

\* Measured from pin 7 of V5.  
All readings unless marked  
are from socket pin to B-

TP Tie Point.

