


# GENERAL ELECTRIC


Models P671A,B, P672A,B, P673A,B, P674B

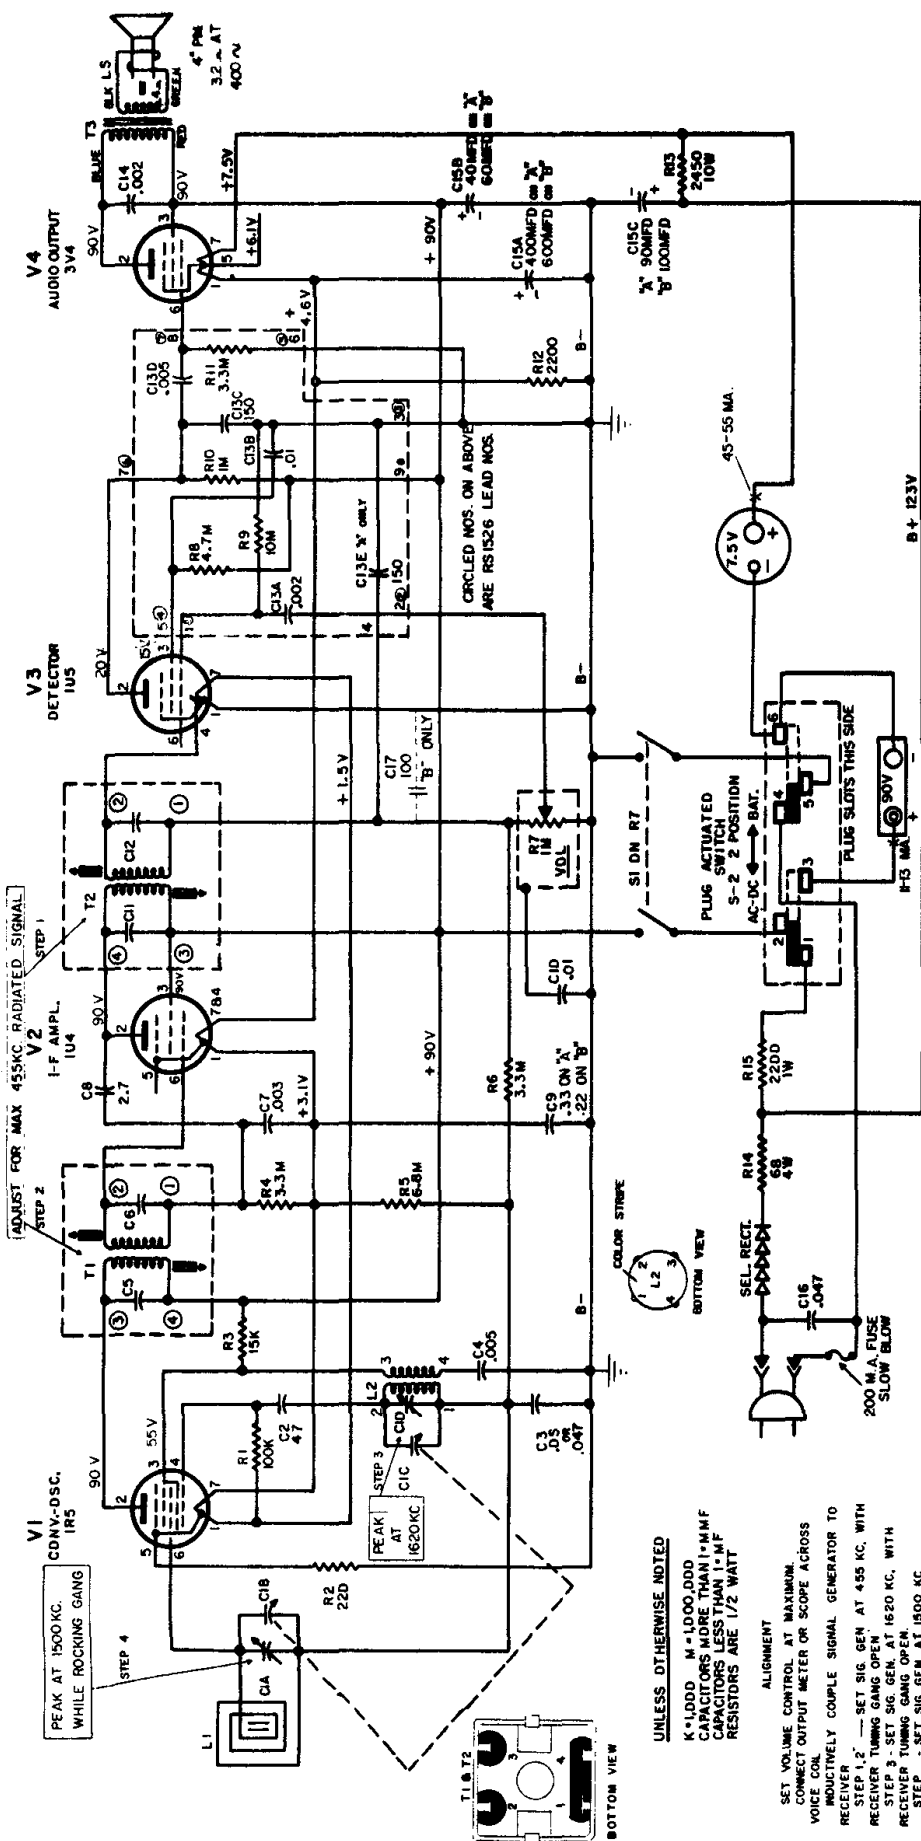

## CHASSIS REMOVAL

The chassis is easily removed by means of the following procedure:

1. Raise up handle and grasp edge of top cabinet front with one hand and cabinet with other hand. Pull firmly to open cabinet.
  2. Pull tuning and volume control knobs straight off control shafts.
  3. Remove the two small Phillips-head screws from the top rear edge of the metal chassis mounting bracket.
  4. Slide chassis and bracket out of cabinet.
  5. Remove bracket from chassis by unscrewing the 1/4" mounting screw from the bracket.
- The power supply chassis is removable from cabinet by removing the four small hex-head mounting screws.

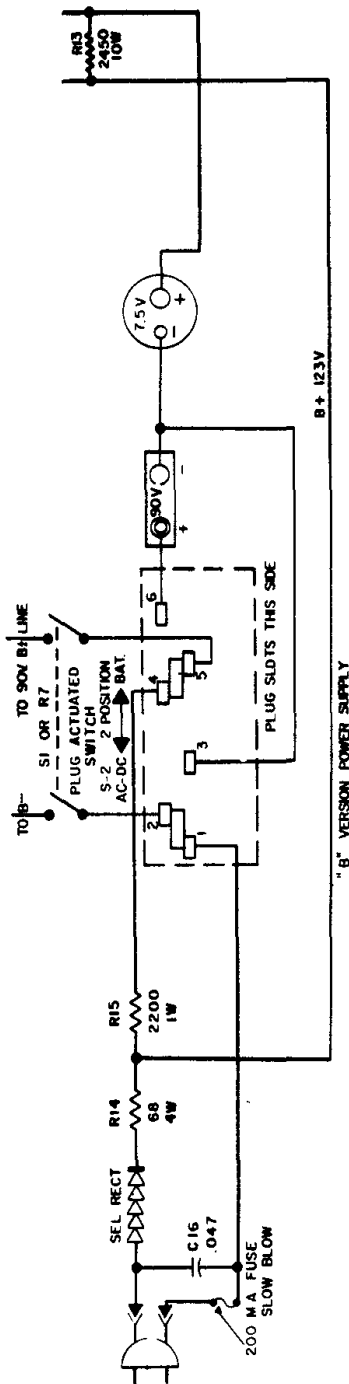

## VOLUME CONTROL REPLACEMENT

The chassis must first be removed from the cabinet as described under CHASSIS REMOVAL, then replace volume control as follows:

Cut off the three control lugs and the four on-off lugs.

Heat the remaining part of the lugs on the circuit board and pull out with long-nose pliers. Clean all mounting holes of all excess solder. Insert new control; then solder all lugs securely in place.