
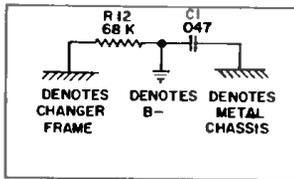


**TO PHASE SPEAKERS**  
PLACE A ONE AND ONE-HALF (1½V) VOLT BATTERY ACROSS THE VOICE COIL WHEN THE SPEAKER CONE MOVES OUT, AWAY FROM THE MAGNET, THE POSITIVE TERMINAL ON THE BATTERY IS THE PLUS SIDE OF THE VOICE COIL AS INDICATED ON SCHEMATIC.

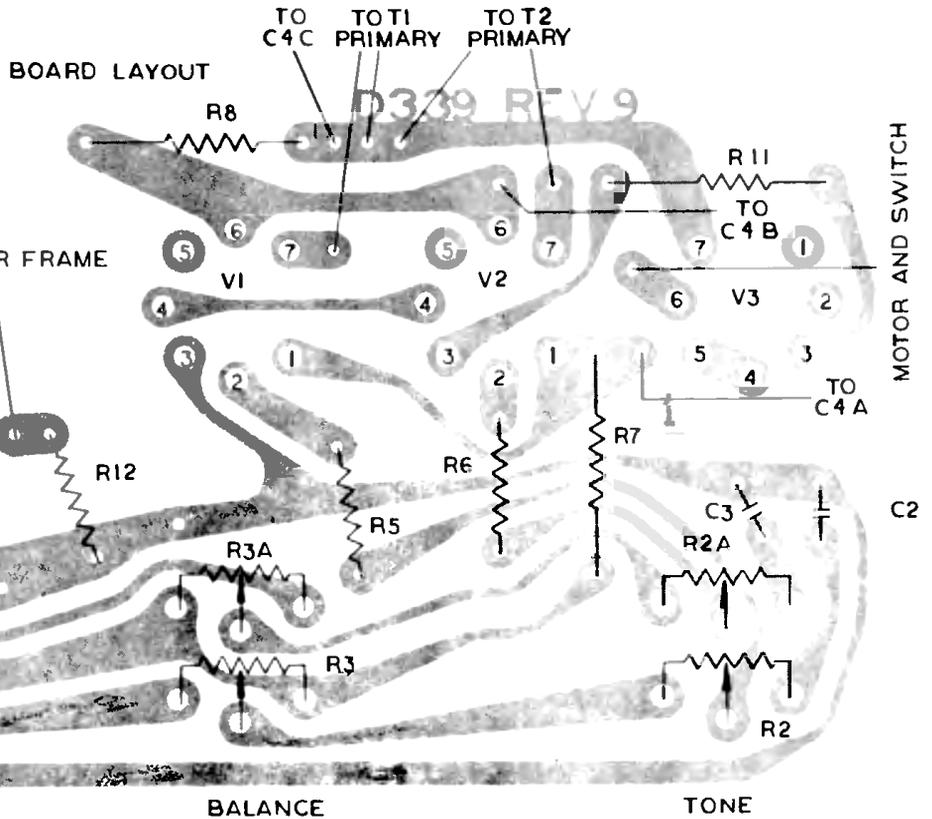

RIGHT CHANNEL

LEFT CHANNEL