


GENERAL ELECTRIC

Models RP1115A, RP1116A

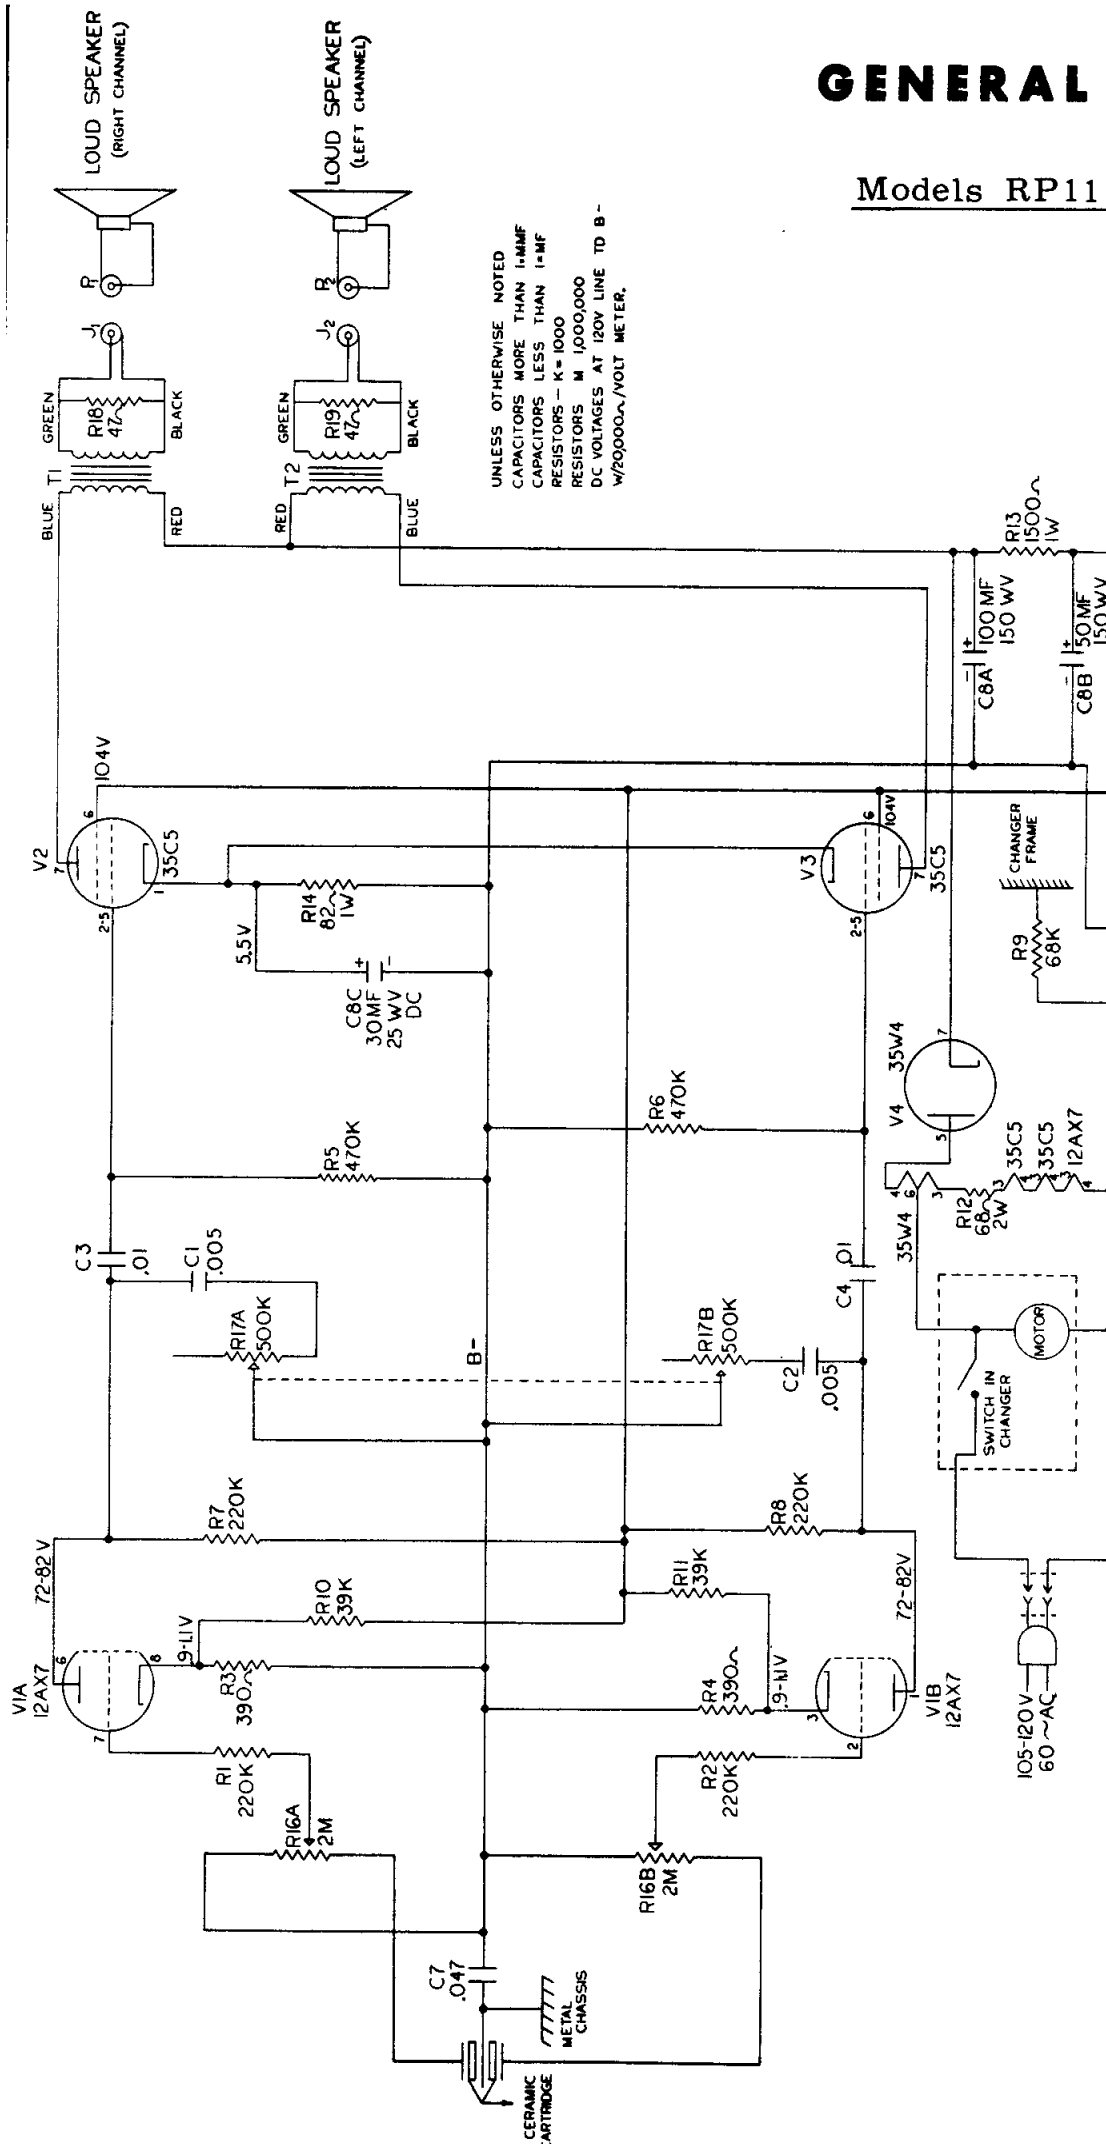

TO REMOVE CHASSIS

1. Remove two screws holding tube access panel; Remove panel.
2. Remove interlock panel.
3. Remove 4 screws holding record changer. Apply an outward pressure on the sides of the case to force the lid guides away from the changer, lift the right side of the changer out. (Replace in the same manner to avoid scratching changer on lid guides.)
4. Set changer upright in the cabinet.
5. Remove the knobs by pulling straight off.
6. Remove 2 nuts that hold the chassis to the cabinet front.

TO REMOVE RECORD CHANGER

7. Remove 2 nuts that hold the chassis to the cabinet bottom.
 8. Slide chassis up and back off the studs, it is not necessary to completely remove the chassis from the cabinet for component replacement.
1. Follow steps 1, 2, 3, 4, in Chassis Removal.
 2. Label and unsolder the signal leads from the terminal board to the chassis.
 3. Remove wire nuts and label AC leads to changer.
 4. Remove changer.