



CHASSIS PARTS LIST

SCHEMATIC LOCATION	PART NUMBER	DESCRIPTION
C1, C6	T16-197	Capacitor, tubular; .05 mfd., 200 v.
C2	T20-143	Capacitor, antenna trimmer
C3, A & B	T19-231	Capacitor, variable; with drum
C4	T15-229	Capacitor, ceramic; 47 mmfd.
C5, C23	T18-304	Capacitor, elec., 30-50 mfd., 150 v.
C7	T15-251	Capacitor, ceramic; 150 mmfd.
C8, C13	T16-189	Capacitor, tubular; .05 mfd., 400 v.
C9	T15-256	Capacitor, mica; 25 mmfd.
C10	T16-150	Capacitor, tubular; .02 mfd., 400 v.
C11	T15-240	Capacitor, ceramic; .02 mfd., 400 v.
C12	T16-200	Capacitor, tubular; .003 mfd., 600 v.
C14, C15, C16, C17		Parts of ceramic coupling units (T17-110)
C18	T16-203	Capacitor, tubular; .1 mfd., 200 v.
C19	T16-447	Capacitor, tubular; .047 mfd., 400 v.
C20	T16-177	Capacitor, ceramic; .005 mfd.
C21, C22	T16-254	Capacitor, tubular; .001 mfd., 600 v.
R1, R5	S602230M	Resistor, 22K ohm, 1/2 w.
R2	S608200K	Resistor, 82 ohm, 1/2 w., 10%
R3	S601050M	Resistor, 1 megohm, 1/2 w.
R4	S604730M	Resistor, 47K ohm, 1/2 w.
R6, R16	S602240M	Resistor, 220K ohm, 1/2 w.
R7, R15	S601060M	Resistor, 10 megohm, 1/2 w.
R8, R9	T24-224	Resistor, variable, dual; ON-OFF VOLUME (1 megohm) TONE (500K ohm)

SCHEMATIC LOCATION	PART NUMBER	DESCRIPTION
R10	S601040M	Resistor, 100K ohm, 1/2 w.
R11, R12, R13, R14		Parts of ceramic coupling units (T17-110)
R17	S601010K	Resistor, 100 ohm, 1/2 w., 10%
R18	T61-10	Resistor, 33 ohm, 3 w., 10%
R19	S601221K	Resistor, 1200 ohm, 1 w., 10%
L1	T82-72	Antenna
L2	T10-645	Coil, oscillator
T1	T10-500	Transformer, 1st I.F.
T2	T10-479	Transformer, 2nd I.F.
T3	T80-295	Transformer, Output
S1, A & B	T69-203	Switch, RADIO-PHONO
	T72-89	Bushing, dial cord
	T17-110	Ceramic coupling unit (2)
	T21-203	Cover, Selenium Rectifier
	T23-151	Cord, Power Line, 6 Ft.
	T37-163	Insulator, Selenium Rectifier
	T58-111	Pointer
	T83-780	Selenium rectifier (100 MA)
	T68-43	Socket, 7 pin miniature
	T68-41	Socket, Phono pick up
	T22-142	Socket, Phono motor
	T70-135	Spring, dial cord tension
	T51-109	String, pointer drive