


ELECTRICAL PARTS

PART NUMBER	DIAGRAM NUMBER	DESCRIPTION	PART NUMBER	DIAGRAM NUMBER	DESCRIPTION
W500911	L1	Coil, Loading	W10559	R7 to R8	Resistor, Carbon 470,000 Ohm 1/2 Watt
W501042	L2	Coil, Short Wave Antenna	W10564	R9 to R11	Resistor, Carbon 100,000 Ohm 1/2 Watt
W501043	L3	Coil, Oscillator (B.C. & S.W.)	R12	R12	Resistor, Carbon 180 Ohm 1/2 Watt
W501153	L4	Dial Light Bulb, 6.3 Volt (max. 44u)	R13	R13	Resistor, Wire Wound, 220 Ohm 1 Watt
W10629	C1 to C4	Condenser, mica, 110 Mfd.	R14	R14	Resistor, Insulated 680 Ohm 1/2 Watt
W3783	C5	Condenser, mica, .0042 Mfd.	R15	R15	Resistor, Carbon 10,000 Ohm 1 Watt
W8587	C6	Condenser, mica, .002 Mfd.	R16	R16	Resistor, Carbon 10,000 Ohm 1/2 Watt
W10510	C7	Condenser, wire 3 Mfd.	R17	R17	Resistor, Carbon 10,000 Ohm 1/2 Watt
W116819	C8	Condenser, .05 Mfd. 600 Volt.	R18	R18	Resistor, Carbon 10,000 Ohm 1/2 Watt
W19132	C9	Condenser, .01 Mfd. 600 Volt.	R19	R19	Resistor, Carbon 10,000 Ohm 1/2 Watt
W19143	C10	Condenser, .02 Mfd. 600 Volt.	R20	R20	Resistor, Carbon 20 Ohm 1/2 Watt
W19144	C11 to C18	Condenser, Push Button Trimmer (.750-1275 KC)	R21	R21	Resistor, 55,000 Ohm 2 Watt.
W19243	C19 to C24	Condenser, Push Button Trimmer (900-1600 KC)	R22	R22	Resistor, Carbon 20 Ohm 1/2 Watt
W19244	C25 to C28	Condenser, Push Button Trimmer (540-1000 KC)	R23	R23	Resistor, Carbon 20 Ohm 1/2 Watt
W19245	C29	Condenser, Electrolytic	R24	R24	Resistor, Carbon 20 Ohm 1/2 Watt
W19924	C30 to C35	Condenser, Electrolytic	R25	R25	Resistor, Carbon 20 Ohm 1/2 Watt
W501057	C36	Condenser, Electrolytic	R26	R26	Resistor, Carbon 20 Ohm 1/2 Watt
W501060	C37	Condenser, Electrolytic	R27	R27	Resistor, Carbon 20 Ohm 1/2 Watt
W501067	C38	Condenser, Electrolytic	R28	R28	Resistor, Carbon 20 Ohm 1/2 Watt
W501068	C39	Condenser, Electrolytic	R29	R29	Resistor, Carbon 20 Ohm 1/2 Watt
W19417	C40	Condenser, .006 Mfd. 600 Volt	R30	R30	Resistor, Carbon 20 Ohm 1/2 Watt
W110552	R1 to R2	Resistor, Carbon 47,000 Ohm 1/2 Watt	R31	R31	Resistor, Carbon 20 Ohm 1/2 Watt
W110553	R3	Resistor, Carbon 220,000 Ohm 1/2 Watt	R32	R32	Resistor, Carbon 20 Ohm 1/2 Watt
W110554	R4 to R5	Resistor, Carbon 1 Megohm 1/2 Watt	R33	R33	Resistor, Carbon 20 Ohm 1/2 Watt
W110557	R6	Resistor, Carbon 4700 Ohm 1/2 Watt	R34	R34	Resistor, Carbon 20 Ohm 1/2 Watt
W501068	S1	Switch, Push Button	R35	R35	Resistor, Carbon 20 Ohm 1/2 Watt
W501182M	T1	Transformer, Output for W501170M Spkr.	R36	R36	Resistor, Carbon 20 Ohm 1/2 Watt
W119024	T2	Transformer, 1st I.F.	R37	R37	Resistor, Carbon 20 Ohm 1/2 Watt
W500801	T3	Transformer, Power 60 Cycles	R38	R38	Resistor, Carbon 20 Ohm 1/2 Watt
W501044	T4	Transformer, Power 25 Cycles	R39	R39	Resistor, Carbon 20 Ohm 1/2 Watt
W501301		Crystal Cartridge for Tone Arm	R40	R40	Resistor, Carbon 20 Ohm 1/2 Watt
W501238		Crystal Cartridge for Tone Arm	R41	R41	Resistor, Carbon 20 Ohm 1/2 Watt

DIAL CORD
CHASSIS VIEWED FROM FRONT
SET POINTER TO LOW
FREQUENCY END OF
DIAL SCALE WITH GANG
IN FULL MESH (DRUM IN
POSITION SHOWN).

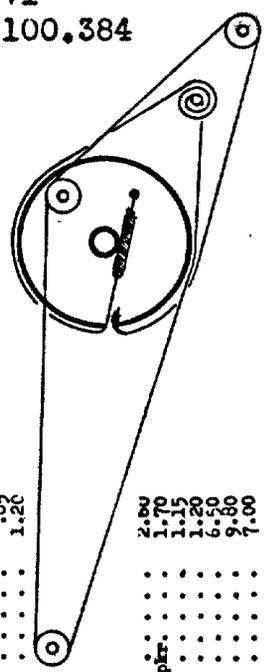

NOVEMBER 3, 1941