


SentinelRadio

1U338-W, 1U338-I, 1U338-R,

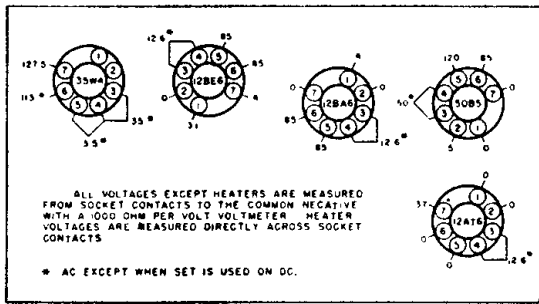


(BOTTOM VIEW OF CHASSIS)

NOTE 1: Connected as shown in Model IU338 only. Loop return connected to A.V.C. at point X in Model 338.

NOTE 2: Items with illustration numbers (21) and (22) used in IU338 only. Loop and gang connected directly to pin #7 on 12BE6 in Model 338.

TO SERVICE TUBES, it is necessary to remove the cabinet back by gently pulling out the two trimount studs, used to hold the back to the cabinet, and detaching the two leads from the loop.

Before remounting the back on the cabinet, be sure to properly re-connect these leads. The green-white wire must be attached to the terminal which has the word "GREEN" printed close to it.

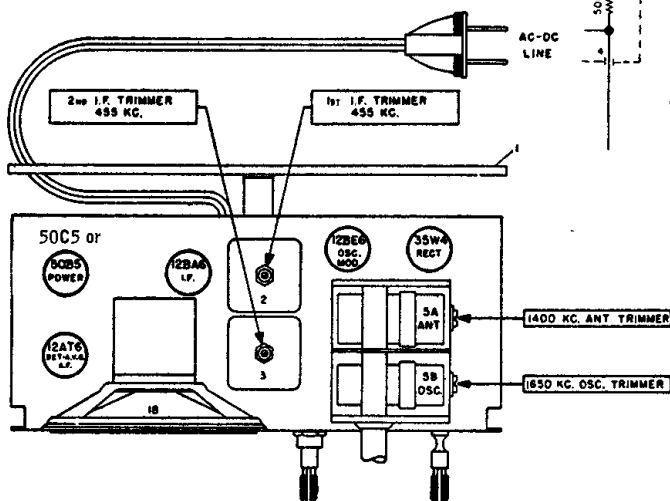

NOTE
50B5 and
50C5 are
Not Inter-
changeable

