


MODEL 10MF SENTINEL RADIO CORP.

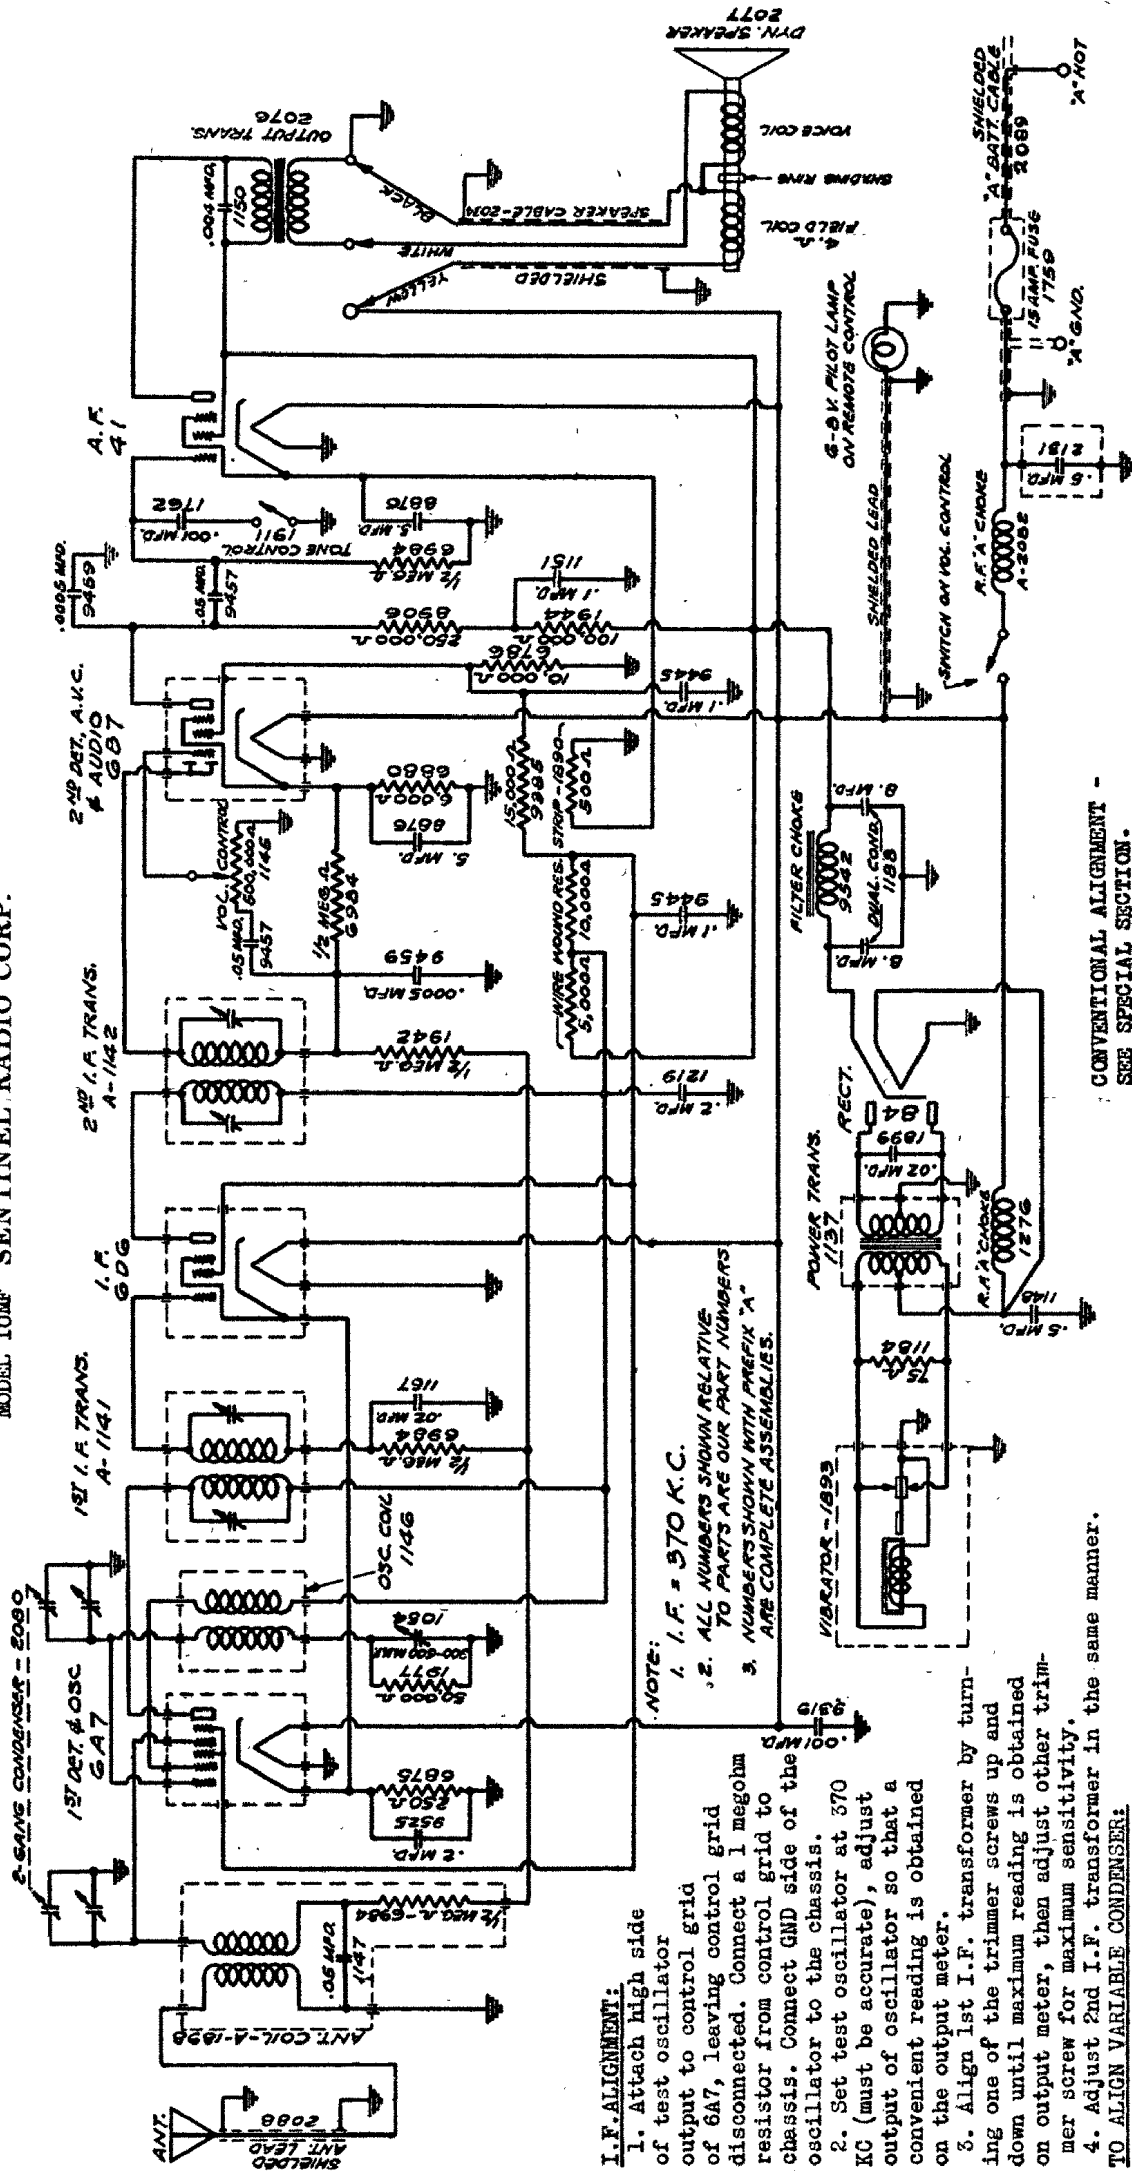

CONVENTIONAL ALIGNMENT -  
SEE SPECIAL SECTION.

## VOLTAGE TABLE

| TYPE OF TUBE | POSITION OF TUBE         | FILAMENT VOLTS | PLATE VOLTS | CATHODE VOLTS | SCREEN VOLTS | GRID NO. 1 | GRID NO. 2 & 5 |
|--------------|--------------------------|----------------|-------------|---------------|--------------|------------|----------------|
| 6A7          | OSCILLATOR AND MODULATOR | 6              | 180         | 3-6           |              | 180        | 75             |
| 606          | INTERMEDIATE FREQUENCY   | 6              | 180         | 3-6           | 75           |            |                |
| 6B7          | 2ND DETECTOR DIODE & AVC | 6              | 32*         | 1-9           | 50*          |            |                |
| 6L1          | OUTPUT                   | 6              | 220         | 15            | 230          |            |                |
| 84           | RECTIFIER                | 6              |             | 230           |              |            |                |

\* COMPARATIVE VOLTAGE ONLY. READ ALL VOLTAGES FROM SOCKET TO CHASSIS. TOTAL "A" CURRENT 5.9 AMPERES.

COMPARATIVE VOLTAGE ONLY. READ ALL VOLTAGES FROM SOCKET TO CHASSIS. TOTAL "A" CURRENT 5.9 AMPERES.