

MODEL 49B



CONVENTIONAL ALIGNMENT - See special section.

Peak I-F trimmers at 465 KC. BROADCAST BAND - Dial and generator at 1720 KC, adjust exciter (rear section of gang condenser) trimmer to peak. Dial and generator to 1400 KC, peak the antenna trimmer (Front section of gang condenser from front of chassis). SHORTWAVE BAND - Dial and generator at 2.6 MC, adjust antenna trimmer to peak. No peaking required on this band. After trimming adjustments adjust wave trap to 465 KC.

**BOTTOM VIEW OF CHASSIS SHOWING LOCATION OF
BEARERS & TIMBERS**