



SCHEMATIC DIAGRAM

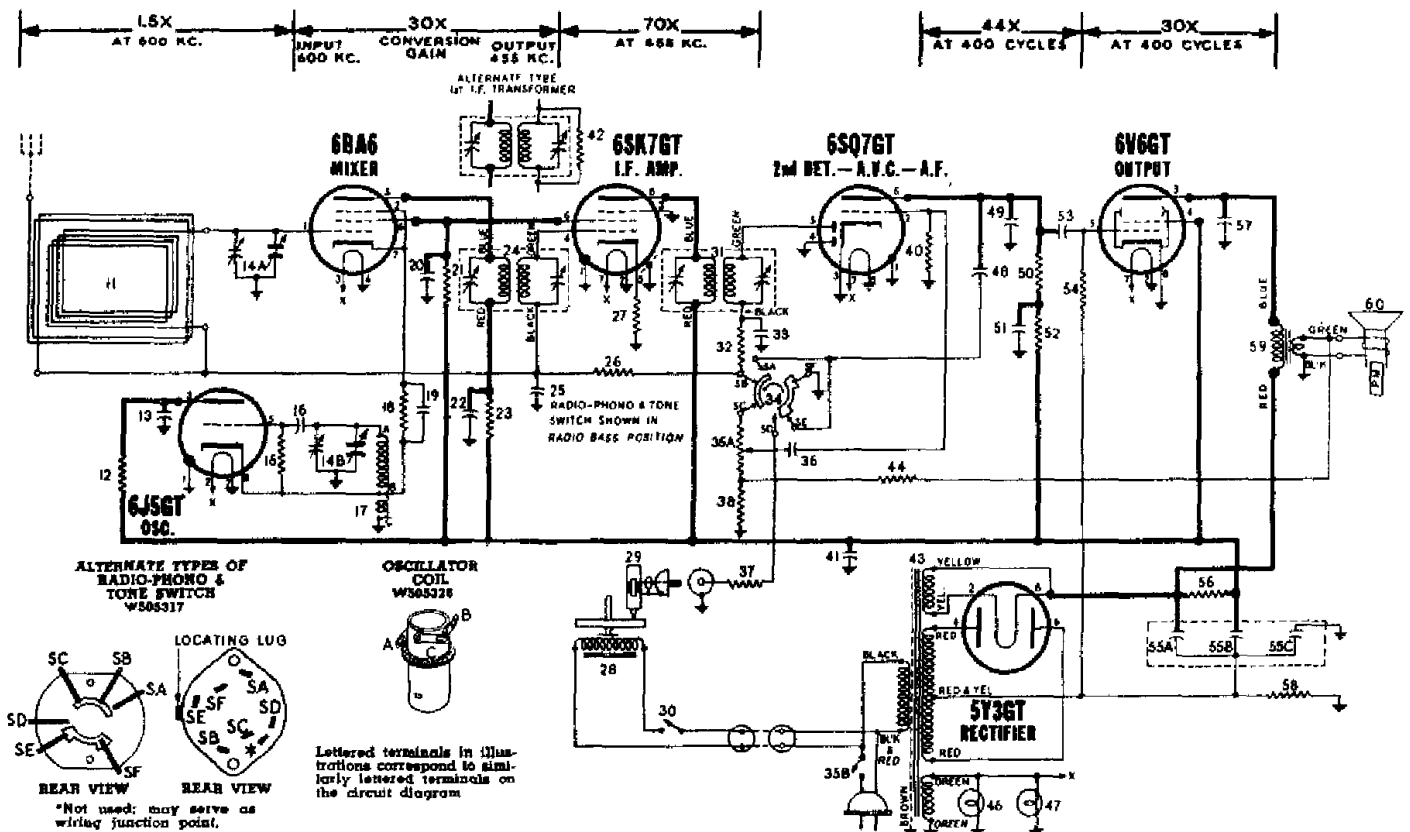

DIAL POINTER DRIVE CORD  
ARRANGEMENT  
(Side View)

To string dial cord, set gang condenser to fully open position and use the following parts:


W114955 Clip on end of cord  
W117057 Cord (3 feet)  
W119087 Ring for dial cord  
W505161 Tension spring

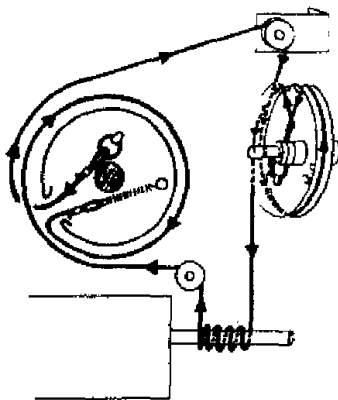

### SOCKET VOLTAGES

Measured with voltmeter having sensitivity of 1000 Ohms per volt except where indicated by (\*). The (\*) symbol designated a vacuum tube voltmeter measurement.

DIAL TUNED TO 540 KC.  
VOLUME ON FULL WITH NO SIGNAL  
RADIO-PHONO & TONE SWITCH IN  
"RADIO-BASE" POSITION

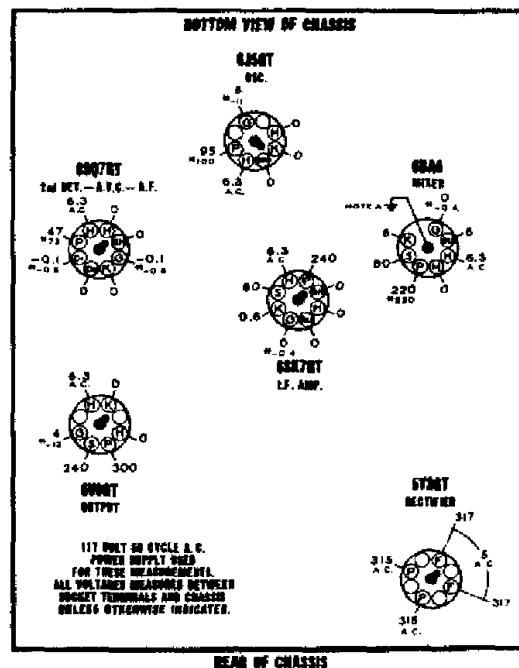

To replace and properly position pointer see step 1 in "Alignment Procedure"

NOTE A: Grounding of center stud on tube socket is necessary to reduce capacity coupling between other pins. Oscillation may result if this ground is omitted.