


MODEL 7900

Ch.126.233

Export

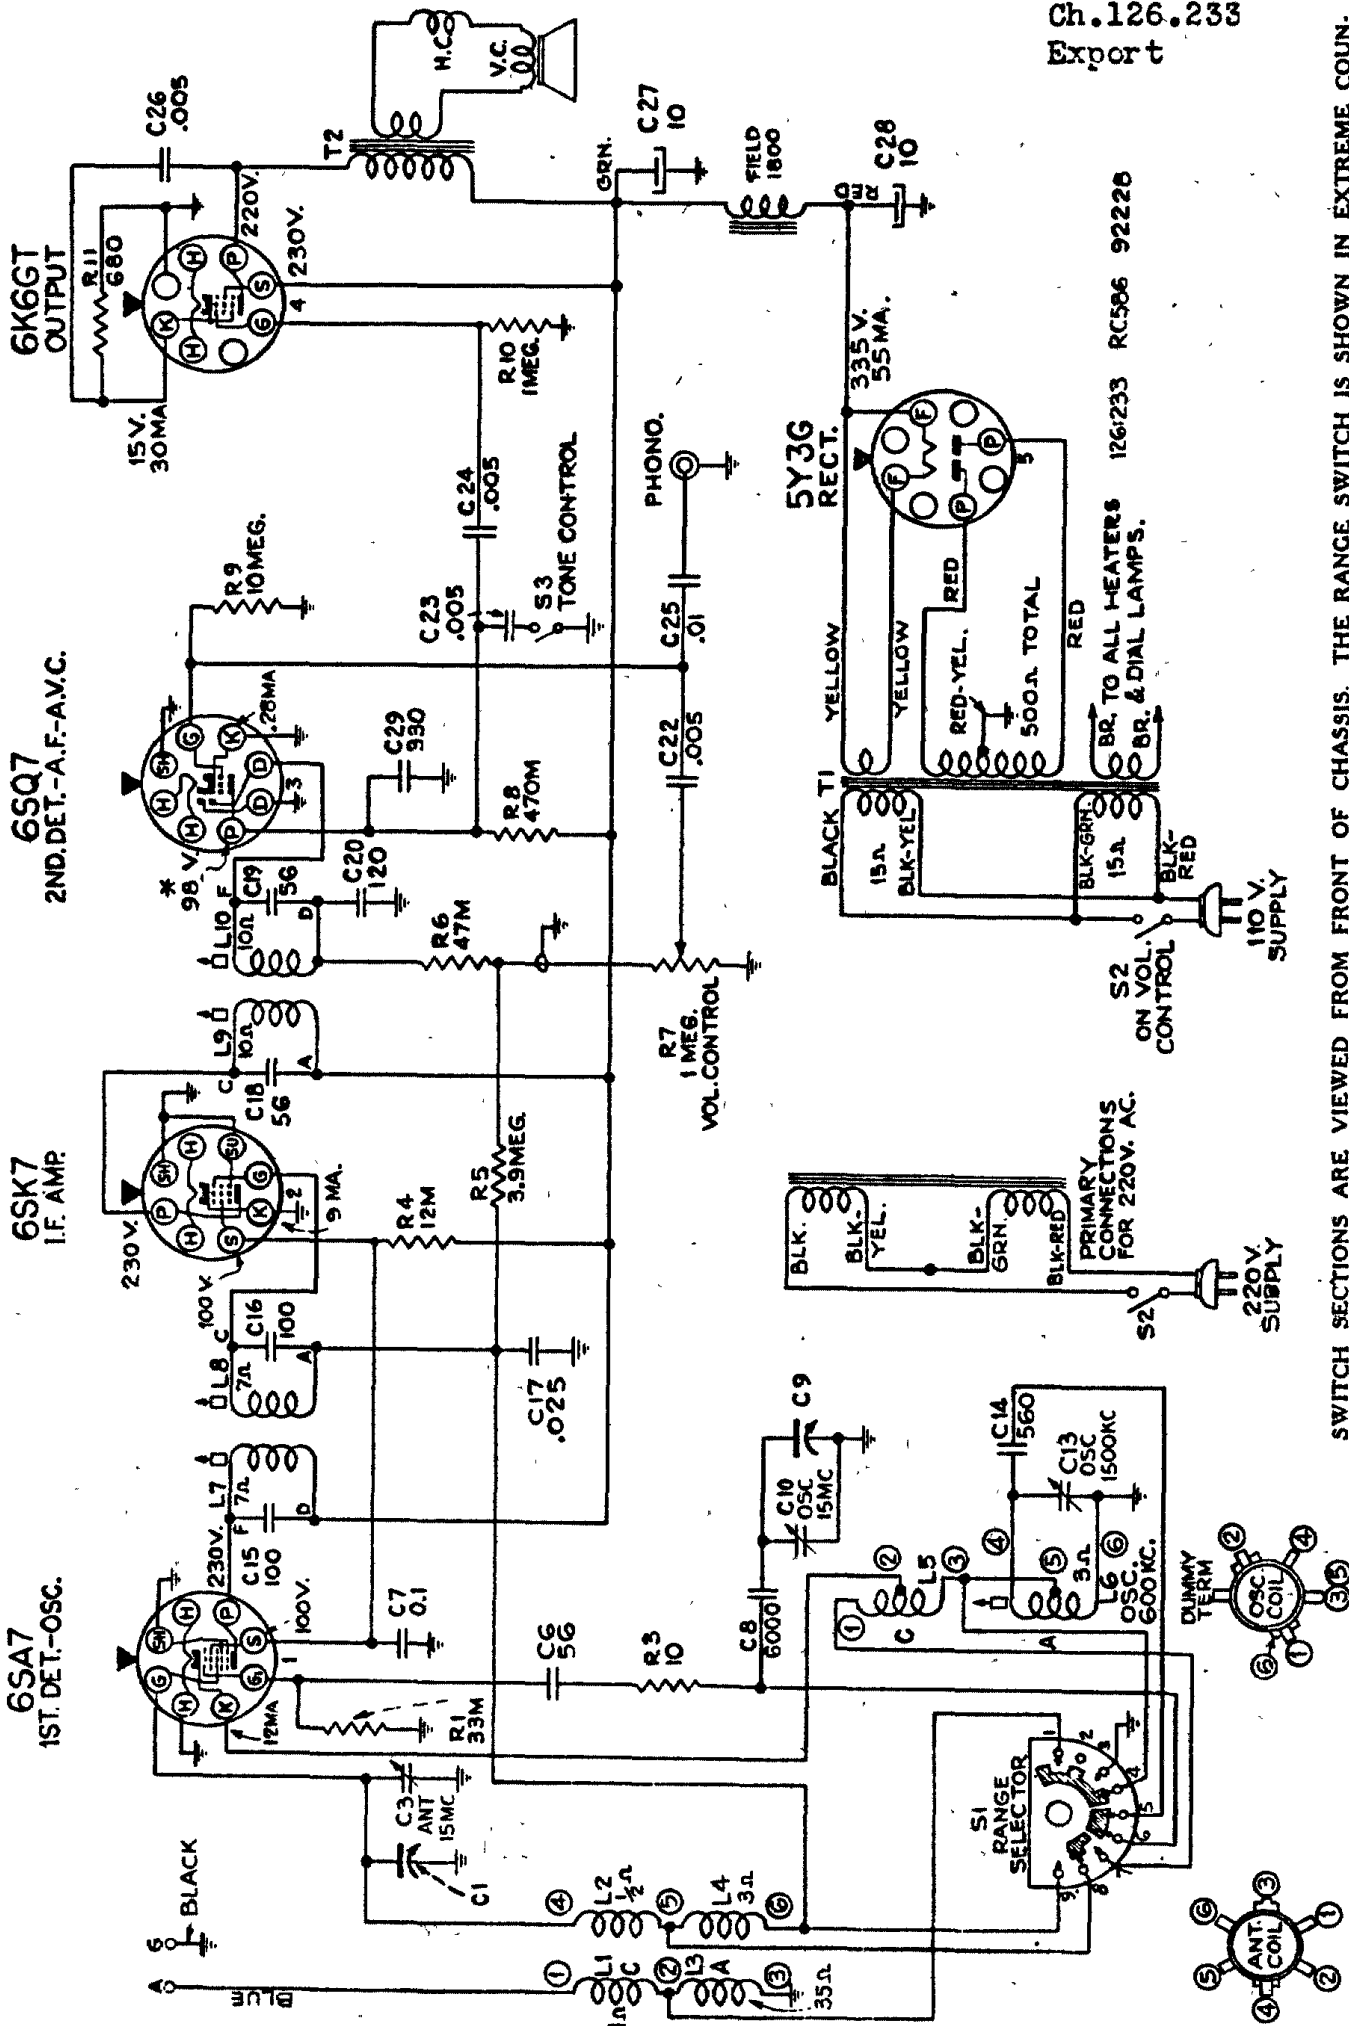

SWITCH SECTIONS ARE VIEWED FROM FRONT OF CHASSIS. THE RANGE SWITCH IS SHOWN IN EXTREME COUNTERCLOCKWISE POSITION, WHICH IS THE BROADCAST BAND POSITION. TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES TO BE MEASURED WITH NO SIGNAL. FIGURES AT CATHODES ARE CATHODE CURRENTS IN MILLIAMPERES. VOLTAGES WITH STAR (\*) ARE ACTUAL OPERATING VOLTAGES IN HIGH RESISTANCE CIRCUITS, MEASURED WITH ELECTRONIC VOLTMETER.