



TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS ARE TO FLOATING GROUND AND ARE TAKEN WITH NO SIGNAL.

## ALIGNMENT DATA

With variable condenser closed set pointer horizontal.

Position of Variable	Generator Frequency	Dummy Ant.	Generator Connection (high)	Generator Connection (low)	Adjust Trimmers (In order shown)	Trimmer Function
Open	455 Kc	.05 mfd	Mixer grid	Float. Gnd.	T2-T1	I-F
1400	1400	50 mmfd	Ant. clip	Chassis	C3-C2-C1	Osc.-Mixer R-f

NOTE: Trimmer C3 (oscillator) is located either above or below, depending upon the type of variable condenser used in any particular receiver.

