



Δ - PART OF T1
 * - PART OF T2

SCHEMATIC LOCATION **PART NUMBER**

DESCRIPTION

R57145	Antenna - Package
R57037	Board - Antenna
R13961	Button - Snap
R57045	Cable - Battery
C4, C5, C8 C12, C18	Capacitor - .01 mfd. - 200 V.
C10, C14	Capacitor - .05 mfd. - 200 V.
C22, C17	Capacitor - .001 mfd. - 600 V.
C20	Capacitor - .005 mfd. - 400 V.
C19, C11	Capacitor - Mica - 50 mmfd.
C7	Capacitor - Mica - 100 mmfd.
C1	Capacitor - Mica - 150 mmfd.
C21	Capacitor - Mica - 250 mmfd.
C3	Capacitor - Silver Mica - 250 mmfd.
C13, C23	Capacitor - Dry Elect. - 10X10 mfd.
C2, C6, C9	Capacitor - Trimmer - 3 Gang
L4	Clip - Drive Cord Anchor
R12	R45255 Coil - Choke - Antenna
	R57071 Control - On-Off, Volume & Tone

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS.
 VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS,
 AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS
 GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

Sears, Roebuck & Co. Chassis 101.801

R20	Resistor - 680 ohms - 1/3 W.
R7	Resistor - 680 ohms - 1/3 W.
R19	Resistor - 820 ohms - 1/3 W.
R18	Resistor - 1800 ohms - 1/3 W.
R6	Resistor - 33000 ohms - 1/3 W.
R4	Resistor - 68000 ohms - 1/3 W.
R8	Resistor - 68000 ohms - 1/3 W.
R5	Resistor - 180000 ohms - 1/3 W.
R1, R2, R15	Resistor - 1 megohm - 1/3 W.
R16, R10	Resistor - 2.2 megohm - 1/3 W.
R3	Resistor - 3.3 megohm - 1/3 W.
R14	Resistor - 6.8 megohm - 1/3 W.
R13	Resistor - 15 megohm - 1/3 W.
R17	Resistor - Flexohm - 0.72 ohm -

