



OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING CONDENSER SETTING	TRIMMERS	REMARKS
1	Set dial pointer even with L.H. stop line with condenser gang fully closed.							
2	I.F.	G.C. 6A8GT	.02 MFD.	456 KC.	BC	OPEN	C9 A & B C8 A & B	Peak Accurately
3	BC	Driver Loop	*	1500 KC. 600 KC.	BC	1500 KC. 600 KC.	C4 Osc.Trim. C5 Ant.Trim. C3 Osc.Pad.	
4	(Repeat Operation #3)							
5	Check Calibration at 600 KC., 1000 KC., and 1500 KC.							
6	S.W.	"A" on Antenna Strip	**	18 MC.	S.W.	18 MC.	C6 Osc.Trim. C7 Ant.Trim. C23 Osc.Pad.	***
7	Osc. padder C23 is percision set at the factory and should not be readjusted in the field.							
8	(Repeat Operation #6)							
9	Check calibration at 6 MC., 11 MC., and 18 MC.							
10	Check Operations 1 to 6 inclusive.							

* Driver Loop.
 ** Standard Dummy.
 *** Rock dial while making this adjustment.

