


SPIEGEL

MODEL 572

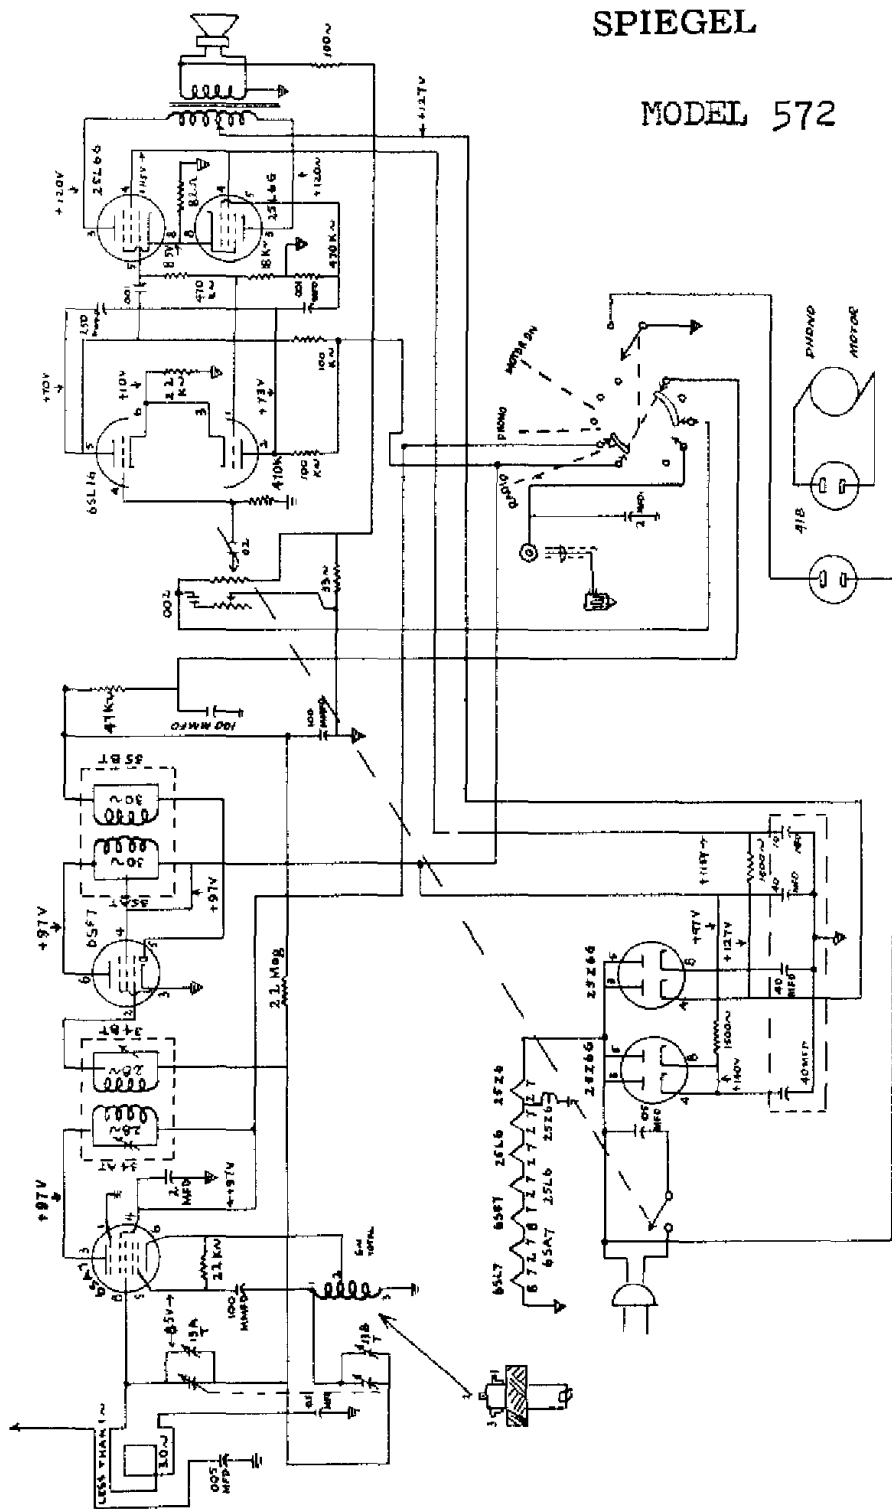

Phono-Radio with automatic record changer for alternating (A.C.) current, of 110 to 125 volts at 60 cycles.

1. The knob marked PHONO-RADIO, controls a three position switch. The extreme counter clockwise position is for radio reception. The center position is for FM reception when desired, to be used with an external F.M. tuning unit.

The extreme clockwise position is for phono reception.

2. The knob marked VOLUME, controls the off and on position of the radio receiver and also acts as a master switch by cutting off the current supply to the record changer.

The unit is turned off when the knob is in the extreme left. (Counter clockwise position).

To turn on, turn this knob to the right (clockwise) until a click is heard. Further rotation adjusts the volume.

3. The knob marked TONE, is the tone control which is of the continuously, variable type and may be placed in the most pleasing position to the listener.

4. The knob marked TUNING, is for dialing the broadcast stations.