 


MODEL 1831



1. Select six favorite nearby broadcast stations and detach the corresponding call letter tabs from the station call letter tab sheets.
2. Any tab may be used for any button, but it is usually more convenient for the operator if the tabs are arranged in sequence so that the tab for the lowest frequency station (station having lowest number of kilocycles [K. C.]) will be at the low frequency end of the dial.
3. Using a small screwdriver or other tool that will fit the screw in the end of the button, push the button in as far as it will go and turn to the right or left until the dial pointer has moved to the desired station frequency. Be sure the button is pushed all the way in and the station is tuned in accurately.
4. Repeat the procedure in Paragraph 3 for each of the remaining five buttons.
5. Check all buttons by pushing them in, one at a time, to determine whether desired stations are tuned properly.
6. Insert the proper tab in each button by pressing it in position.
7. Any of the six stations to which the push-button tuner has been adjusted may now be received simply by pushing the button for the desired station.