


SIMPLEX RADIO CO.

MODEL P 32 V Above 350001

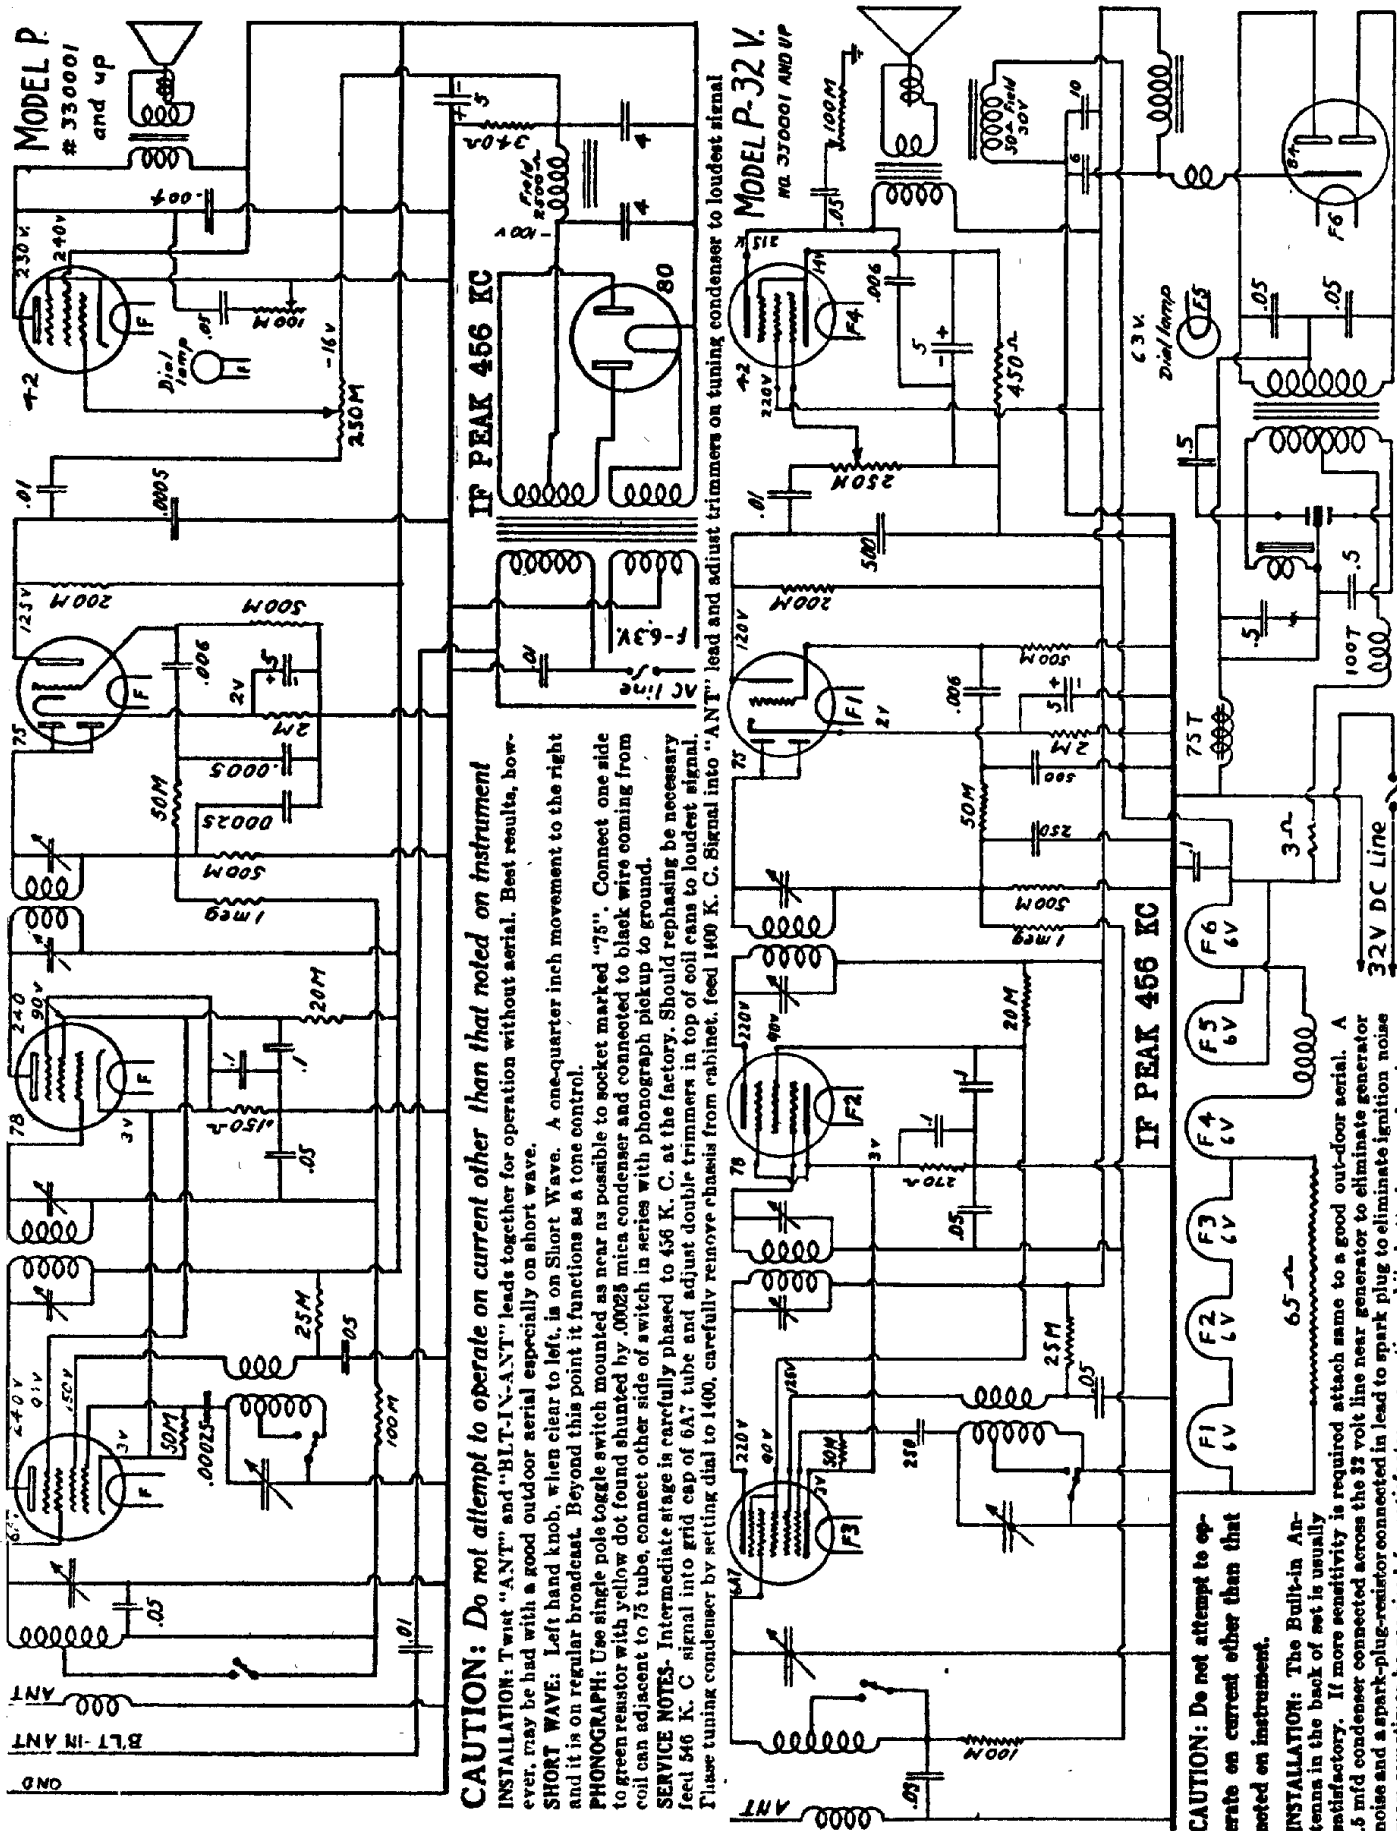

USE NO GROUND CONNECTION ON SET. SHORT WAVE: Left hand knob, when clear to left, is on Short Wave. A one-quarter inch movement to the right and it is on regular broadcast. Beyond this point it functions as a tone control. **PHONOGRAPH:** Use single pole toggle switch mounted as near as possible to socket marked "5". Connect one side to green resistor with yellow lead, other side to ground. Connect other side of switch to 75 tube, connect other side of switch in series with phonograph pickup to ground. **SERVICE NOTES:** Intermediate stage is carefully phased to 456 K. C. at the factory. Should rephasing be necessary feed 456 K. C. signal into grid cap of 6A7 tube and adjust double trimmers in lead and adjust trimmers on tuning condenser to loudest signal. Phase tuning condenser by setting dial to 1400. carefully remove chassis from cabinet, feed 1400 K. C. Signal into "ANT" lead and adjust trimmers on tuning condenser to loudest signal.