

CHASSIS: 802-5
MODELS: SC721,SC724 SERIES



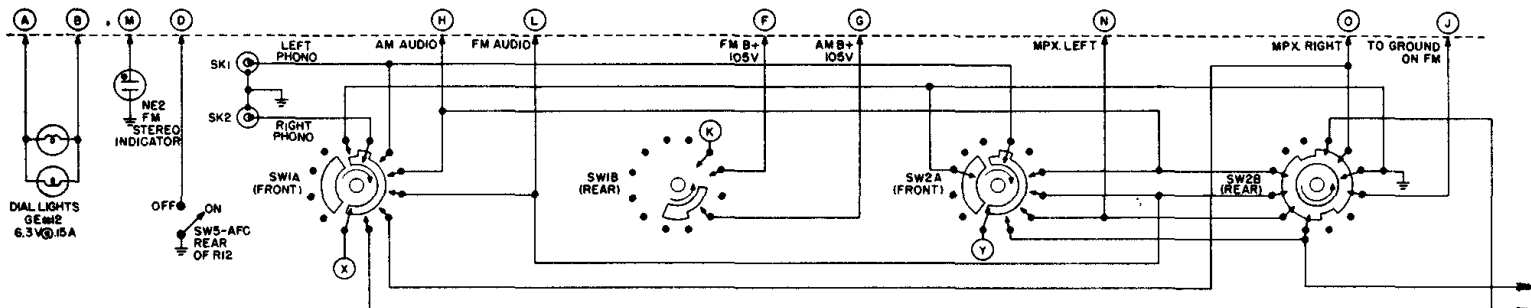


DIAGRAM 802-5

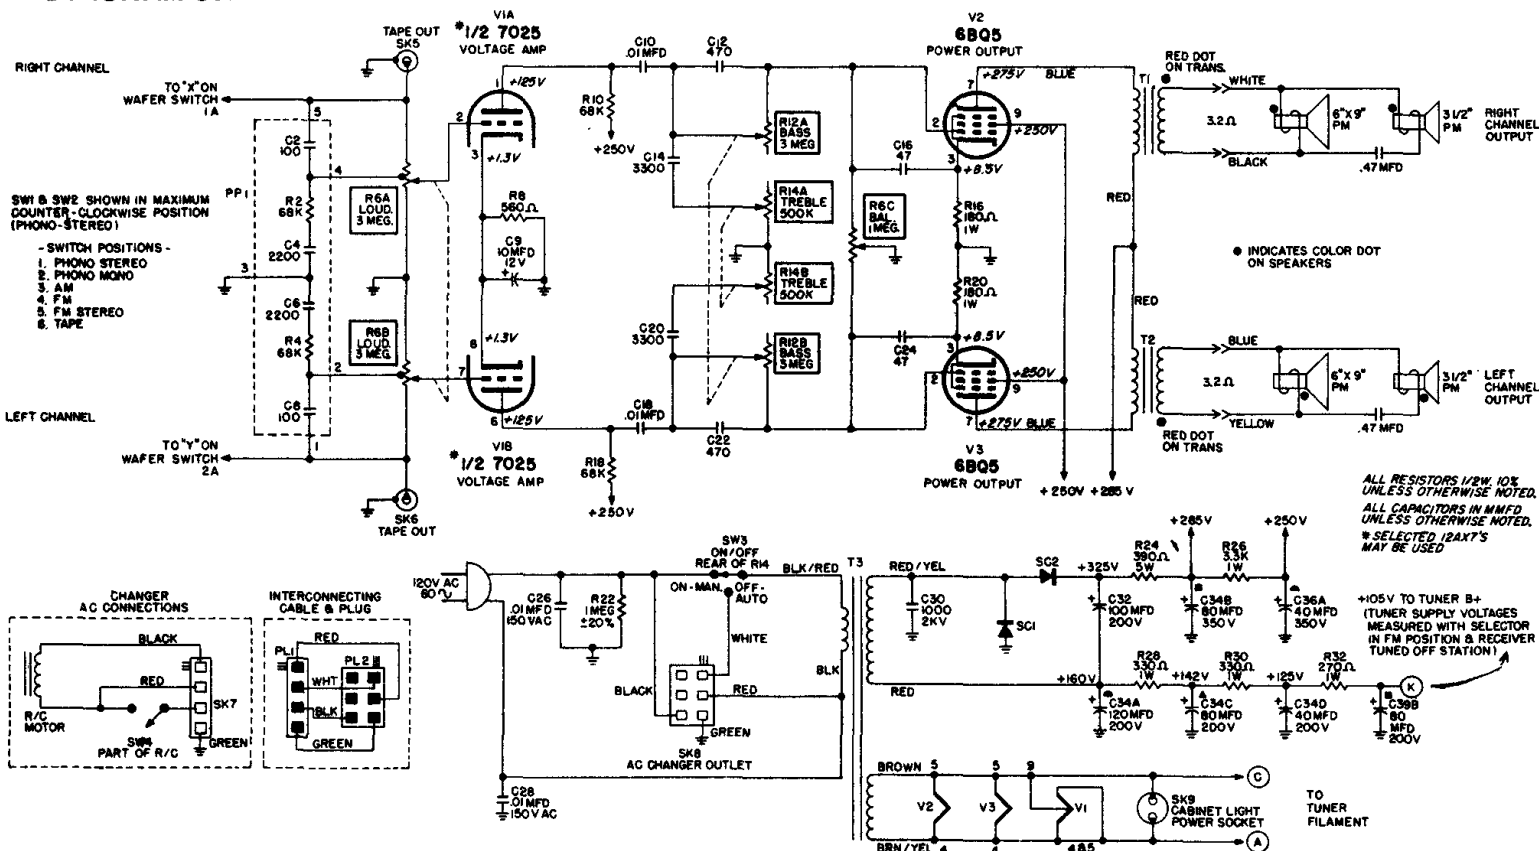

TOP PARTS LAYOUT (371-1)

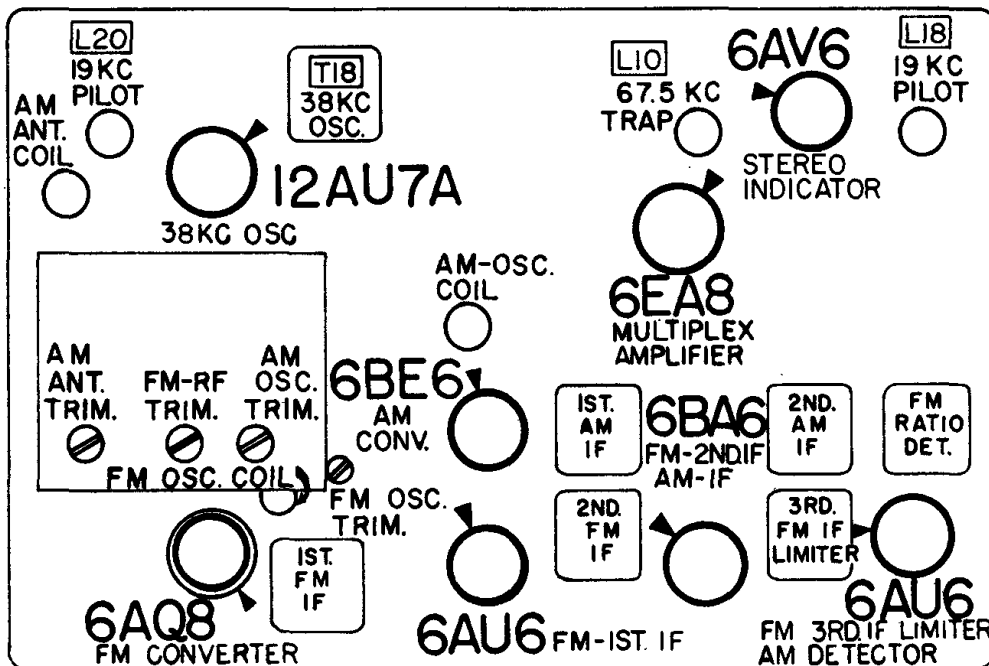

CHASSIS REMOVAL

1. Disconnect AC power cord from power outlet.
2. Remove screws securing backcover to cabinet; remove back-cover.
3. Identify and disconnect the following:
 - A. Speaker leads at output transformer.
 - B. Record changer motor plug on chassis.
 - C. Phono input leads on chassis.
 - D. Antenna lead connections on antenna terminal board.
 - E. Jewel indicating light connector at bottom rear of chassis.
4. Remove screw anchoring AC line cord to the inside of the base of the cabinet.
5. Remove the two (2) screws securing antenna terminal board to cabinet.
6. Remove control knobs on the control panel by pulling straight up.
7. Remove seven (7) screws securing chassis to cabinet and remove chassis from cabinet.