



MODEL AC84,85

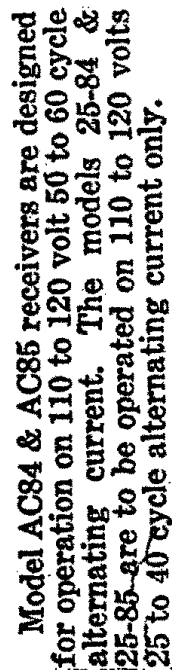

In the Model 84 & 85 receivers power is turned on by turning the right hand knob over to the right. Tone is controlled by turning the same knob continuously over to the right. The bass position being reached when the control is all the way over. Treble tone is obtained by turning the knob back over to the left. Volume is controlled by turning the left hand knob.

Models AC-84, 25-84, AC-85, 25-85, 120 (1931)

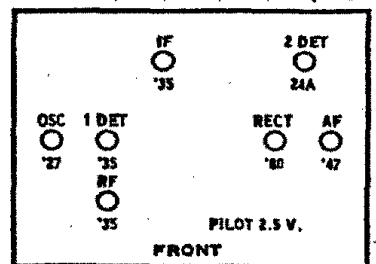

No.	Stage	Type Tube	A Volts	B Volts	Cont. Grid Volts	Cath. Volts	Ip Norm.	SG Volts
1	r. f.	51	2.1	255	3.5	3.5	3.5	.78
2	1st Det.	51	2.1	240	10.	10.	2	108
3	Osc.	27	2.1	135	0	0	6.	0
4	I. F.	51	2.1	250	3.5	3.5	3.5	77
5	2nd det.	24	2.2	190	6.0	6.0	.2	68
6	Output	47	2.2	228	14.	0	25	255
7	Rect.	80	4.4		0	0		0

Volume control position Full

Line Voltage 115

Note: Since resistance tolerances in the sets are plus or minus 10%, and tubes may vary over 20%, your readings may disagree with the above by plus or minus 30%.