 




NOTES:
Capacitors - Decimal values in MF, all others in MMF unless otherwise specified.

Voltages - Measured from point indicated to ground with a VTVM. No signal input. Input voltage - 117 AC ± 10%.

Tuning Range - 535 to 1620 KC.
IF - 455 KC.



 L2 Connections

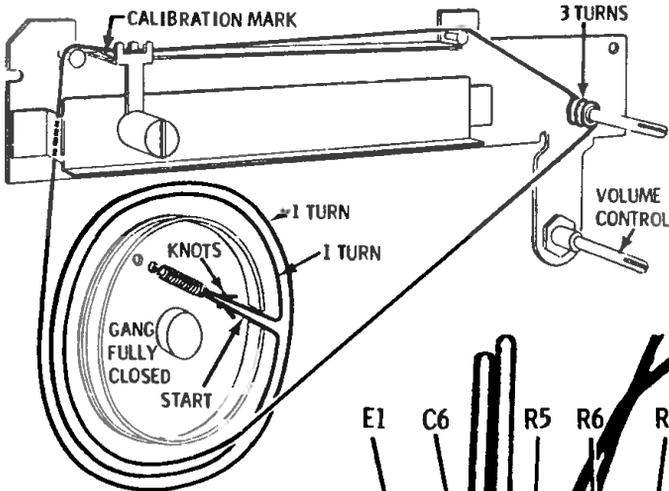

DIAL STRINGING

- MODELS
57H1 Ebony
57H2 White
57H3 Green
57H4 Blue

CHASSIS
HS-523

DISASSEMBLY INSTRUCTIONS

1. Pry rear cover off with a small screwdriver by inserting screwdriver between cabinet and top center edge of cover. Care should be taken not to damage cabinet with screwdriver.
2. Pull knobs off from front of receiver.
3. Compress mounting bracket and slide ON-OFF switch and pilot light assembly from retaining slots in cabinet.
4. Remove screw from interlock plug and remove interlock plug.
5. Remove three screws which hold chassis in cabinet.

