


MOTOROLA

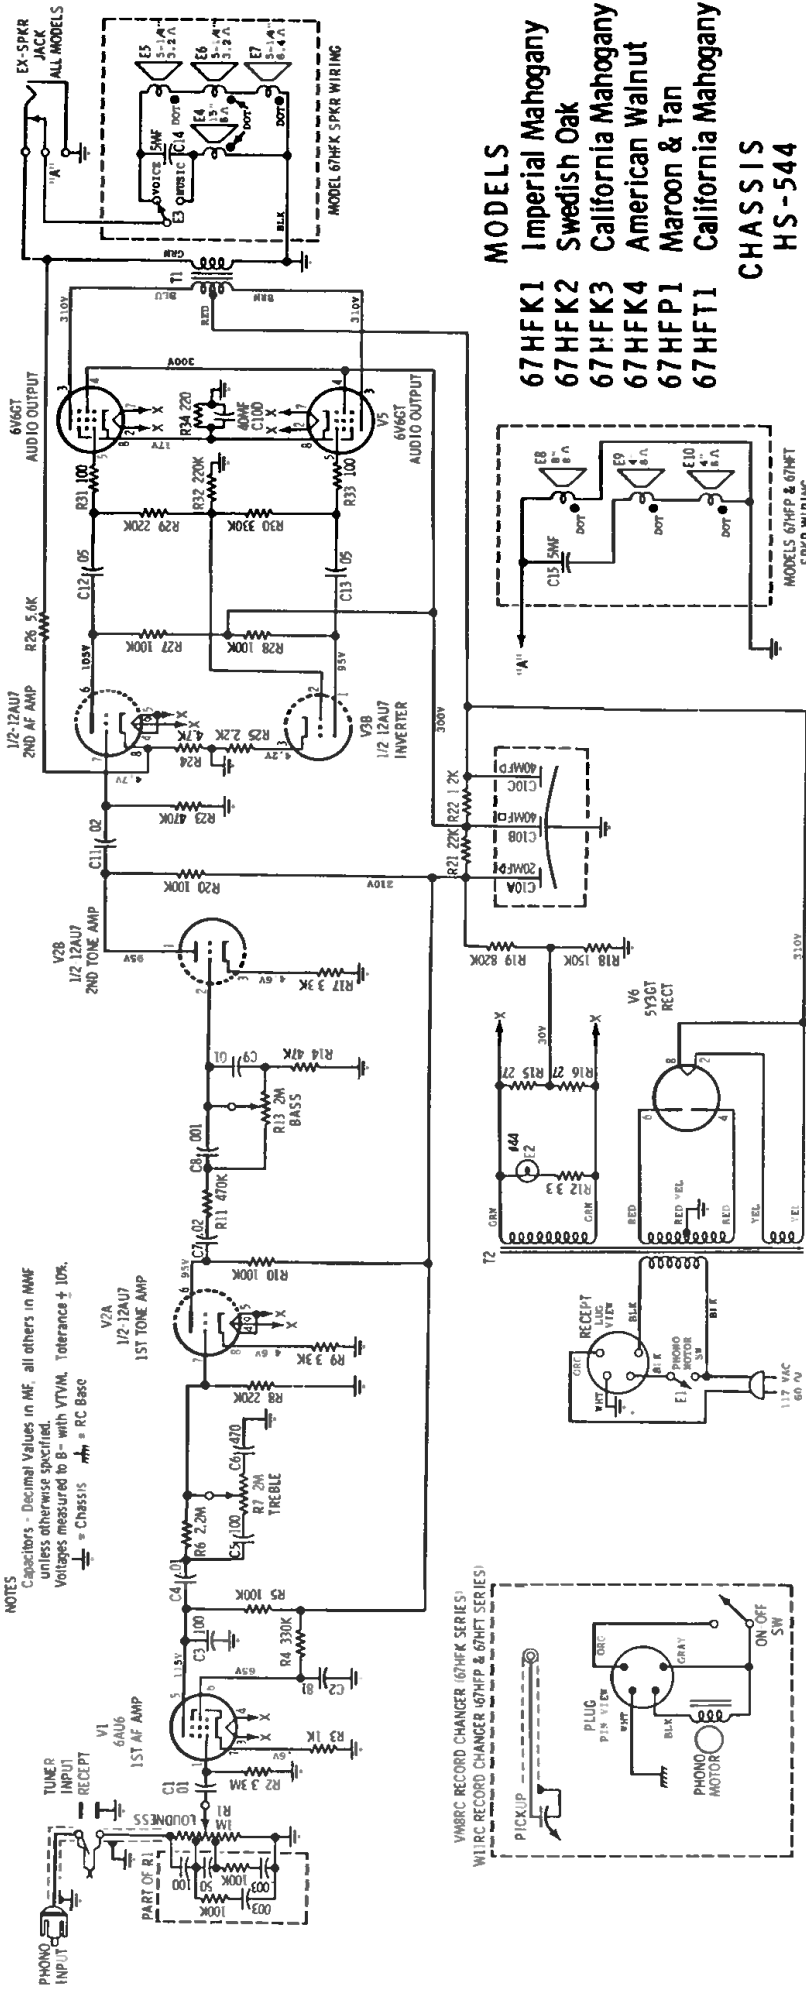

MODELS

67HFK1 Imperial Mahogany
67HFK2 Swedish Oak
67HFK3 California Mahogany
67HFK4 American Walnut
67HFP1 Maroon & Tan
67HFT1 California Mahogany

CHASSIS

HS-544

EX-SPKR
JACK

R10 C1 R1 C4--V2 R8 C6 R6 C5- R7 C11 C7 V3 C9 R11 R13 C8 R14 R23 R24 C12 R26 V6

To Remove Chassis from Cabinet

(67HFK series)

1. Remove VOICE-MUSIC switch from cabinet.
2. Pull off three control knobs.
3. Remove cabinet back cover.
4. Disconnect leads from changer and speakers.
5. Remove two screws that mount chassis to cabinet, slide chassis from cabinet.

(67FFP series)

1. Pull off the three control knobs.
2. Remove wingnut from cabinet back cover and remove cover.
3. Remove screws from bottom panel (located at base of cabinet) and remove panel from cabinet.
4. Disconnect leads from changer and speakers.
5. Remove nuts from block of wood adjacent to chassis and lift block of wood out of way.
6. Remove chassis mounting screw and slide chassis out from bottom of cabinet.

(67HF T series)

1. Pull off the three control knobs.
2. Remove cabinet back cover.
3. Disconnect leads from changer and speakers.
4. From rear of cabinet, remove two chassis mounting screws from cabinet and slide chassis out of cabinet.



PARTS LOCATIONS