


MOTOROLA

CHASSIS HS-4135,4134 MODELS BC4, B11, B12

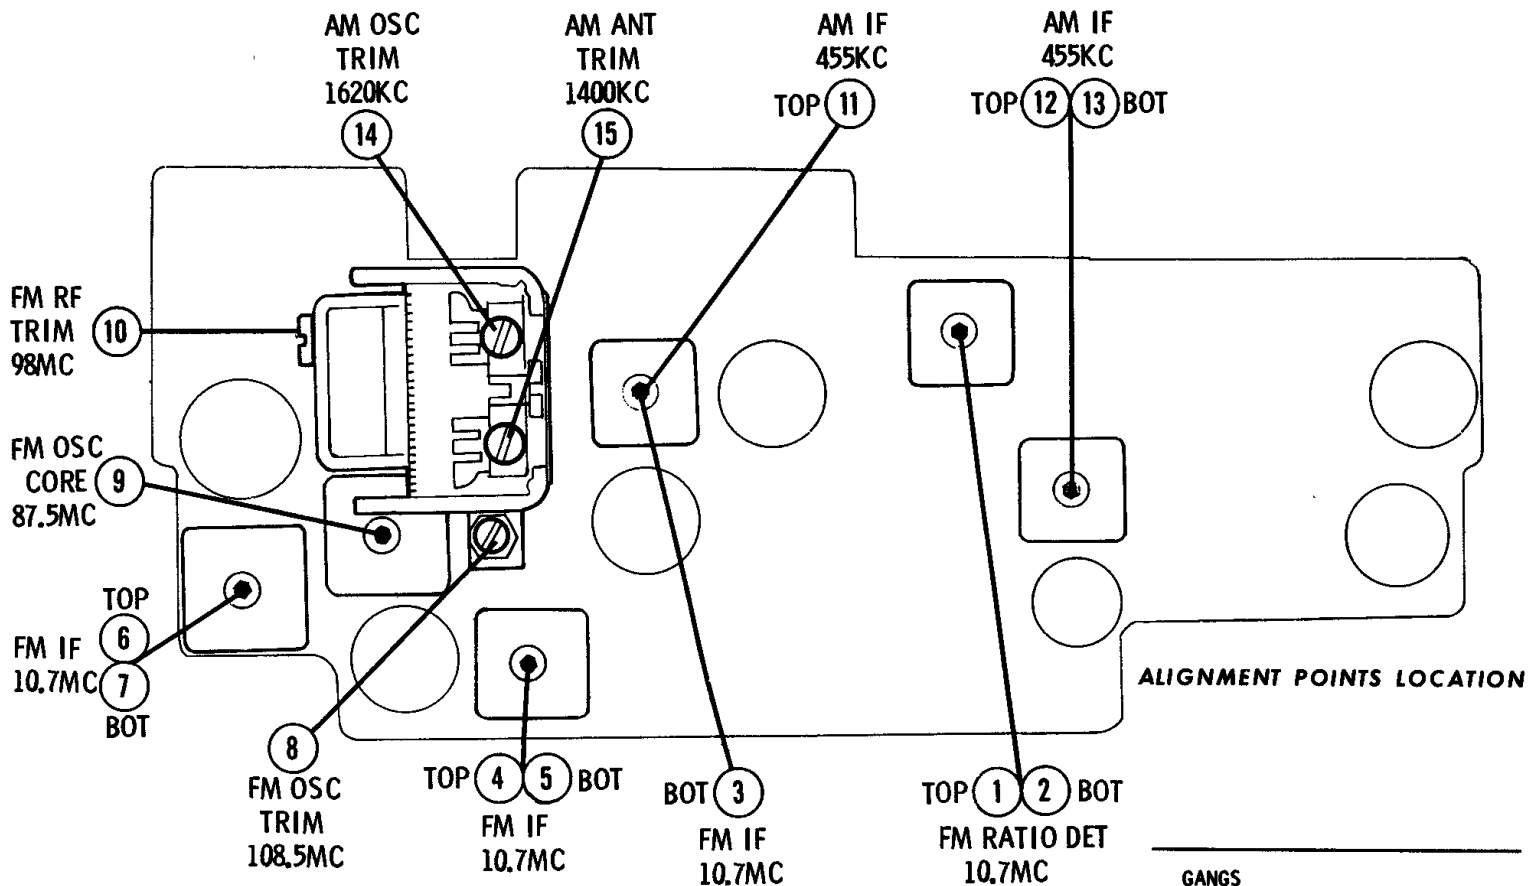

CHASSIS REMOVAL - ALL MODELS

1. Remove tuning knob only; do not attempt to remove captivated volume knob and pointer dial.



2. Remove 4 cabinet back mounting screws, separate back from front of cabinet, then disconnect FM antenna connecting lead from inside back; if necessary, unsolder leads connected to cabinet back.

3. Remove screw from left side of AM antenna insulator and screw from AM gang mounting bracket.


4. On Model B12 only, also remove 2 chassis bracket mounting screws located at right and left sides inside cabinet; then remove 3 screws from bottom of cabinet.

5. Slide chassis out from rear of cabinet; when re-installing chassis into cabinet, make sure the slots at the rear of the volume knob and pointer dial line up properly with their respective shafts on the chassis.


GANGS
FULLY
CLOSED

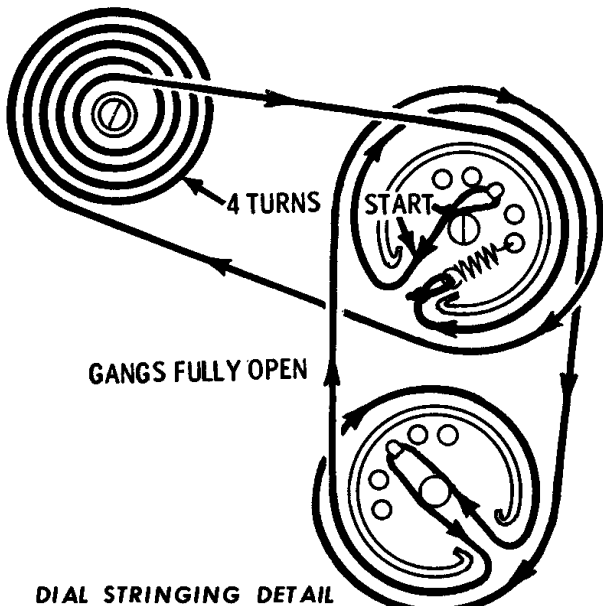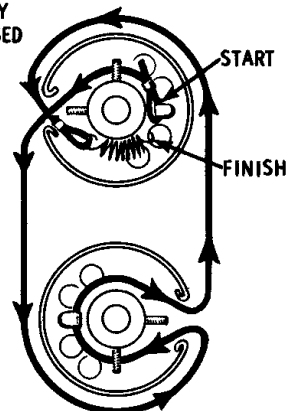

DIAL STRINGING DETAIL

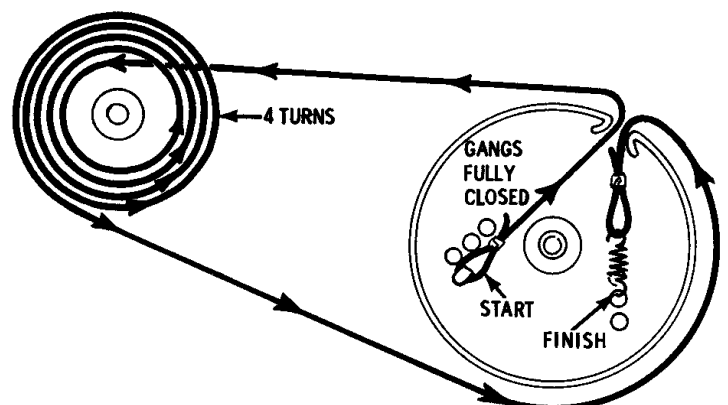

ALTERNATE STRINGING USED IN SOME SETS

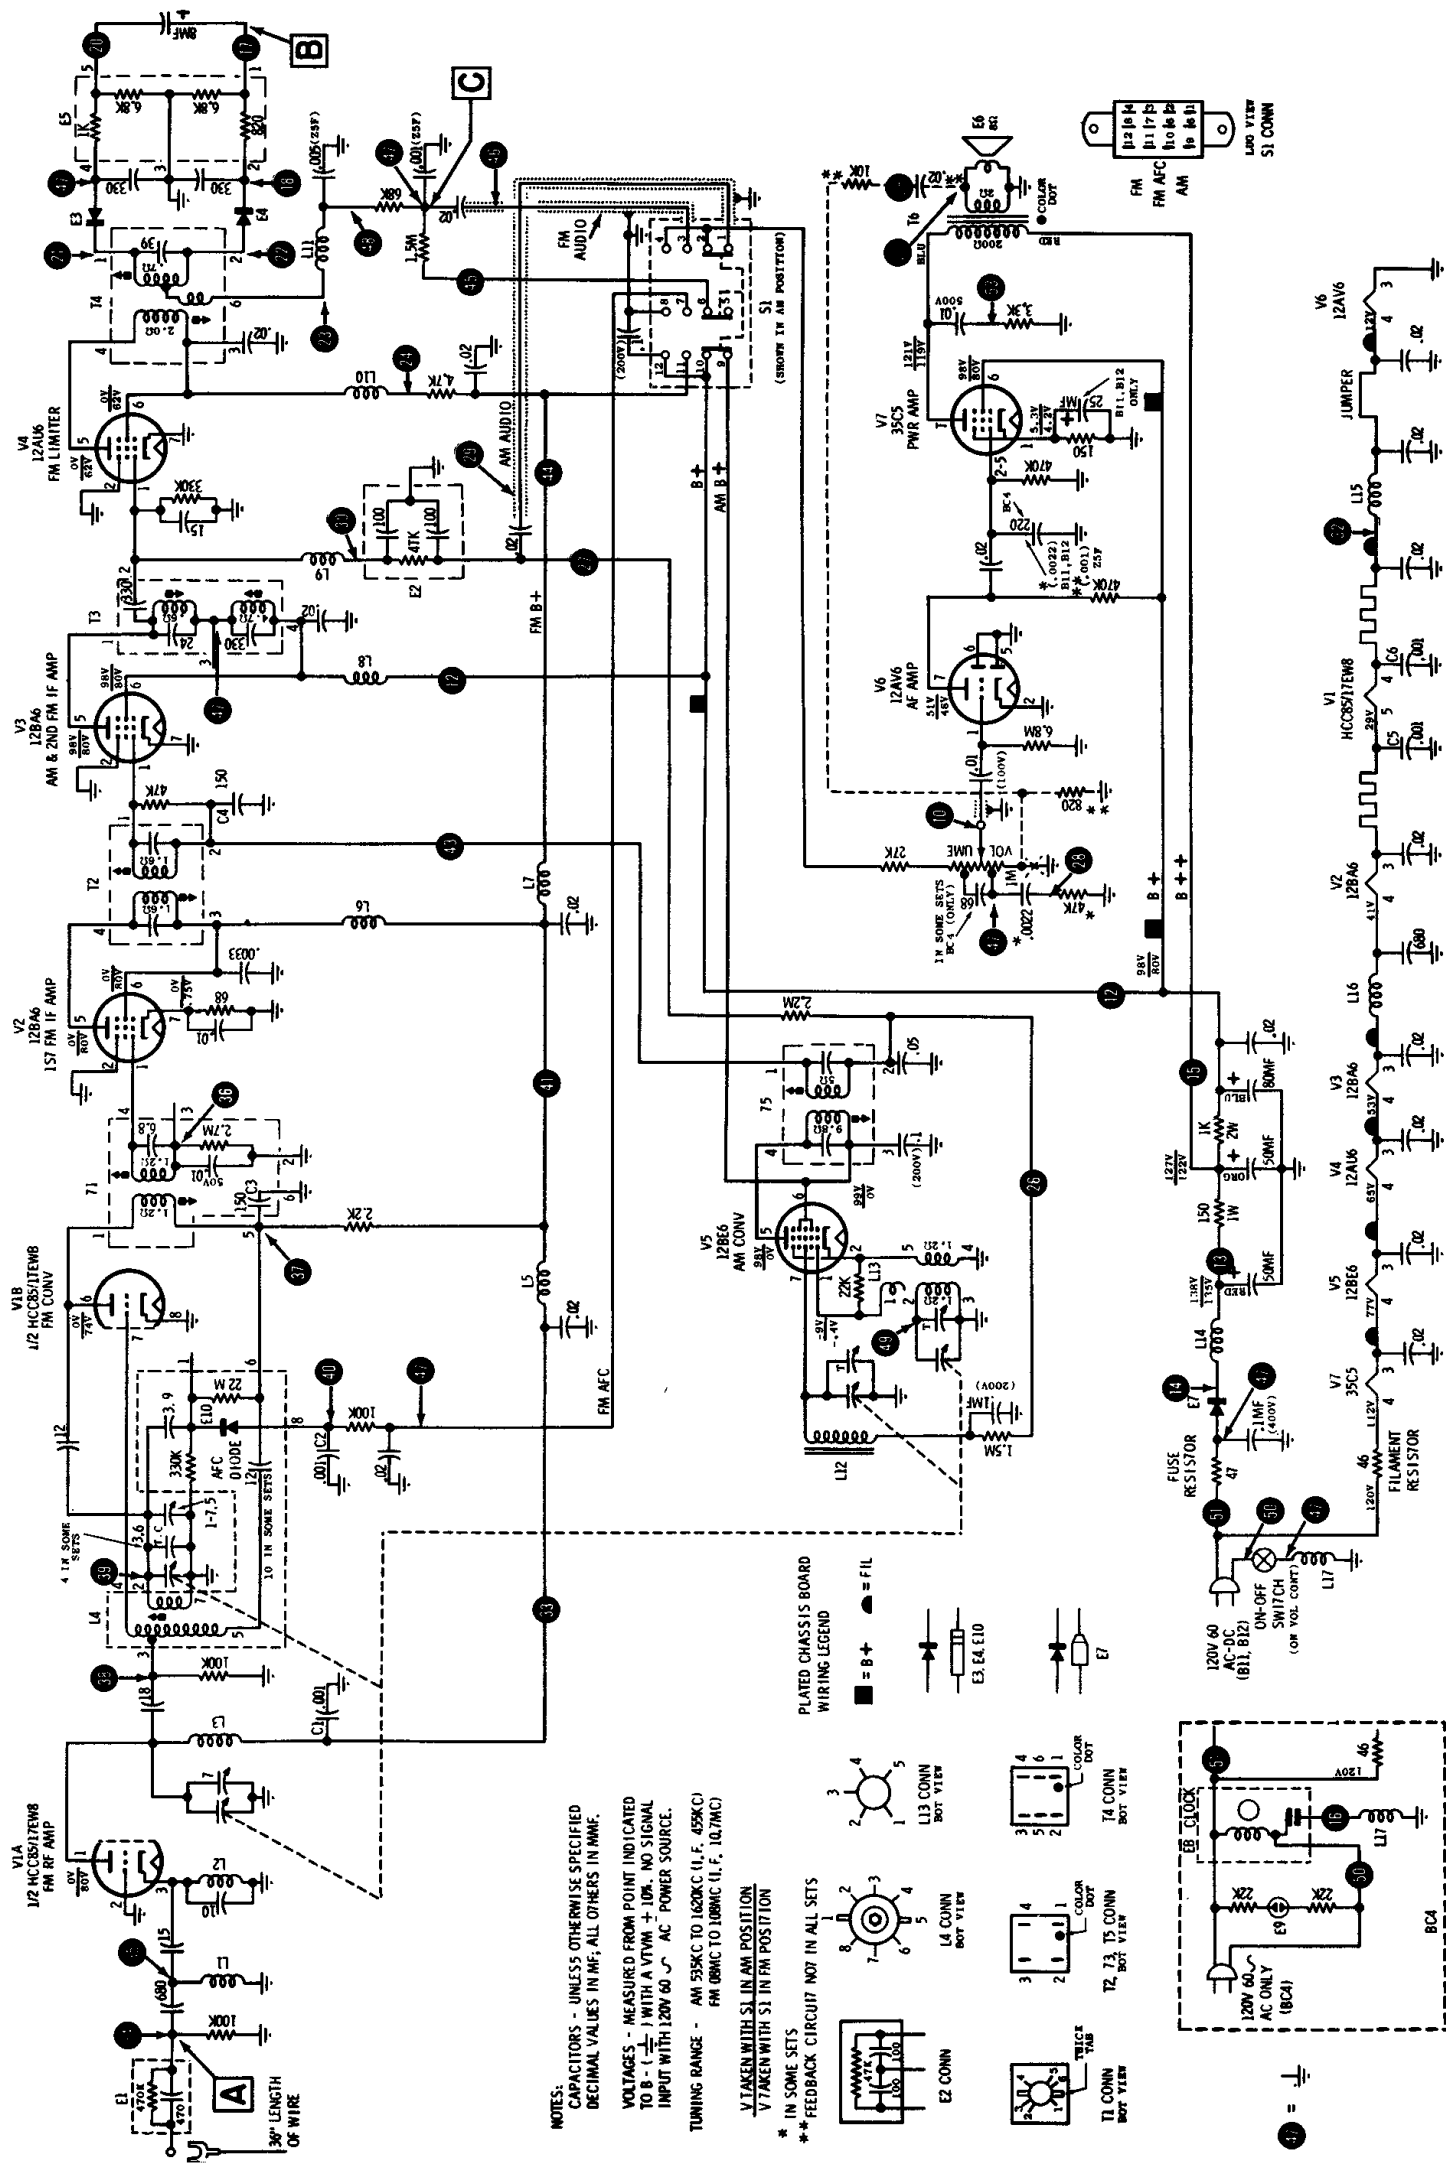

MOTOROLA Chassis HS-4134, HS-4135, Models BC4, B11, B12