


MOTOROLA MODELS SK100-4,SK124,SK125 CHASSIS HS-1201

CHASSIS REMOVAL

1. From bottom of cabinet, disconnect all leads and cables connected to chassis (on SK100-4, remove bottom panel first).
2. From inside record changer compartment, remove 3 control knobs and loosen large hex nuts located under knobs; then grasp the chassis from bottom and loosen nuts completely.
3. Remove chassis from cabinet.

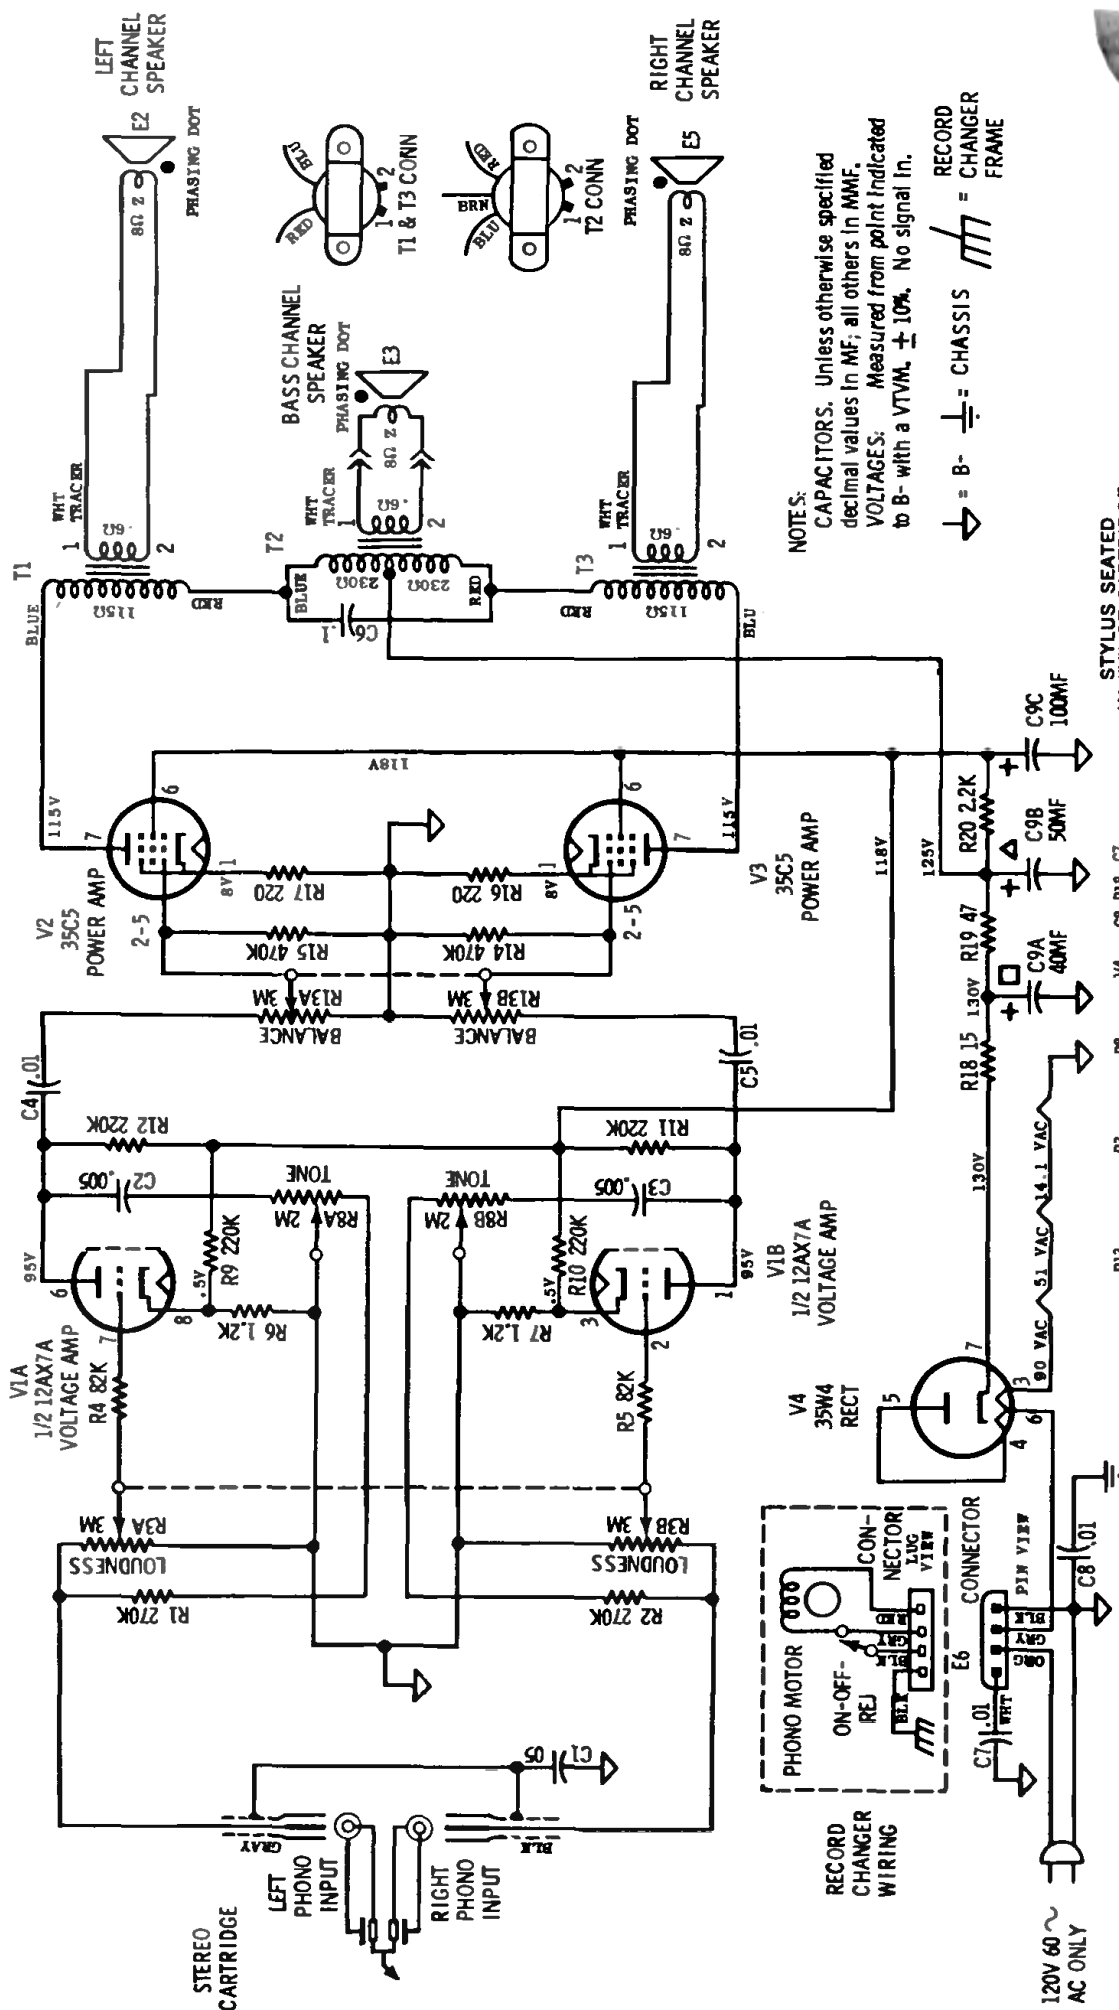