


MOTOROLA

MODELS	CHASSIS
SK21B, M	HS-735
SK23B, CW, M	HS-735
S21B, CW, M	-

Models SK21 and SK23 are console stereophonic phonographs containing four-speed record changers with stereophonic cartridge and multiple speaker systems. These models differ from each other in type of record changer used and cabinet design. Model S21 is the right channel speaker system used with SK21 and SK23 to complete the stereophonic system.

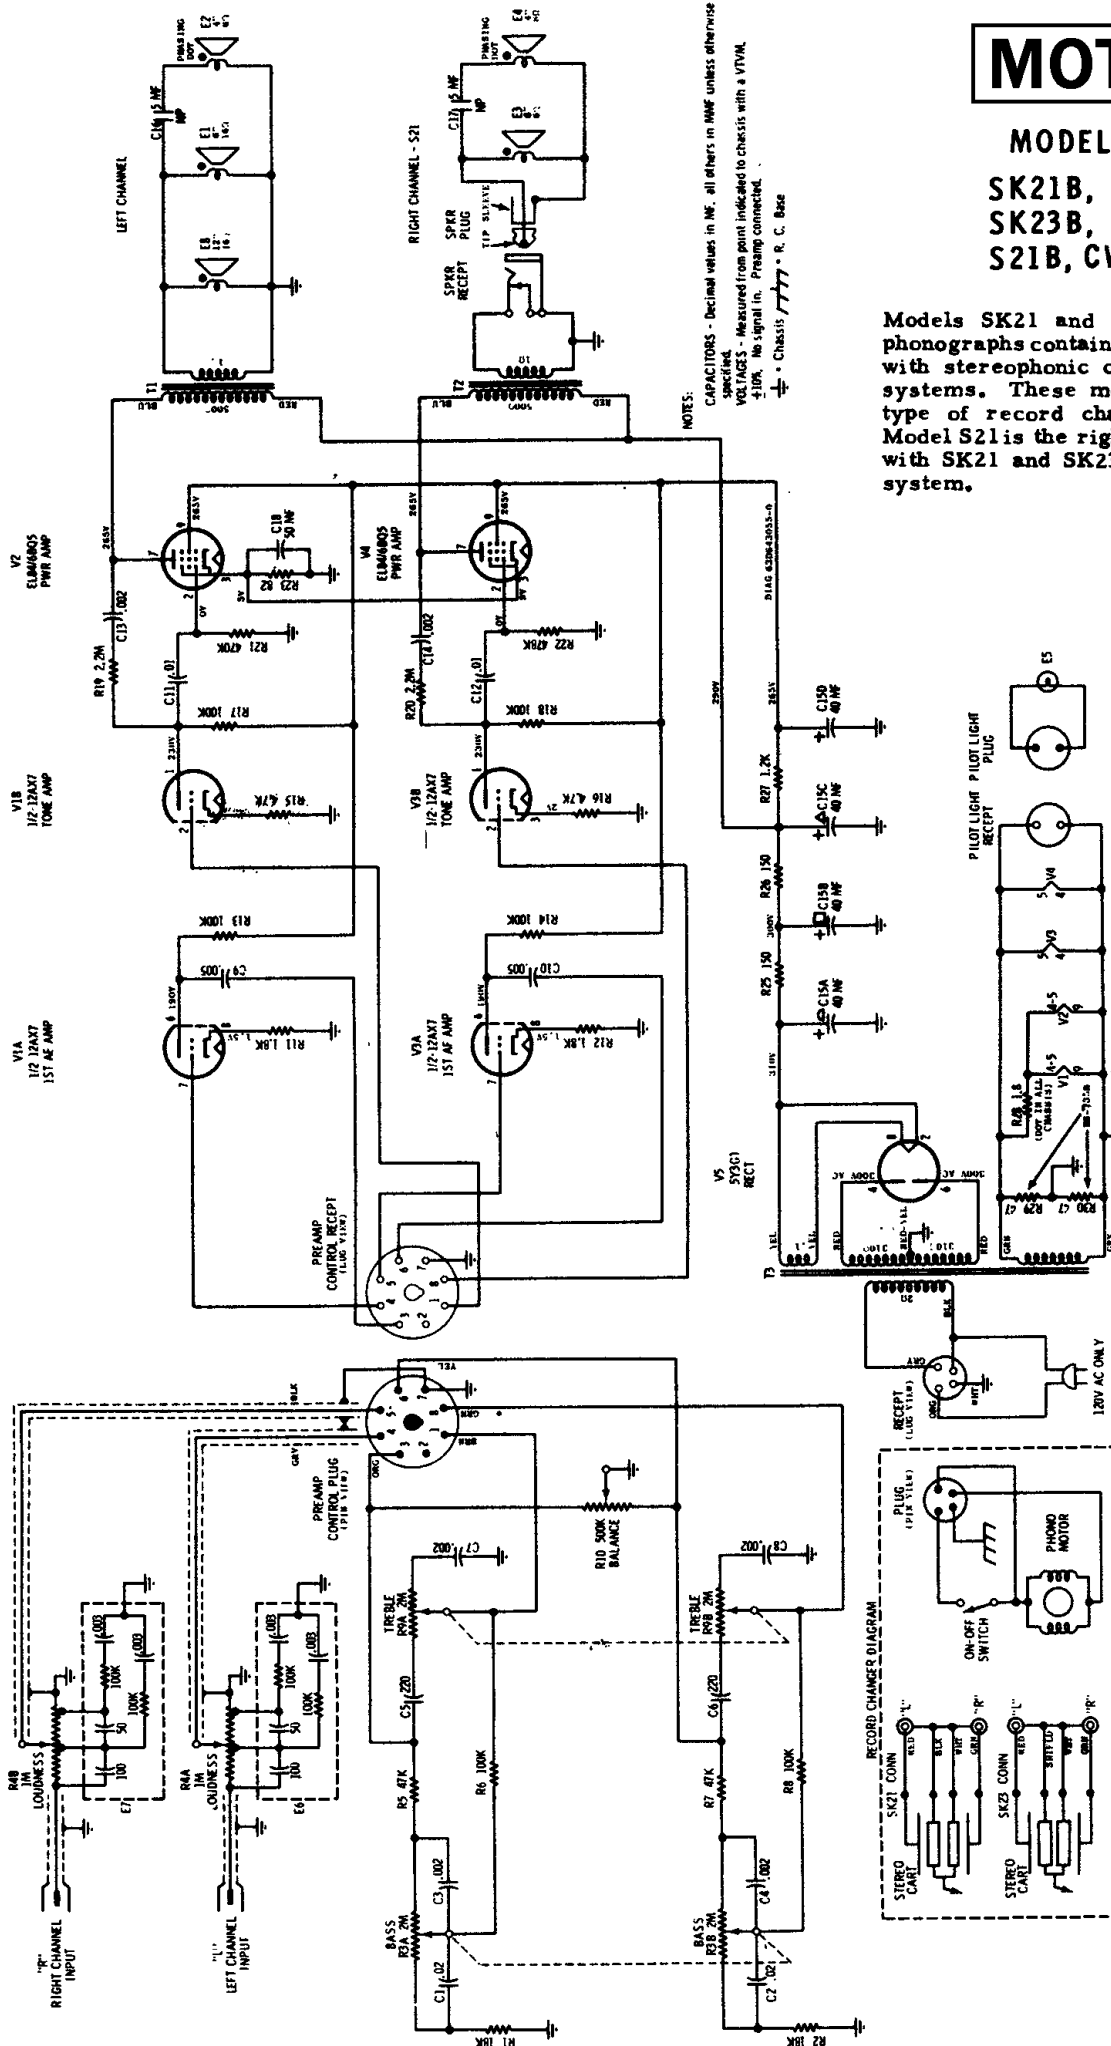

To Remove Record Changer from Cabinet (SK23 Series)

1. Remove back cover.
2. Disconnect all changer leads.
3. Turn two record changer mounting screws fully clockwise.
4. From bottom of changer, turn the two mounting clips located at mounting screw ends so they are parallel with the screws.
5. Grasp changer by base and lift up.

To Replace Pilot Light (All Models)

1. Remove cabinet rear cover.
2. From inside cabinet, unclip pilot light socket from mounting bracket.
3. Remove pilot light.

DISASSEMBLY INSTRUCTIONS

To Remove Chassis from Cabinet (All Models)

1. Pull off control knobs.
2. Remove cabinet back cover.
3. Disconnect all leads from changer and speakers.
4. Unplug pilot light at chassis.
5. Unplug control plug at chassis.
6. Remove nut from output jack and remove jack from mounting bracket.
7. Remove chassis mounting screw and slide chassis out rear of cabinet.
8. Remove 2 nuts from control unit mounting screws.
9. Remove control unit.

