



## TUNING KNOB REMOVAL

1. Remove cabinet back - 4 screws hold it in place.
2. From rear, remove two gang mounting screws and pull backgang.
3. To remove tuning knob, remove speed clip from knob shank from rear of knob.

