


NOTES:
CAPACITORS—Unless otherwise specified, decimal values in MF, all others in MMF.

VOLTAGES—Measured from point indicated to B— with a VTVM $\pm 10\%$, no signal input, with 120V 60 cycle AC in, TUNING RANGE 535KC to 1620KC (IF-455KC)

PLATED CHASSIS BOARD WIRING LEGEND
—B+ —-B- —-AVC —-FILAMENT

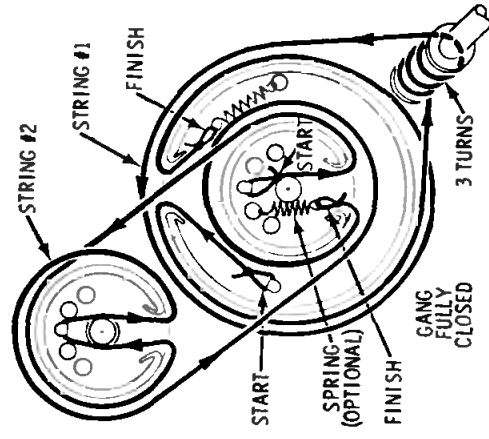

DIAL STRINGING DETAIL

MOTOROLA

MODELS CHASSIS
AllA HS-824
AllW HS-824

TO REMOVE CHASSIS FROM CABINET

1. Remove back cover - 4 screws hold it in place.
2. From rear, remove 3 dial crystal mounting screws and 3 chassis mounting screws.
3. From front, remove 2 control knobs, dial crystal and dial pointer (observe dial calibration).
4. Unsolder 2 speaker leads and remove chassis from cabinet.