

To Remove Chassis From Cabinet


1. Pull off the control knobs.
2. Remove cabinet back cover.
3. Disconnect leads from changer, auxiliary jacks and speakers.
4. Remove light shield and pilot light socket.
5. Remove three chassis mounting screws and remove chassis.

To Remove Record Changer From Cabinet











1. Remove back cover.
2. Disconnect all changer leads.
3. Turn the two record changer mounting screws fully clockwise (down flush against changer base).
4. From bottom of changer, turn the two Tinnerman nuts located at mounting screw ends so they are parallel with the screws.
5. Grasp changer by base and lift up.

To Replace Pilot Lights





1. To replace pilot light in record changer compartment, remove light shield, then bulb.
2. To remove pilot light on chassis, first remove chassis (see above), then bulb.

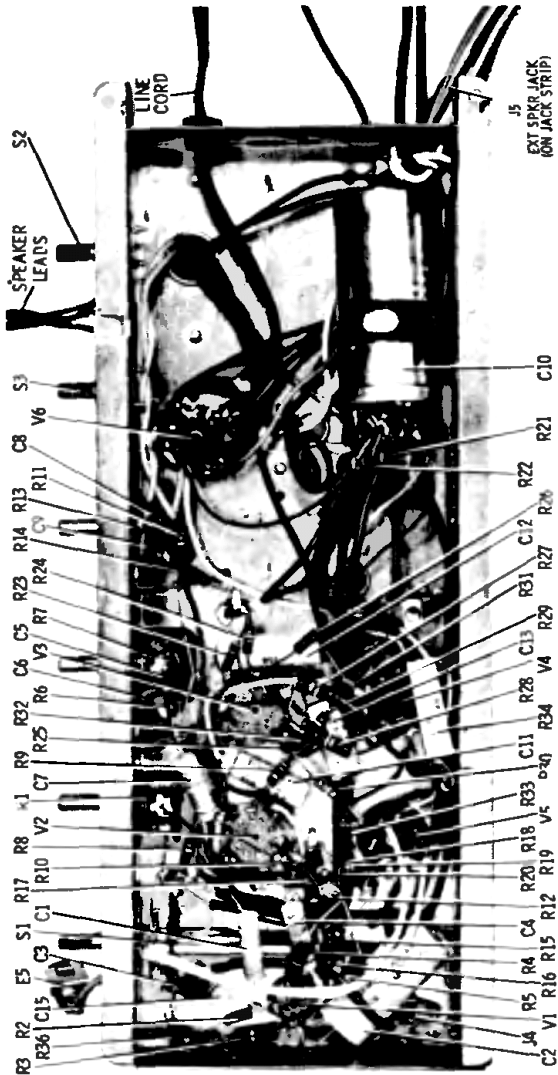

PARTS LOCATIONS

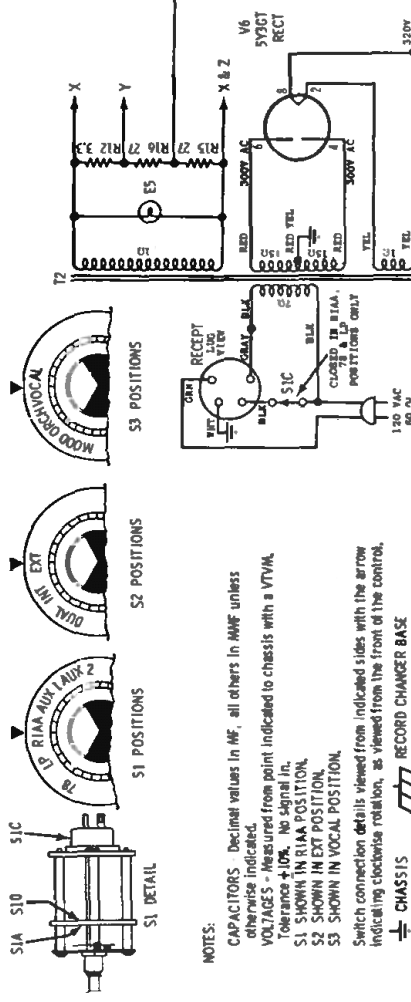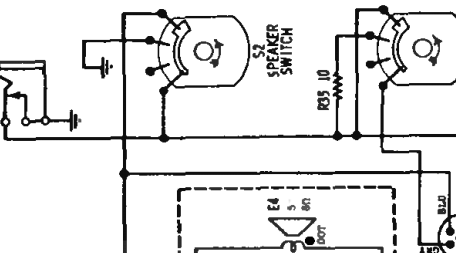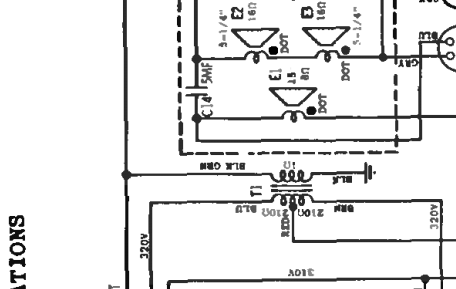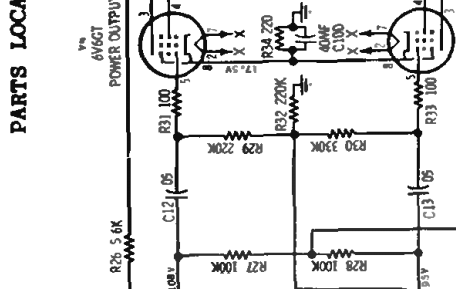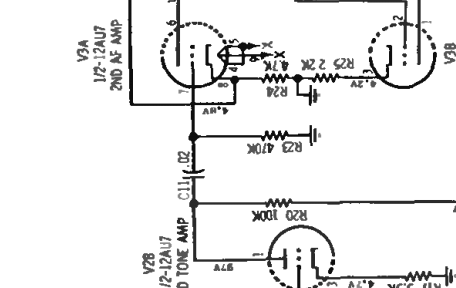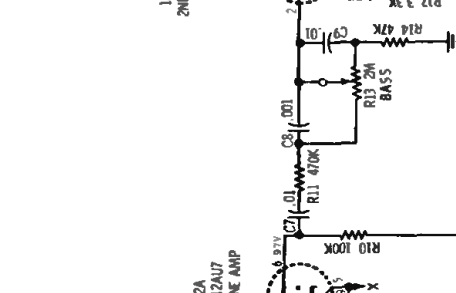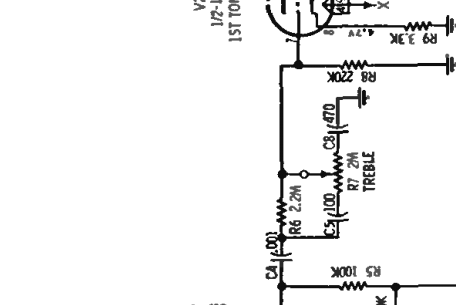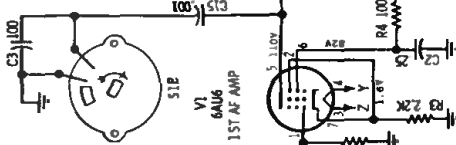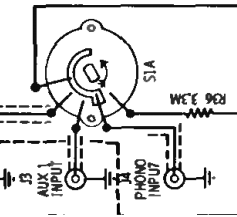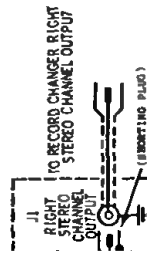

NOTES:
CAPACITORS - Decimal values in MF, all others in MMF unless otherwise indicated.
VOLTAGES - Measured from point indicated to chassis with a VTVM. Tolerance $\pm 10\%$. No signal in.
S1 SHOWN IN S1A POSITION.
S2 SHOWN IN EXT POSITION.
S3 SHOWN IN VOCAL POSITION.
Switch connection details viewed from indicated sides with the arrow indicating clockwise rotation, as viewed from the front of the control.

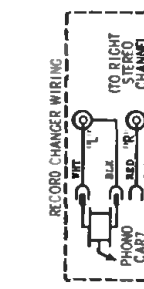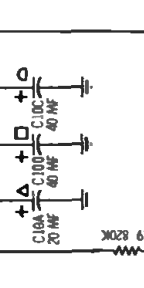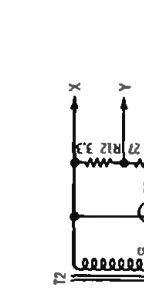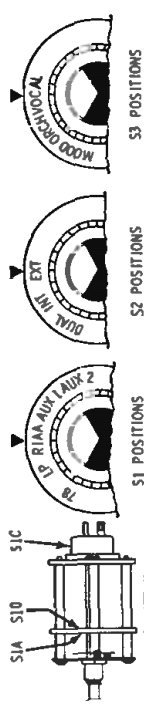

MOTOROLA

MODELS	CHASSIS
6K13B	HS-675
6K13CW	HS-675
6K13M	HS-675
6K13W	HS-675