


# MOTOROLA

## MODELS

## CHASSIS

SK28B, M, W  
SK29B, M, W  
SK30B, M, MC, W  
SK31B, CW, M


HS-768, HS-774  
HS-793, HS-769  
HS-768, HS-774  
HS-768, HS-774

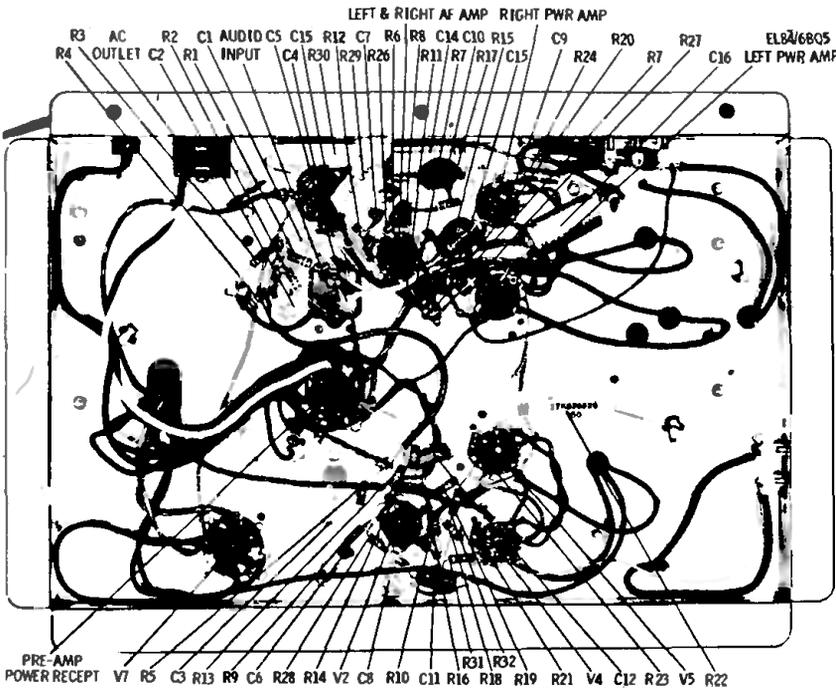


**PRE-AMP CHASSIS REMOVAL (Models SK28, SK30, SK31)**  
1. Remove control knobs, cabinet back cover and sounding board (on SK31 it is not necessary to remove board) located inside cabinet at base of record changer; board is held in place by 4 machine screws.  
2. Disconnect all pre-amp connecting leads and remove pre-amp; pre-amp is held in place by 2 hex nuts.

**PRE-AMP CHASSIS REMOVAL (Model SK29)**  
1. Remove control knobs and cabinet back cover.  
2. Disconnect all pre-amp connecting leads to power amp, record changer and pilot lights; open front cabinet doors and remove pre-amp panel (located at upper left-hand corner of cabinet - panel is held in place by 6 screws); unplug remaining pre-amp connecting leads and remove pre-amp after removing the 2 hex mounting nuts.

**POWER AMP CHASSIS REMOVAL (All Models)**  
Remove cabinet back cover, disconnect all power amp chassis connecting leads, remove 6 power amp mounting machine screws and remove power amp chassis

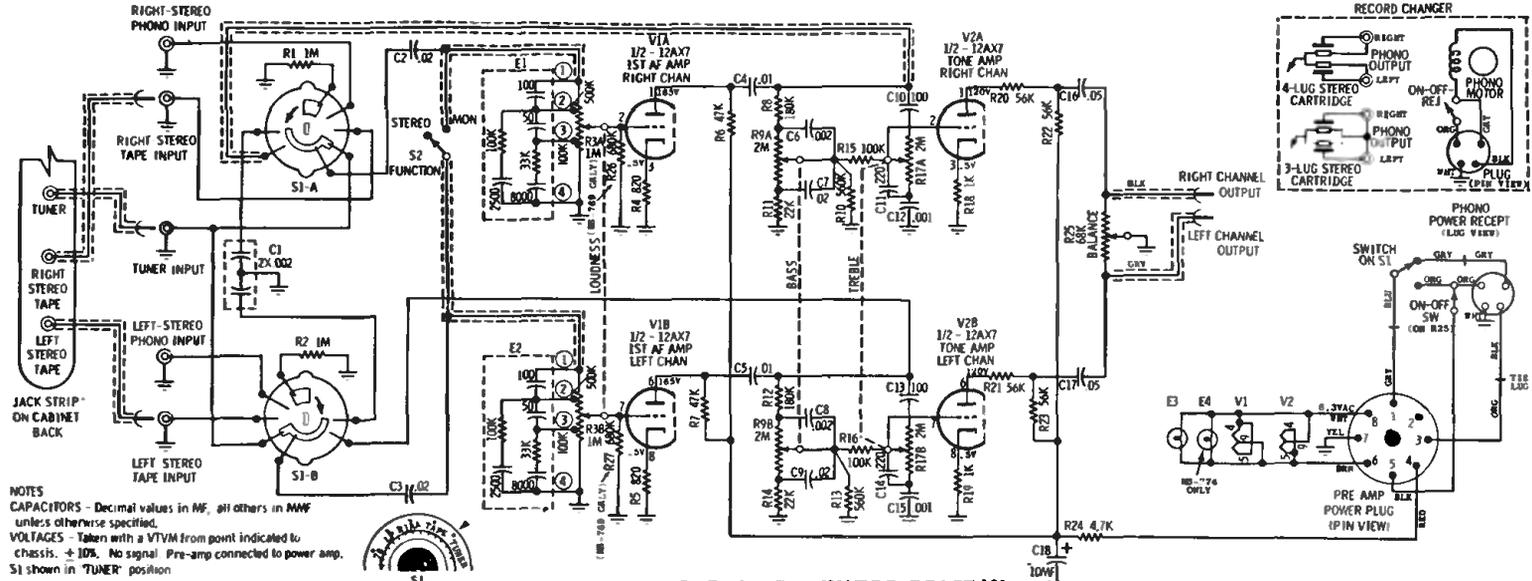

PRE-AMP HS-769, 774, SCHEMATIC DIAGRAM

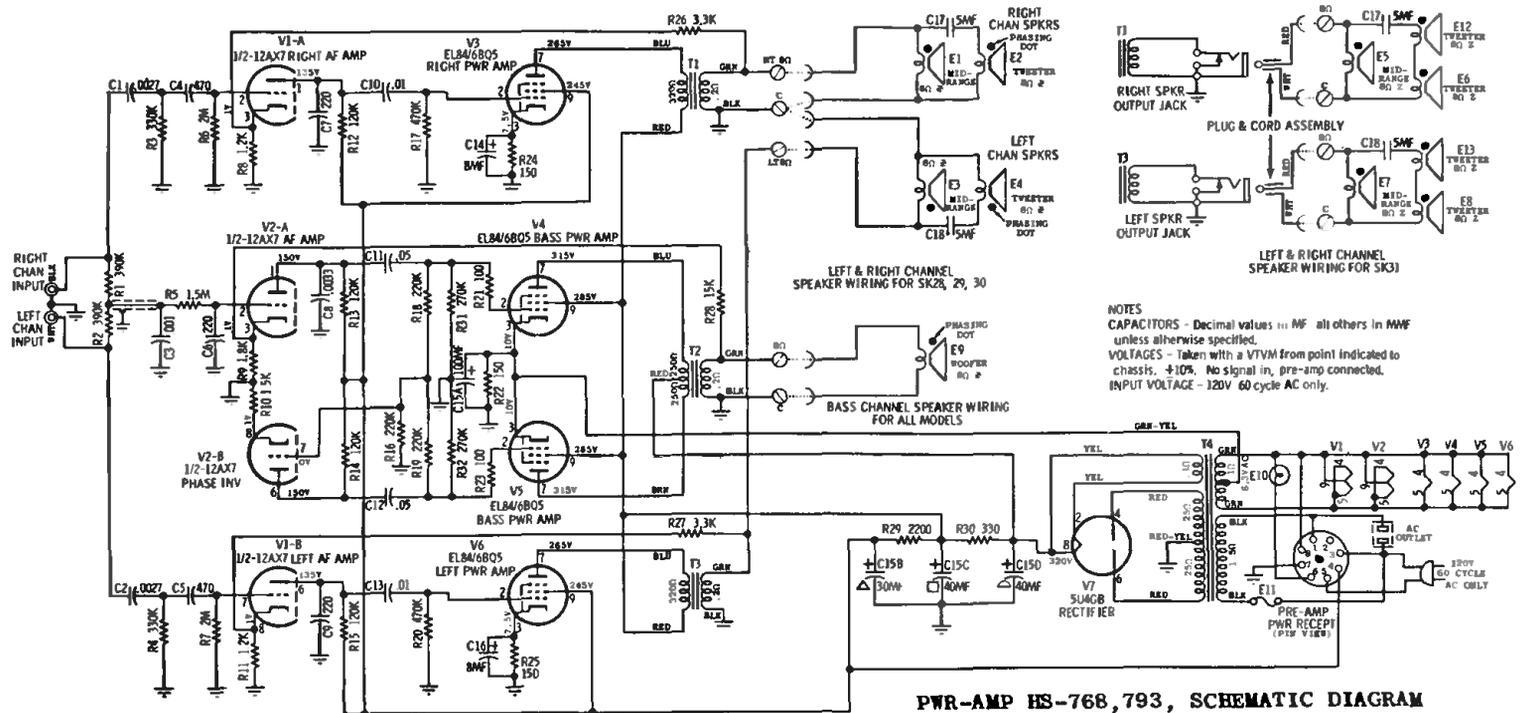

PWR-AMP HS-768, 793, SCHEMATIC DIAGRAM