



# PHILCO PHONOGRAPH

MODEL F-1500

## REMOVAL INSTRUCTIONS

### AMPLIFIER

- (1) Pull the three control knobs from the right-hand side of the phonograph.
- (2) Remove metal grill from inside of phonograph.
- (3) Pull the three plugs from the amplifier.
- (4) Loosen right-hand amplifier mounting nut, about half way.
- (5) Remove left-hand amplifier mounting nut. Raise the left-hand side of the amplifier while sliding the amplifier from the right-hand mounting screw.

### CHANGER

- (1) Remove amplifier.
- (2) Check that the "hold-down" bolts are in "play" position (Head of bolt flush with changer base plate).
- (3) Reach under the motor board and flip the toggle on the bottom of the right-hand "hold-down" bolt. It will be easier to operate the toggle if the right-hand side of the changer is pressed downward.
- (4) Raise the right-hand side of the changer until the "hold-down" bolt is free and then slide the changer to the right. The left-hand "hold-down" bolt is mounted in a slot of the motor board. The bolt will slide free as the changer is moved to the right.