



# PHILCO RADIO & TELEVISION CORP.

MODEL C-1808

| No. | Description                    | Part No.        |
|-----|--------------------------------|-----------------|
| 33  | Condenser (250 Mmfd.)          | 60-125157       |
| 34  | Resistor (25,000 ohms)         | 33-323334       |
| 35  | Padder (Pri. 2nd I. F. Trans.) | 33-323334       |
| 36  | Second I. F. Transformer       | 65-0366         |
| 37  | Padder Sec. 2nd I. F. Trans.   | 33-323154       |
| 38  | Resistor (25,000 ohms)         | 33-323154       |
| 39  | Resistor (10,000,000 ohms)     | 33-610154       |
| 40  | Condenser (4,000 Mmfd.)        | 61-0128         |
| 41  | Volume Control                 | 67-0040         |
| 42  | Condenser (.05 Mfd.)           | 61-0101         |
| 43  | Resistor (250,000 ohms)        | 33-422154       |
| 44  | Resistor (1,000,000 ohms)      | 33-510154       |
| 45  | Resistor (6,800 ohms)          | 33-268154       |
| 46  | Tone Control                   | Part of 69      |
| 47  | Condenser (4,000,000 ohms)     | 61-0154         |
| 48  | Resistor (.02 Mfd.)            | 33-247334       |
| 49  | Resistor (4,700 ohms)          | 61-0111         |
| 50  | Condenser (.05 Mfd.)           | 33-222154       |
| 51  | Resistor (2,200 ohms)          | 60-110157       |
| 52  | Condenser (100 Mmfd.)          | 61-0110         |
| 53  | Condenser (.01 Mfd.)           | 61-0128         |
| 54  | Condenser (220,000 ohms)       | 33-422154       |
| 55  | Resistor                       | 33-610154       |
| 56  | Resistor (10,000,000 ohms)     | 33-422154       |
| 57  | Resistor (250,000 ohms)        | 33-422154       |
| 58  | Resistor (27,000 ohms)         | 33-327434       |
| 59  | Condenser (.01 Mfd.)           | 61-0100         |
| 60  | Resistor (470,000 ohms)        | 33-447154       |
| 61  | Resistor (350 ohms)            | 33-183436       |
| 62  | Filter Condenser               | 61-0150         |
| 63  | Resistor (470,000 ohms)        | 33-447154       |
| 64  | Condenser (.01 Mfd.)           | 61-0114         |
| 65  | Resistor (220,000 ohms)        | 33-422154       |
| 66  | Resistor (4,700 ohms)          | 33-247334       |
| 67  | Condenser (6,000 Mmfd.)        | 61-0105         |
| 68  | Output Transformer             | 65-0363         |
| 69  | Condenser (250 Mmfd.)          | 60-125157       |
| 70  | Cone & Voice Coil              | 91-0164         |
| 71  | (For 73-0051-2 Speaker)        | 91-0164         |
| 72  | (For 73-0051-3 Speaker)        | 91-0165         |
| 73  | Field Coil                     | Not Replaceable |
| 74  | Condenser (250 Mmfd.)          | 60-125157       |
| 75  | Condenser (250 Mmfd.)          | 60-125157       |
| 76  | Resistor (1,000 ohms)          | 33-210334       |
| 77  | Condenser (5,000 Mmfd.)        | 61-0153         |
| 78  | Power Transformer              | 65-0347         |
| 79  | Resistor (100 ohms)            | 33-110334       |
| 80  | Resistor (100 ohms)            | 33-110334       |
| 81  | Condenser (250 Mmfd.)          | 60-125157       |
| 82  | Vibrator                       | 33-0027         |
| 83  | Condenser (.5 Mfd.)            | 61-0157         |
| 84  | Condenser (.5 Mfd.)            | 61-0106         |
| 85  | Vibrator Choke                 | 61-0389         |
| 86  | Pilot Lamp                     | 34-2064         |
| 87  | Test Socket                    | 55-1104         |
| 88  | Condenser (250 Mmfd.)          | 60-125157       |
| 89  | Condenser (250 Mmfd.)          | 60-125157       |
| 90  | Condenser (.5 Mfd.)            | 61-0134         |
| 91  | Fuse                           | 45-2559         |
| 92  | "A" Choke                      | 32-1644         |
| 93  | Condenser (250 Mmfd.)          | 60-125157       |
| 94  | Condenser (250 Mmfd.)          | 60-125157       |
| 95  | Socket Unit                    | 73-0071         |
| 96  | Fuel Gauge Resistor            | 67-0041         |
| 97  | Call Letter Kit                | 81-0256         |
| 98  | Radio Mfg. Bracket             | 57-173433       |
| 99  | Tube Socket                    | 27-6151         |
| 100 | Vibrator Drive Cord            | 27-6044         |
| 101 | Tone Drive Cord                | 55-1071         |
| 102 |                                | 55-1072         |

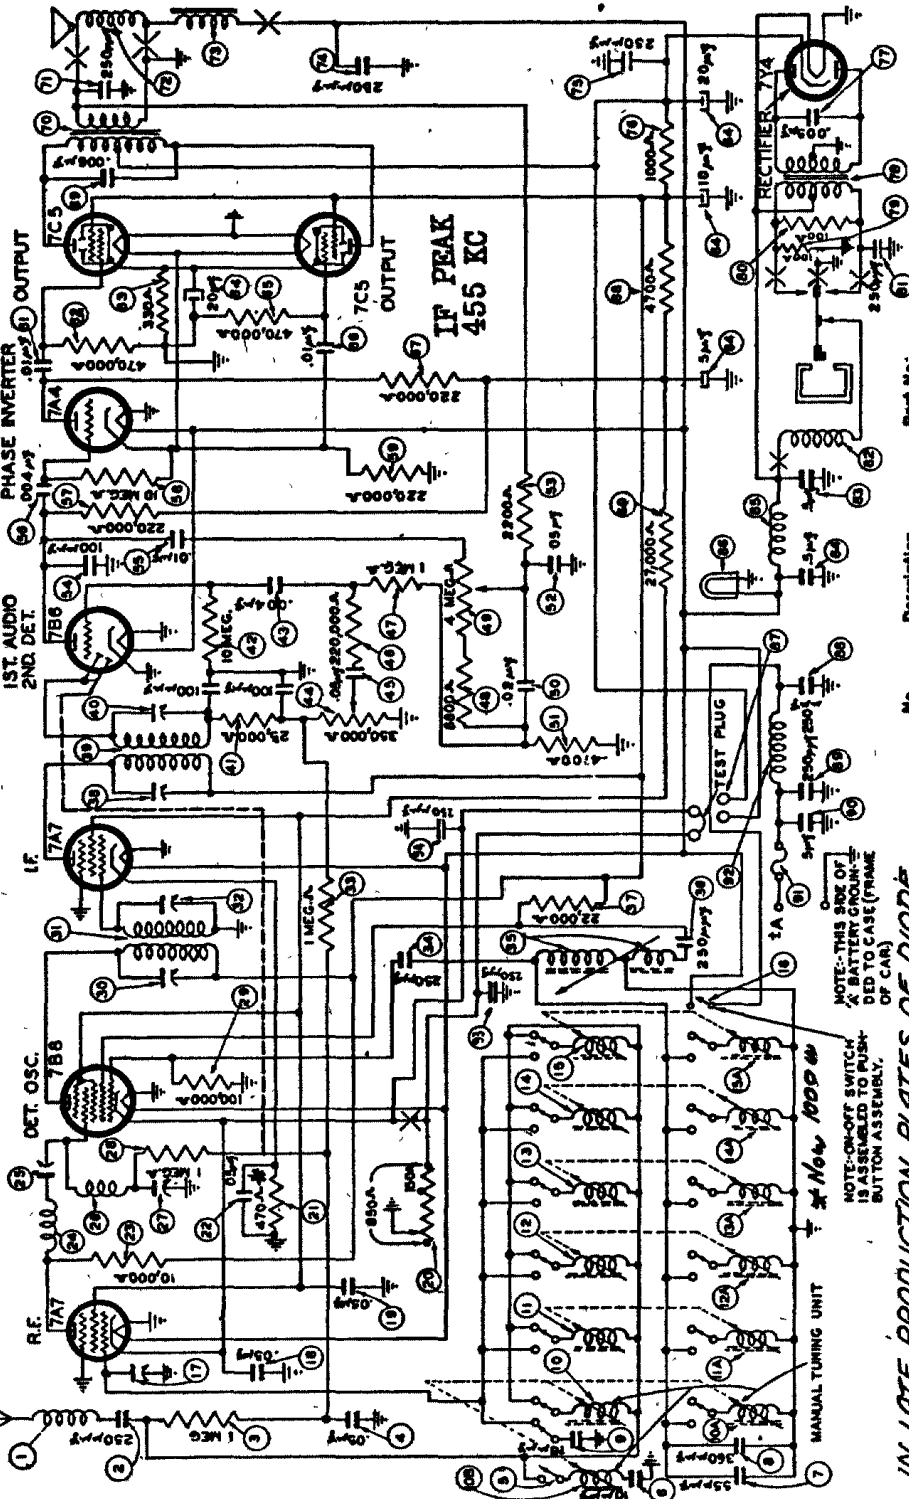

| No. | Description               | Part No.  |
|-----|---------------------------|-----------|
| 1   | Antenna Choke             | 65-0378   |
| 2   | Condenser (250 Mmfd.)     | 60-125157 |
| 3   | Resistor (1,000,000 ohms) | 33-510154 |
| 4   | Condenser (.05 Mfd.)      | 61-0101   |
| 5   | Push Button Switch        | 33-0127   |
| 6   | Condenser (10 Mmfd.)      | 60-020327 |
| 7   | Condenser (55 Mmfd.)      | 61-0149   |
| 8   | Silver Mica Condenser     | 61-0157   |
| 9   | Silver Mica Condenser     | 60-011387 |
| 10  | Inductive Tuning Unit     | 77-0666   |
| 11  | Inductive Tuning Unit     | 77-0666   |
| 12  | Inductive Tuning Unit     | 77-0666   |
| 13  | Push Button Coil & Switch | 77-0667   |
| 14  | Assembly                  | 77-0667   |
| 15  | Push Button Coil & Switch | 77-0667   |
| 16  | Assembly                  | 77-0667   |
| 17  | Push Button Coil & Switch | 77-0667   |
| 18  | Assembly                  | 77-0667   |
| 19  | Push Button Coil & Switch | 77-0667   |
| 20  | Assembly                  | 77-0667   |
| 21  | Push Button Coil & Switch | 77-0667   |
| 22  | Assembly                  | 77-0667   |
| 23  | Push Button Coil & Switch | 77-0667   |
| 24  | Assembly                  | 77-0667   |
| 25  | Push Button Coil & Switch | 77-0667   |
| 26  | Assembly                  | 77-0667   |
| 27  | Push Button Coil & Switch | 77-0667   |
| 28  | Assembly                  | 77-0667   |
| 29  | Push Button Coil & Switch | 77-0667   |
| 30  | Assembly                  | 77-0667   |
| 31  | Push Button Coil & Switch | 77-0667   |
| 32  | Assembly                  | 77-0667   |
| 33  | Push Button Coil & Switch | 77-0667   |
| 34  | Assembly                  | 77-0667   |
| 35  | Push Button Coil & Switch | 77-0667   |
| 36  | Assembly                  | 77-0667   |
| 37  | Push Button Coil & Switch | 77-0667   |
| 38  | Assembly                  | 77-0667   |
| 39  | Push Button Coil & Switch | 77-0667   |
| 40  | Assembly                  | 77-0667   |
| 41  | Push Button Coil & Switch | 77-0667   |
| 42  | Assembly                  | 77-0667   |
| 43  | Push Button Coil & Switch | 77-0667   |
| 44  | Assembly                  | 77-0667   |
| 45  | Push Button Coil & Switch | 77-0667   |
| 46  | Assembly                  | 77-0667   |
| 47  | Push Button Coil & Switch | 77-0667   |
| 48  | Assembly                  | 77-0667   |
| 49  | Push Button Coil & Switch | 77-0667   |
| 50  | Assembly                  | 77-0667   |
| 51  | Push Button Coil & Switch | 77-0667   |
| 52  | Assembly                  | 77-0667   |
| 53  | Push Button Coil & Switch | 77-0667   |
| 54  | Assembly                  | 77-0667   |
| 55  | Push Button Coil & Switch | 77-0667   |
| 56  | Assembly                  | 77-0667   |
| 57  | Push Button Coil & Switch | 77-0667   |
| 58  | Assembly                  | 77-0667   |
| 59  | Push Button Coil & Switch | 77-0667   |
| 60  | Assembly                  | 77-0667   |
| 61  | Push Button Coil & Switch | 77-0667   |
| 62  | Assembly                  | 77-0667   |
| 63  | Push Button Coil & Switch | 77-0667   |
| 64  | Assembly                  | 77-0667   |
| 65  | Push Button Coil & Switch | 77-0667   |
| 66  | Assembly                  | 77-0667   |
| 67  | Push Button Coil & Switch | 77-0667   |
| 68  | Assembly                  | 77-0667   |
| 69  | Push Button Coil & Switch | 77-0667   |
| 70  | Assembly                  | 77-0667   |
| 71  | Push Button Coil & Switch | 77-0667   |
| 72  | Assembly                  | 77-0667   |
| 73  | Push Button Coil & Switch | 77-0667   |
| 74  | Assembly                  | 77-0667   |
| 75  | Push Button Coil & Switch | 77-0667   |
| 76  | Assembly                  | 77-0667   |
| 77  | Push Button Coil & Switch | 77-0667   |
| 78  | Assembly                  | 77-0667   |
| 79  | Push Button Coil & Switch | 77-0667   |
| 80  | Assembly                  | 77-0667   |
| 81  | Push Button Coil & Switch | 77-0667   |
| 82  | Assembly                  | 77-0667   |
| 83  | Push Button Coil & Switch | 77-0667   |
| 84  | Assembly                  | 77-0667   |
| 85  | Push Button Coil & Switch | 77-0667   |
| 86  | Assembly                  | 77-0667   |
| 87  | Push Button Coil & Switch | 77-0667   |
| 88  | Assembly                  | 77-0667   |
| 89  | Push Button Coil & Switch | 77-0667   |
| 90  | Assembly                  | 77-0667   |
| 91  | Push Button Coil & Switch | 77-0667   |
| 92  | Assembly                  | 77-0667   |
| 93  | Push Button Coil & Switch | 77-0667   |
| 94  | Assembly                  | 77-0667   |
| 95  | Push Button Coil & Switch | 77-0667   |
| 96  | Assembly                  | 77-0667   |
| 97  | Push Button Coil & Switch | 77-0667   |
| 98  | Assembly                  | 77-0667   |
| 99  | Push Button Coil & Switch | 77-0667   |
| 100 | Assembly                  | 77-0667   |

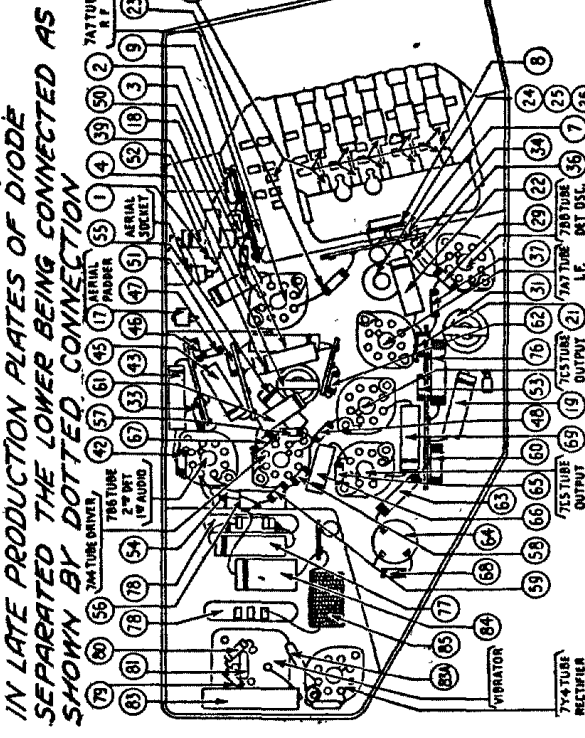

IN LATE PRODUCTION PLATES OF DIODE SEPARATED THE LOWER BEING CONNECTED AS SHOWN BY DOTTED CONNECTION

Now 1000 W