


All Models, Composite View, Foil Side, FM Tuner Panel

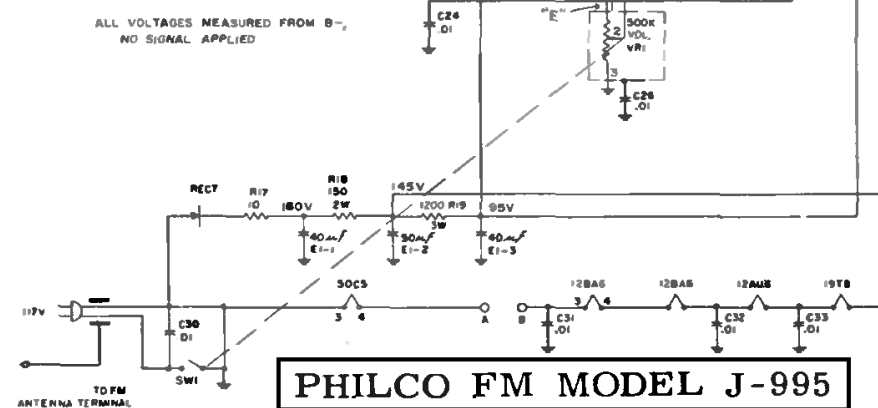

**FM tuner disassembly.** Remove chassis from cabinet and place foil side up, tuner toward left. To remove bottom shield from tuner remove two screws located at left edge of shield and screw located under left lug of antenna terminal board (remove terminal board mounting screw first). Loosen screw located near antenna terminal board and remaining tuner mounting screw located near left front corner of main panel. Slide shield to left far enough to clear wires and screws. Retighten remaining tuner mounting screws. The perma-circuit wiring panel can now be removed. To do so, remove screw holding TV trap mounting board. Disconnect ground lug from panel and the tuner drive cord from the pulley shaft. Remove screws holding panel in housing. The panel may now be lifted up and out of the tuner housing.