


PHILCO
Model M-1421
and
Model M-1529

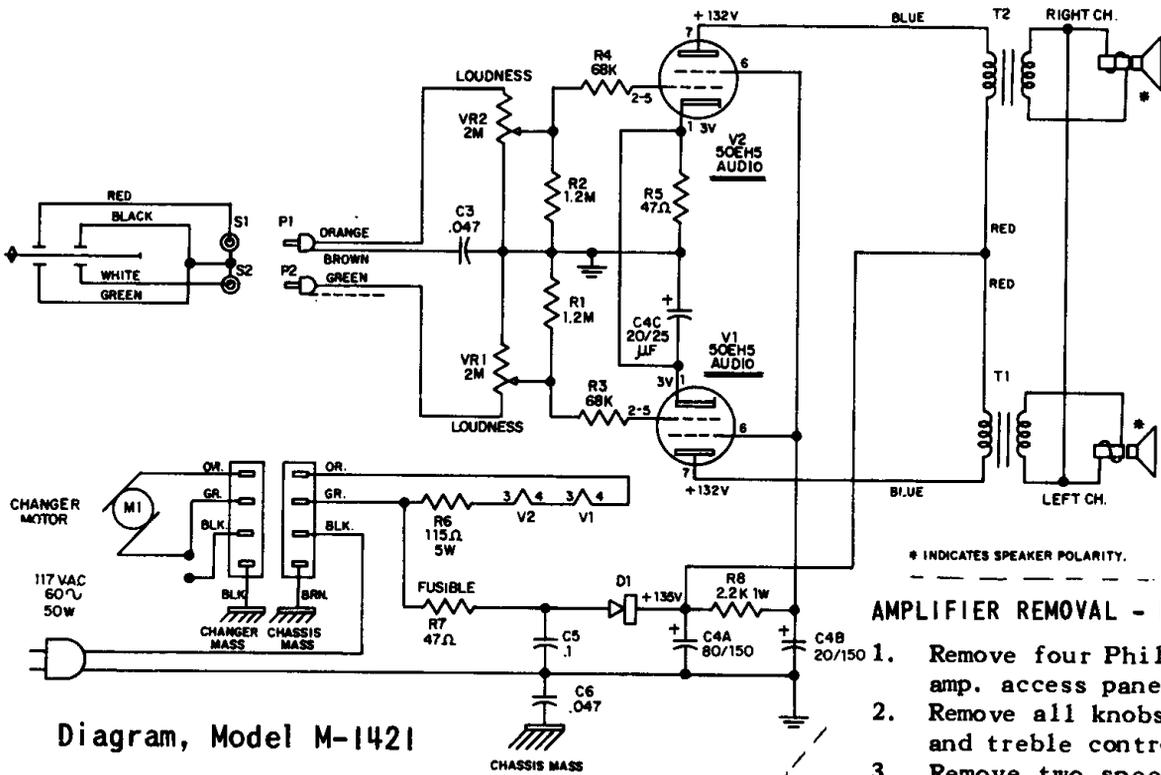

Diagram, Model M-1421


AMPLIFIER REMOVAL - MODEL M-1421

1. Remove six Phillips screws securing chenger mounting board to cabinet.
2. Remove chenger mounting board and amp. assembly.
3. Remove two T-nuts securing amp. to chenger mounting board.
4. Amp. may now be removed.

* INDICATES SPEAKER POLARITY.

AMPLIFIER REMOVAL - MODEL M-1529

1. Remove four Phillips screws securing rear amp. access panel and remove panel.
2. Remove all knobs and two T-nuts from bass and treble controls.
3. Remove two speed nuts on studs securing rear of chassis.
4. Straighten clip securing left side of chenger. Lift left side of chenger to free mounting screws. Slide chenger to left in order to free right mounting screw.
5. Lift chenger and remove phono power and phono input cables.
6. Remove two cable clamps securing phono power and phono input cables.
7. Remove amp. while feeding cables through slot in side of chenger drawer.

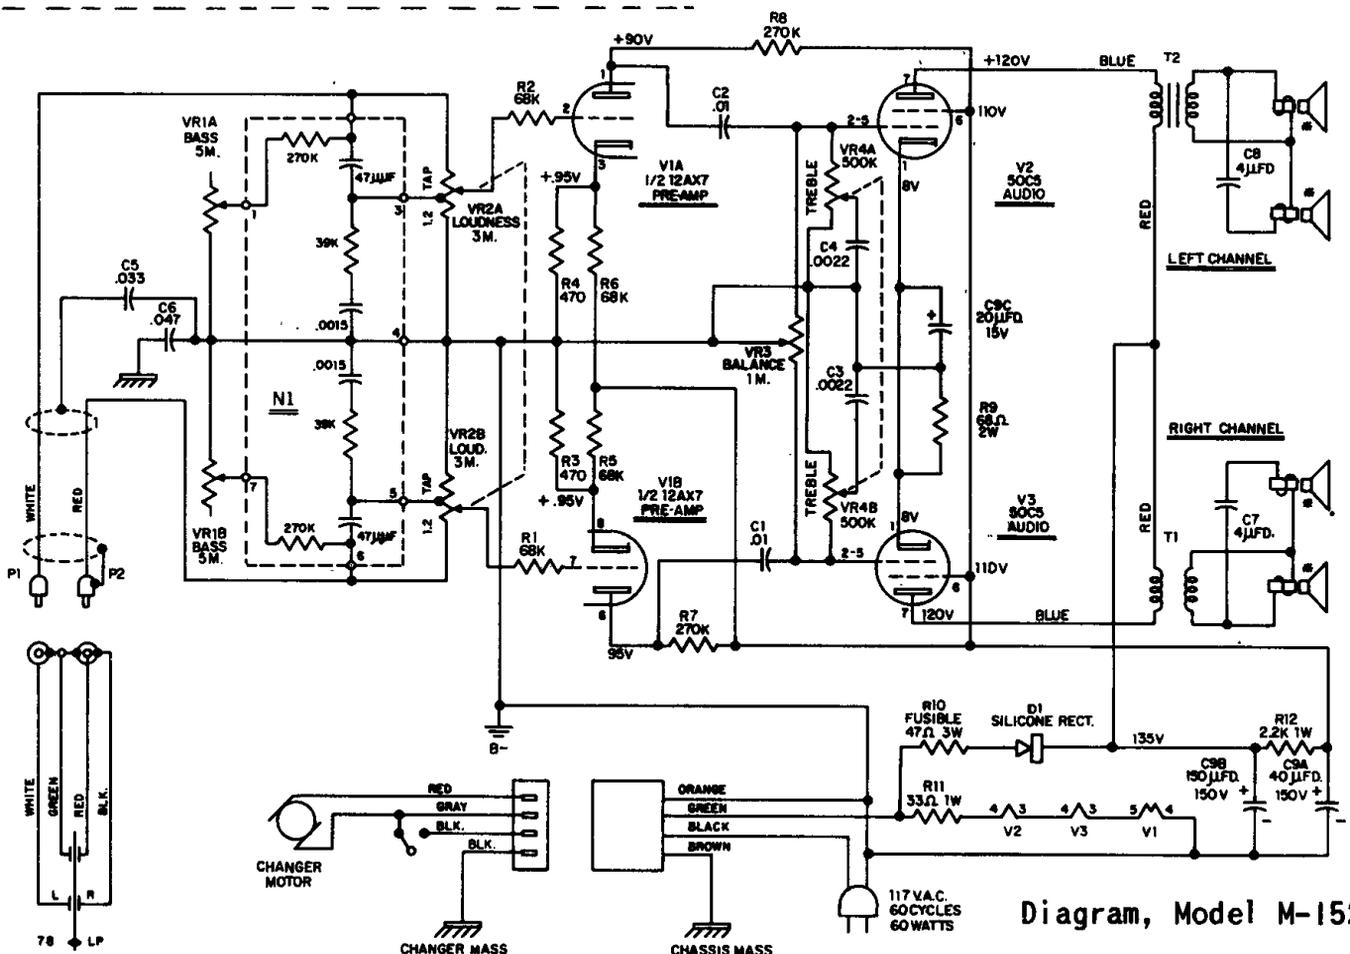

Diagram, Model M-1529