

PHILCO RADIO & TELEV. CORP.

PACKARD-PHILCO MODEL P-1530 TWO UNIT RECEIVER

NOTE: CONNECT THE ANTENNA TO HQ1 TERMINAL FOR USE WITH COWL ANTENNA
CONNECT THE ANTENNA TO HQ2 TERMINAL FOR USE WITH ROOF OR UNDERCAR ANTENNA

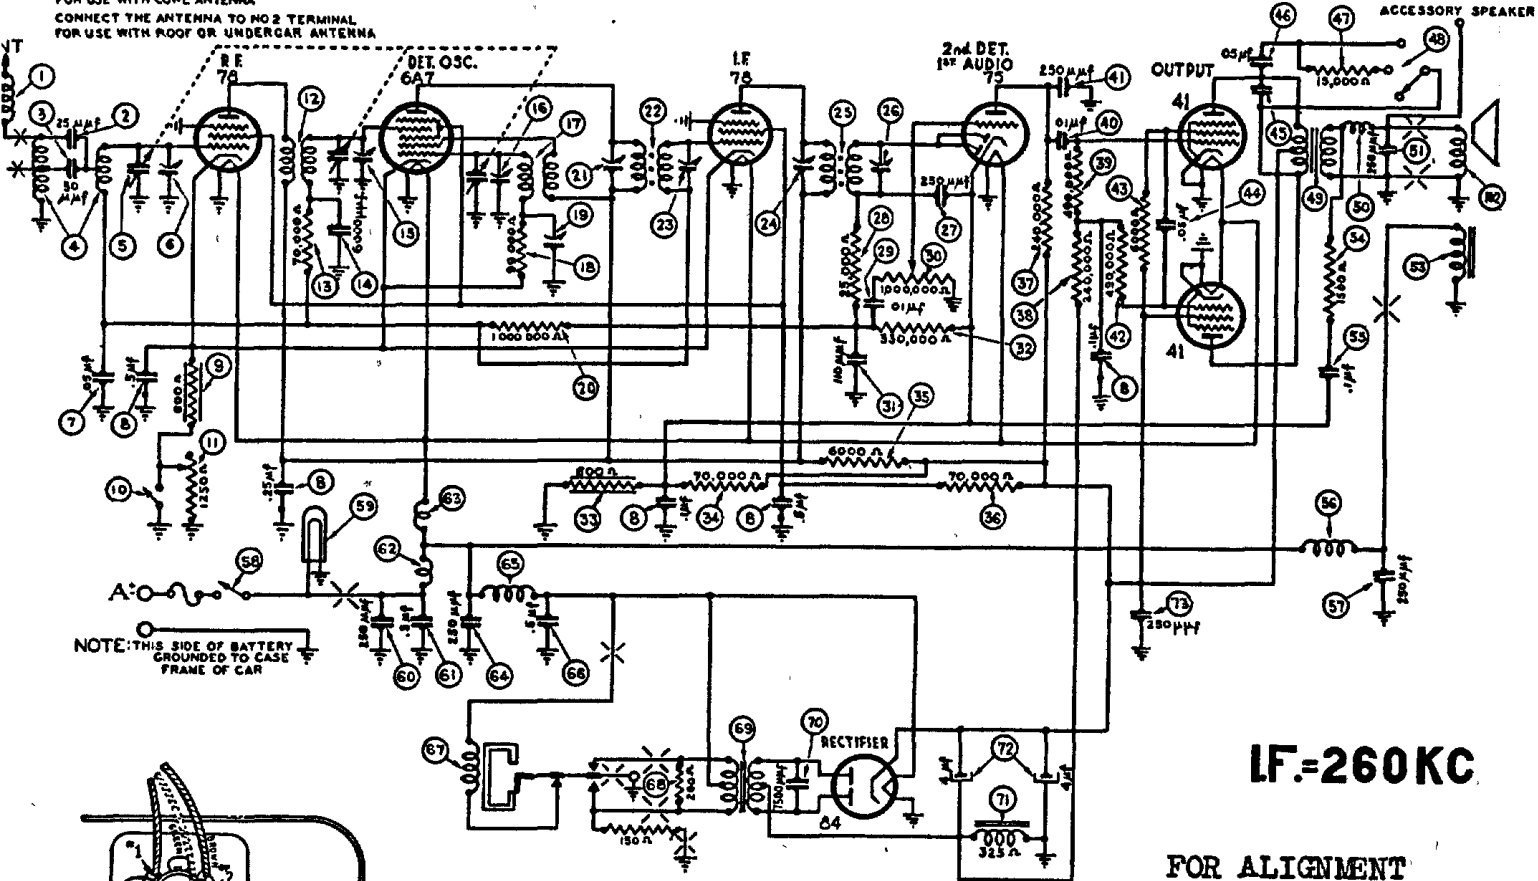


FIGURE 3

PARTS LIST — MODEL P-1530

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	32-2063	41	Condenser (250 mmfd.)	30-1032
2	Condenser (25 mmfd.)	30-1067	42	Resistor (490,000 ohms)	33-449344
3	Condenser (50 mmfd.)	30-1029	43	Resistor (6,000 ohms)	33-260344
4	Antenna Transformer	32-2833	44	Condenser (.05 mfd.)	30-4454
5	Tuning Condenser	31-2111	45	Condenser (4,000 mmfd.)	30-4185
6	First Padder (on Tun. Cond.)	30-4495	46	Condenser (.05 mfd.)	30-4495
7	Condenser (.05 mfd.)	30-4444	47	Resistor (15,000 ohms)	33-315344
8	Condenser (.1-1-.25-.5 mfd.)	30-4547	48	Tone Control Switch	42-1377
9	Resistor (600 ohms)	33-1212	49	Output Transformer	32-7909
10	Sensitivity Switch	42-1378	50	Choke	32-1374
11	Sensitivity Control	33-5248	51	Condenser (250 mmfd.)	30-1032
12	R. F. Transformer	32-2830	52	Cone & Voice Coil	36-3159
13	Resistor (70,000 ohms)	33-370344	53	Complete Speaker (A50)	36-1371
14	Condenser (6,000 mmfd.)	30-4445	54	Field Coil Assembly	36-3513
15	Second Padder (on Tun. Cond.)	30-4495	55	Resistor (1,500 ohms)	33-215344
16	Third Padder (on Tun. Cond.)	30-4495	56	Condenser (.1 mfd.)	30-4499
17	Oscillator Transformer	32-2828	57	"B" Choke	32-2812
18	Resistor (99,000 ohms)	33-399344	58	Condenser (250 mmfd.)	30-1032
19	Low Frequency Padder	31-8230	59	On & Off Switch	42-1368
20	Resistor (1,000,000 ohms)	33-510344	60	Pilot Lamp	34-2039
21	Padder (Pri. 1st I. F. Trans.)	30-4495	61	Condenser (250 mmfd.)	30-1032
22	First I. F. Transformer	32-2791	62	Condenser (.5 mfd.)	30-4474
23	Padder (Sec. 1st I. F. Trans.)	30-4495	63	"A" Choke	32-1644
24	Padder (Pri. 2nd I. F. Trans.)	30-4495	64	Filament Choke	32-2729
25	Second I. F. Transformer	32-2793	65	Condenser (250 mmfd.)	30-1032
26	Padder (Sec. 2nd I. F. Trans.)	30-4495	66	Vibrator Choke	32-2812
27	Condenser (250 mmfd.)	30-1032	67	Condenser (.5 mfd.)	30-4474
28	Resistor (25,000 ohms)	33-325344	68	Vibrator	41-3170-3
29	Condenser (.01 mfd.)	30-4479	69	Resistor (200 ohms)	33-120344
30	Volume Control	33-5245	70	Power Transformer	32-7911
31	Condenser (110 mmfd.)	30-1031	71	Condenser (7,500 mmfd.)	30-4420
32	Resistor (330,000 ohms)	33-433344	72	"B" Filter Choke	32-7910
33	Resistor (600 ohms)	33-1212	73	Filter Condenser (4-4 mfd.)	30-2257
34	Resistor (70,000 ohms)	33-370344	74	Condenser (250 mmfd.)	30-1032
35	Resistor (6,000 ohms)	33-260344	75	Receiver Housing	38-2056
36	Resistor (70,000 ohms)	33-370344	76	Pilot Lamp Assembly	38-8487
37	Resistor (240,000 ohms)	33-424344	77	Tuning Shaft	28-8779
38	Resistor (240,000 ohms)	33-424344	78	Volume Shaft	28-8780
39	Resistor (490,000 ohms)	33-449344	79	Tone Shaft	28-8781
40	Condenser (.01 mfd.)	30-4514	80	Local Distance Shaft	28-8782
			81	Accessory Speaker Socket	38-8803
			82	Speaker Socket	27-6030

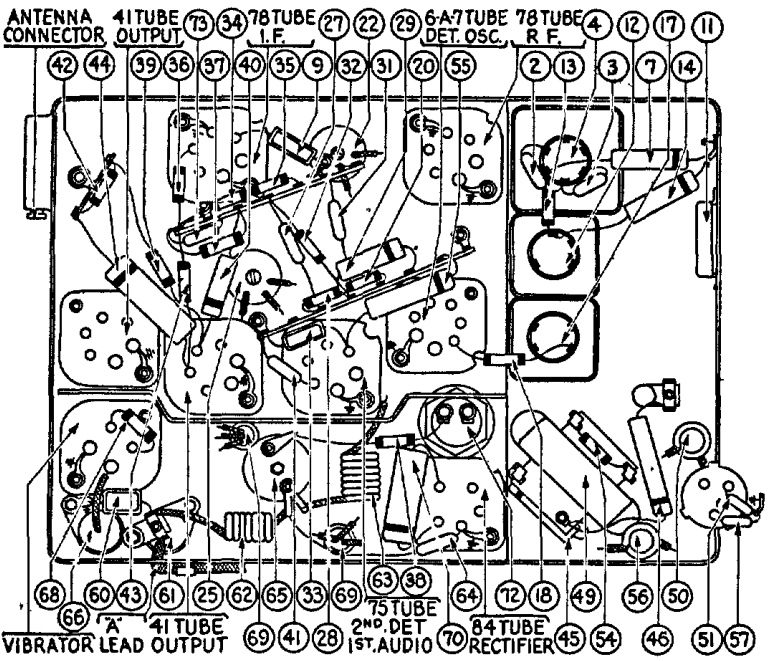


FIGURE 4

Description	Part No.	No.	Description	Part No.
Four Prong Socket	27-6044		Fuse	7227
Five Prong Socket	27-6035		Fuse Insulator	27-7727
Six Prong Socket	27-6036		Stud (Speaker Mtg.)	28-6088
Seven Prong Socket	27-6037		Nut (Speaker Mtg.)	W-55A
Interference Condenser	30-4007		Tee Bolt (Rec. Mtg.)	28-6268
Interference Condenser	30-4475		Nut (Rec. Mtg.)	W-518A
Distributor Resistor	4851		Switch & Lead Assembly	41-3917