

# PHILCO RADIO & TELEV. CORP.

## PACKARD — PHILCO MODEL P-1535, TWO UNIT RECEIVER

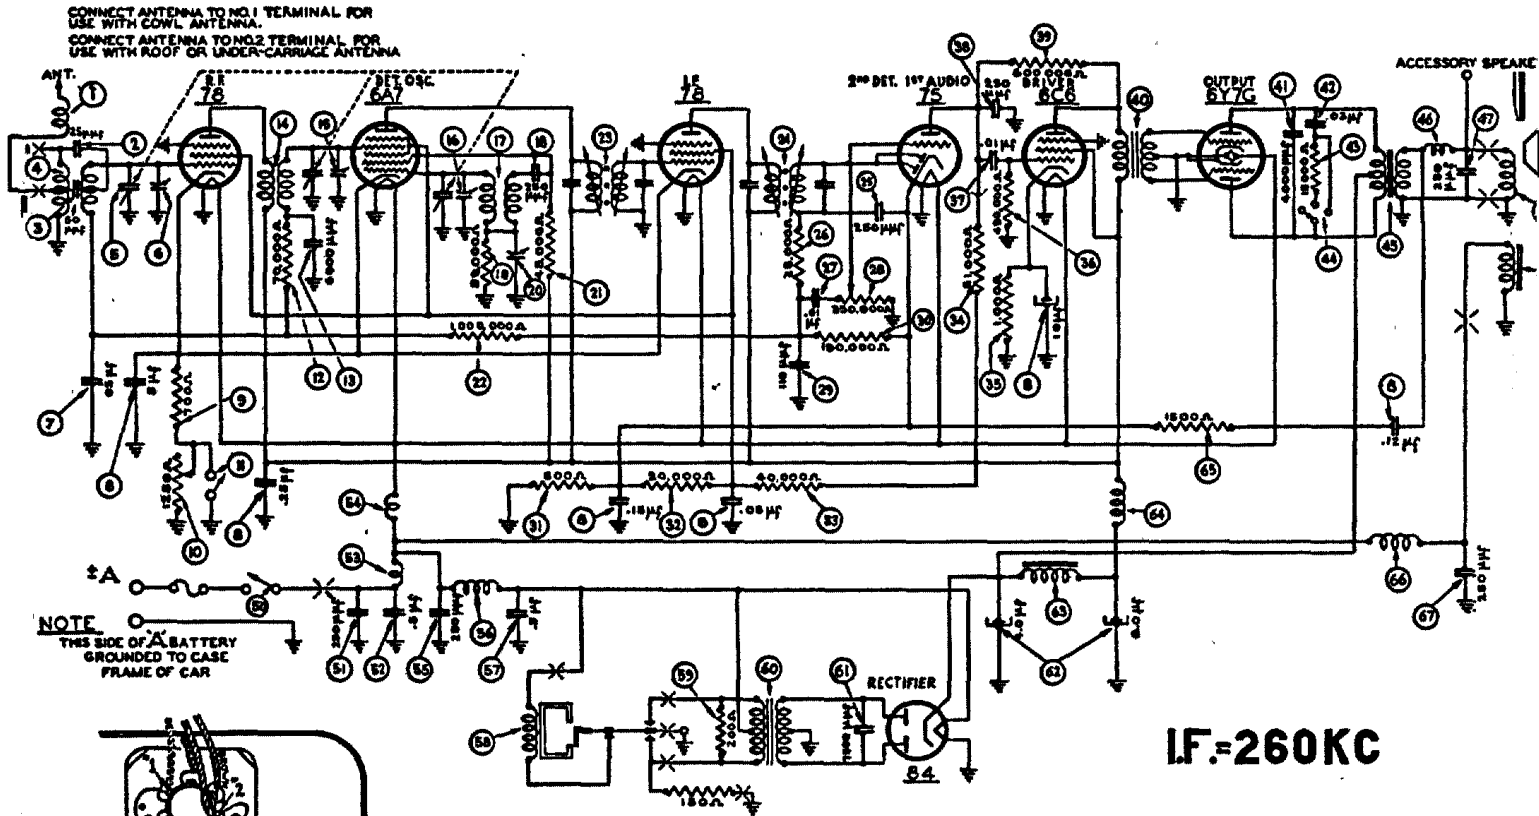


FIGURE 1

OCTOBER, 1937

### PARTS LIST — MODEL P-1535

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	32-2063	41	Input Transformer	32-7779
2	Condenser (25 mmfd.)	30-1087	42	Condenser (4,000 mmfd.)	30-4185
3	Condenser (50 mmfd.)	30-1029	43	Condenser (.03 mfd.)	30-4447
4	Antenna Transformer	32-2833	44	Resistor (15,000 ohms)	33-315344
5	Tuning Condenser	31-2111	45	Tone Control Switch	42-1377
6	First Padder (on Tun. Cond.)		46	Output Transformer	32-7778
7	Condenser (.05 mfd.)	30-4444	47	Choke	32-1374
8	Condenser (.05-12-15-25-.5-10 mfd.)	30-4545	48	Condenser (250 mmfd.)	30-1032
9	Resistor (700 ohms)	33-1220	49	Cone & Voice Coil	36-3159
10	Sensitivity Control		50	Complete Speaker (A49)	36-1370
11	(1,250 ohms)	33-5248	51	Field Coil Assembly	36-3513
12	Sensitivity Control Switch	42-1378	52	On-Off Switch	42-1374
13	Resistor (70,000 ohms)	33-370344	53	Condenser (250 mmfd.)	30-1032
14	Condenser (6,000 mmfd.)	30-4467	54	Condenser (.5 mfd.)	30-4474
15	R. F. Transformer	32-2830	55	"A" Choke	32-1374
16	Second Padder (on Tun. Cond.)		56	Filament Choke	32-1604
17	Third Padder (on Tun. Cond.)		57	Condenser (250 mmfd.)	30-1032
18	Oscillator Transformer	32-2829	58	Vibrator Choke	32-2537
19	Condenser (250 mmfd.)	30-1032	59	Condenser (.5 mfd.)	30-4474
20	Resistor (99,000 ohms)	33-399344	60	Vibrator	41-3170-3
21	Low Frequency Padder	31-6230	61	Resistor (200 ohms)	33-120344
22	Resistor (45,000 ohms)	33-345344	62	Power Transformer	32-7720
23	Resistor (1,000,000 ohms)	33-510344	63	Condenser (7,500 mmfd.)	30-4420
24	First I. F. Transformer	32-2554	64	Filter Condenser (4-8 mfd.)	30-2167
25	Second I. F. Transformer	32-2556	65	Filter Choke	32-7811
26	Condenser (250 mmfd.)	30-1032	66	"B" Choke	32-1281
27	Resistor (25,000 ohms)	33-525344	67	Resistor (1,500 ohms)	33-215341
28	Condenser (.01 mfd.)	30-4479	68	Choke	32-2657
29	Volume Control		69	Condenser (250 mmfd.)	30-1032
30	(350,000 ohms)	33-5246	70	Receiver Housing	38-2050
31	Condenser (110 mmfd.)	30-1031	71	Tuning Shaft	28-8762
32	Resistor (180,000 ohms)	33-418344	72	Volume Shaft	28-8763
33	Resistor (600 ohms)	33-1212	73	Tone Shaft	28-8764
34	Resistor (20,000 ohms)	33-320344	74	Local Distance Shaft	28-8765
35	Resistor (40,000 ohms)	33-340444	75	Tuning and Volume Knob	27-4687
36	Resistor (51,000 ohms)	33-351344	76	Switch Knobs	28-7255
37	Resistor (1,000 ohms)	33-210344	77	Accessory Speaker Socket	38-8803
38	Resistor (490,000 ohms)	33-449344	78	Speaker Socket	32-6030
39	Condenser (.01 mfd.)	30-4501	79	Four Prong Socket	27-8044
40	Condenser (250 mmfd.)	30-1032	80	Five Prong Socket	27-8035
41	Resistor (600,000 ohms)	33-459344	81	Six Prong Socket	27-8036
42			82	Seven Prong Socket	27-8037

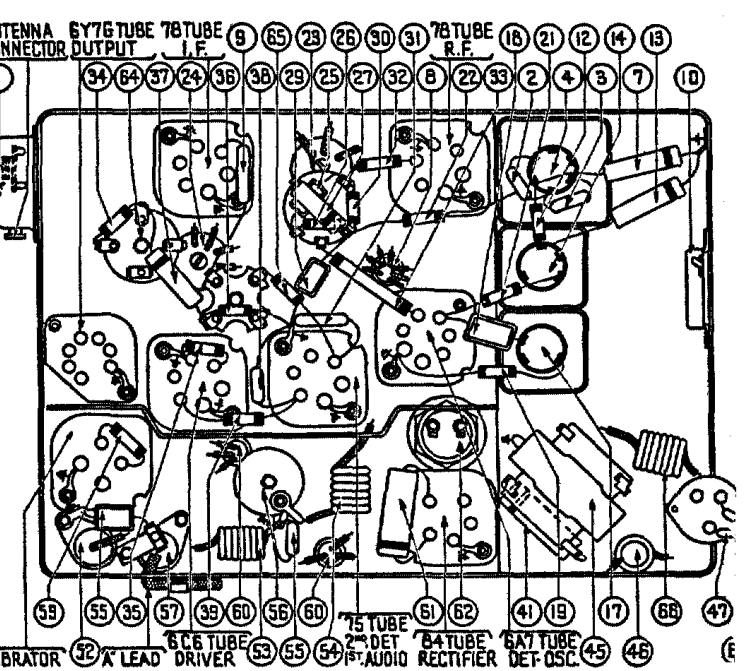


FIGURE 2

Description	Part No.	Description	Part No.
Eight Prong Socket	27-8058	Tee Bolt (Rec. Mtg.)	28-6258
Interference Condenser	30-4007	Nut (Rec. Mtg.)	W-518
Interference Condenser	30-4475	Mtg. Bracket and Stud	
Inductive Suppressor	32-2250	(Speaker Mtg.)	28-1546
Fuse	7227	Nut (Speaker Mtg.)	W-55
Fuse Insulator	27-7729	Switch & Lead Assembly	41-3217